

Model	Year
50,007	
Brava	
Bravo 07	
Bravo 07	2007
Cinquecento	
Croma	
Croma 05	
Doblo' 03	
Doblo' 03	2002-2008
Ducato 03	
Ducato 06	
Ducato 98	
Fiorino 08	
Idea	
Marea	1998-2002
Multipla	
Multipla	2002-2008
Multipla 02	
Palio Restyling	1997-2003
Panda 03	
Punto 03	
Punto 05 (Grande Punto)	
Punto 99	
Punto Classic	
Ritmo 07	
Scudo	
Scudo 07	
Sedici	
Siena	
Stilo	2002-2008
Ulysse	
Ulysse 02	
Ulysse 05	

System	ECU Info.	Read Code	Clear Code	Data List	Active Test	Special Func.
4WD ELECTRONICS	√	√	√	√		
ABS	√	√	√	√	√	
ABS + TRACT. CONTROL	√	√	√	√	√	√
AIR CONDITIONING	√	√	√	√	√	√
AIRBAG	√	√	√	√	√	√
CHASSIS NETWORK	√	√	√	√	√	√
CLIMA	√	√	√	√	√	
DASH LAMPS	√	√	√	√	√	
DASHBOARD	√	√	√	√	√	√
DIESEL ADDITION	√	√	√	√	√	√
DRIVER SEAT CONTROL	√	√	√	√	√	
DRIVER SIDE DOOR		√	√	√	√	
ELECTRIC STEERING	√	√	√	√	√	√
ENGINE MANAGEMENT	√	√	√	√	√	√
ENGINE MANAGEMENT 2	√	√	√	√	√	√
FAP OIL PARAMETERS		√	√	√		√
FUEL ADDITIVE	√	√	√	√	√	√
KEY ENCODE	√	√	√	√		√
PARKING HELP	√	√	√	√	√	
PASS. SIDE DOOR		√	√	√	√	
PASSENGER SEAT REG.	√	√	√	√	√	
RADIO / CD	√	√	√	√	√	
REMOTE CONTROL ENCODE		√	√		√	

SERVICE LIGHT RESET	√	√	√	√	√	
SWITCHLIGHT MODULE	√	√	√	√	√	
Service Light Reset		√	√			√
VISUAL./TELEMATICS	√	√	√	√	√	√

System	Special Function
ABS + TRACT. CONTROL	Front LH Wheel bleeder
ABS + TRACT. CONTROL	Front RH Wheel bleeder
ABS + TRACT. CONTROL	Longitud. Acceler. Sensor
ABS + TRACT. CONTROL	Longitudinalaccel. sensor calibration
ABS + TRACT. CONTROL	Rear LH Wheel bleeder
ABS + TRACT. CONTROL	Rear RH Wheel bleeder
ABS + TRACT. CONTROL	Self Test
ABS + TRACT. CONTROL	Steering angle calibration
AIR CONDITIONING	Air outlet learning
AIRBAG	Airbag ECU Disable
AIRBAG	Airbag ECU Reset
AIRBAG	ECU ID Data
AIRBAG	ECU unlock
CHASSIS NETWORK	Audio system test
CHASSIS NETWORK	Convergence system re-start
CHASSIS NETWORK	Country mode change
CHASSIS NETWORK	EMERGENCY flashing
CHASSIS NETWORK	Key programming
CHASSIS NETWORK	Service Reset
CHASSIS NETWORK	Supply mode change
DASHBOARD	Headlamp position corrector: position 0
DASHBOARD	Headlamp position corrector: position 1
DASHBOARD	Headlamp position corrector: position 2
DASHBOARD	Headlamp position corrector: position 3
DASHBOARD	Light setting corr.
DASHBOARD	Next Service Km's reset
DASHBOARD	Oil service interval
DASHBOARD	Safety belt alarm disabling
DASHBOARD	Safety belt alarm enabling
DASHBOARD	Service Reset
DASHBOARD	Suspension calibration
DASHBOARD	Trip Counter Reset
DASHBOARD	Trip Counter reset
DIESEL ADDITION	DP√42 FAP temp. probe found
DIESEL ADDITION	DP√42 FAP temp. probe not found
DIESEL ADDITION	DP√42 additive type conig.
DIESEL ADDITION	ECU additive substitute
DIESEL ADDITION	EOLYS176 FAP temp. probe found
DIESEL ADDITION	EOLYS176 FAP temp. probe not found
DIESEL ADDITION	EOLYS176 additive type conig.
DIESEL ADDITION	Zero Adj.val. f. change/reg. FAP
ELECTRIC STEERING	Steering angle calibration
ENGINE MANAGEMENT	Cyl. 1 injector code entry
ENGINE MANAGEMENT	Cyl. 2 injector code entry
ENGINE MANAGEMENT	Cyl. 3 injector code entry
ENGINE MANAGEMENT	Cyl. 4 injector code entry
ENGINE MANAGEMENT	Cyl. 5 injector code entry
ENGINE MANAGEMENT	Differential pressure sensor
ENGINE MANAGEMENT	Differential pressure sensor replac.
ENGINE MANAGEMENT	Engine Unlock
ENGINE MANAGEMENT	Impulse Ring zeroing
ENGINE MANAGEMENT	Impulse ring adaptation
ENGINE MANAGEMENT	Oil replacement -only with FAP filter-
ENGINE MANAGEMENT	Particle filter regeneration
ENGINE MANAGEMENT	Precat. replac. -only with FAP filter-
ENGINE MANAGEMENT	Rail pressure sensor
ENGINE MANAGEMENT	Reset knock counter

ENGINE MANAGEMENT	Reset overboost counter
ENGINE MANAGEMENT	Self-adaptation reset
ENGINE MANAGEMENT	Self-learnt functions zeroing
ENGINE MANAGEMENT	Throttle position self-learning
ENGINE MANAGEMENT	Throttle potentiometer adjustment
ENGINE MANAGEMENT 2	Impulse ring adaptation
ENGINE MANAGEMENT 2	Self-adaptation reset
ENGINE MANAGEMENT 2	Throttle potentiometer adjustment
FAP OIL PARAMETERS	Oil replacement -only with FAP filter-
FUEL ADDITIVE	Clean or replace particle filter
FUEL ADDITIVE	Replace or fill additive tank
KEY ENCODE	Key programming
SERVICE LIGHT RESET	Service Reset
Service Light Reset	Service Reset
VISUAL./TELEMATICS	Audio system test
VISUAL./TELEMATICS	Convergence system re-start
VISUAL./TELEMATICS	Roof lamp learning zeroing