

#	Brand	Area	Model	Year	Type	System	Fuction
1	Mazda	China	Mazda 2	2002-2008		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key
2	Mazda	China	Mazda 2	2008-2014		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
3	Mazda	China	Mazda 2	2008-2014		Smart key system	1. Lose all the keys 2. Add key 3. All smart keys are lost 4. Add smart key 5. Number of keys 6. Turn on the ignition switch
4	Mazda	China	Mazda 3		Type 1	Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
5	Mazda	China	Mazda 3		Type 2	Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
6	Mazda	China	Mazda 5		Type 1	Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
7	Mazda	China	Mazda 5		Type 2	Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
8	Mazda	China	Mazda 6			Smart key system	1. Number of keys 2. Lose all the keys 3. Add key 4. Number of smart keys 5. Add smart key 6. Clear the smart key
9	Mazda	China	Mazda 6			Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key
10	Mazda	China	Mazda 6(Raptor)	2008-		Smart key system	1. Lose all the keys 2. Add key 3. All smart keys are lost 4. Add smart key 5. Number of keys 6. Turn on the ignition switch
11	Mazda	China	Mazda 6(Raptor)	2008-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key

12	Mazda	China	Mazda 8			Smart key system	1. Add the key 2. Lose all the keys 3. Add smart key 4. Clear the smart key 5. Number of smart keys
13	Mazda	China	Mazda 8			Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key
14	Mazda	China	Mazda CX-7	2004-2009		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
15	Mazda	China	Mazda CX-7	2009-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
16	Mazda	China	Mazda CX-7	-2016		Smart key system	1. Add the key 2. Lose all the keys 3. Add smart key 4. Clear the smart key 5. Number of smart keys
17	Mazda	China	Mazda CX-9	2004-2009		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
18	Mazda	China	Mazda CX-9	2009-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
19	Mazda	Africa	BT-50	2011-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Clear the key
20	Mazda	Africa	Mazda 2	2002-2008		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key
21	Mazda	Africa	Mazda 2	2008-2014		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
22	Mazda	Africa	Mazda 2	2008-2014		Smart key system	1. Lose all the keys 2. Add key 3. All smart keys are lost 4. Add smart key 5. Number of keys 6. Turn on the ignition switch
23	Mazda	Africa	Mazda 3	2004-2008		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft

24	Mazda	Africa	Mazda 3	2009-2013		Immobiliser	1. Lose all the keys 2. Add key 3. All smart keys are lost 4. Add smart key 5. Number of keys 6. Turn on the ignition switch
25	Mazda	Africa	Mazda 3	2004-2008		Smart key system	1. Number of keys 2. Lose all the keys 3. Add key 4. Number of smart keys 5. Add smart key 6. Clear the smart key
26	Mazda	Africa	Mazda 3	2009-2013		Smart key system	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
27	Mazda	Africa	Mazda 5	-2011		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
28	Mazda	Africa	Mazda 5	2012-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
29	Mazda	Africa	Mazda 6	2002-2008		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key
30	Mazda	Africa	Mazda 6	2008-2012		Smart key system	1. Lose all the keys 2. Add key 3. All smart keys are lost 4. Add smart key 5. Number of keys 6. Turn on the ignition switch
31	Mazda	Africa	Mazda CX-7	2004-2009		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
32	Mazda	Africa	Mazda CX-7	2009-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
33	Mazda	Africa	Mazda CX-7	-2016		Smart key system	1. Add the key 2. Lose all the keys 3. Add smart key 4. Clear the smart key 5. Number of smart keys
34	Mazda	Africa	Mazda CX-9	2004-2009		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft

35	Mazda	Africa	Mazda CX-9	2009-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
36	Mazda	Africa	Demio	-2001		Immobiliser	1. Add the key 2. Lose all the keys 3. Add smart key 4. Clear the smart key
37	Mazda	Africa	Demio	2002-2007		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
38	Mazda	Africa	Demio	2008-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
39	Mazda	Africa	Demio	2008-		Smart key system	1. Lose all the keys 2. Add key 3. All smart keys are lost 4. Add smart key 5. Number of keys 6. Turn on the ignition switch
40	Mazda	Africa	Mx5	2005-2009		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
41	Mazda	Africa	Mx5	2009-2015		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
42	Mazda	Africa	Premacy	2005-		Smart key system	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
43	Mazda	Africa	Premacy	2005-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
44	Mazda	Africa	RX-8	2004-2009		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
45	Mazda	Africa	RX-8	2009-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft

46	Mazda	Africa	RX-8	2009-		Smart key system	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
47	Mazda	Africa	Premacy	2005-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key
48	Mazda	Africa	Premacy	2005-		Smart key system	1. Lose all the keys 2. Add key 3. All smart keys are lost 4. Add smart key 5. Number of keys 6. Turn on the ignition switch
49	Mazda	Asia	BT-50	2011-		Immobiliser	1. Add the key 2. Lose all the keys 3. Add smart key 4. Clear the smart key
50	Mazda	Asia	Mazda 121			Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
51	Mazda	Asia	Mazda 2	2002-2008		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key
52	Mazda	Asia	Mazda 2	2008-2014		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
53	Mazda	Asia	Mazda 2	2008-2014		Smart key system	1. Lose all the keys 2. Add key 3. All smart keys are lost 4. Add smart key 5. Number of keys 6. Turn on the ignition switch
54	Mazda	Asia	Mazda 3	2004-2008		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
55	Mazda	Asia	Mazda 3	2009-2013		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
56	Mazda	Asia	Mazda 3	2004-2008		Smart key system	1. Number of keys 2. Lose all the keys 3. Add key 4. Number of smart keys 5. Add smart key 6. Clear the smart key

57	Mazda	Asia	Mazda 3	2009-2013		Smart key system	1. Lose all the keys 2. Add key 3. All smart keys are lost 4. Add smart key 5. Number of keys 6. Turn on the ignition switch
58	Mazda	Asia	Mazda 5	-2011		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
59	Mazda	Asia	Mazda 5	2012-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
60	Mazda	Asia	Mazda 6	2002-2008		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key
61	Mazda	Asia	Mazda 6	2008-2012		Smart key system	1. Lose all the keys 2. Add key 3. All smart keys are lost 4. Add smart key 5. Number of keys 6. Turn on the ignition switch
62	Mazda	Asia	Mazda CX-7	2004-2009		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key
63	Mazda	Asia	Mazda CX-7	2009-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
64	Mazda	Asia	Mazda CX-7	-2016		Smart key system	1. Add the key 2. Lose all the keys 3. Add smart key 4. Clear the smart key 5. Number of smart keys
65	Mazda	Asia	Mazda CX-9	2004-2009		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
66	Mazda	Asia	Mazda CX-9	2009-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
67	Mazda	Asia	Demio	-2001		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft

68	Mazda	Asia	Demio	2002-2007		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
69	Mazda	Asia	Demio	2008-2013		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
70	Mazda	Asia	Demio	2008-2013		Smart key system	1. Lose all the keys 2. Add key 3. All smart keys are lost 4. Add smart key 5. Number of keys 6. Turn on the ignition switch
71	Mazda	Asia	Mx5	2005-2009		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
72	Mazda	Asia	Mx5	2009-2015		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
73	Mazda	Asia	Premacy	2005-		Smart key system	1. Lose all the keys 2. Add key 3. All smart keys are lost 4. Add smart key 5. Number of keys 6. Turn on the ignition switch
74	Mazda	Asia	Premacy	2005-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
75	Mazda	Asia	RX-8	2004-2009		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
76	Mazda	Asia	RX-8	2009-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
77	Mazda	Asia	RX-8	2009-		Smart key system	1. Number of keys 2. Lose all the keys 3. Add key
78	Mazda	Australia	BT-50	2011-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Clear the key

79	Mazda	Australia	Mazda 121			Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key
80	Mazda	Australia	Mazda 2	2002-2008		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key
81	Mazda	Australia	Mazda 2	2008-2014		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
82	Mazda	Australia	Mazda 2	2008-2014		Smart key system	1. Lose all the keys 2. Add key 3. All smart keys are lost 4. Add smart key 5. Number of keys 6. Turn on the ignition switch
83	Mazda	Australia	Mazda 3	2004-2008		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
84	Mazda	Australia	Mazda 3	2009-2013		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
85	Mazda	Australia	Mazda 3	2004-2008		Smart key system	1. Number of keys 2. Lose all the keys 3. Add key 4. Number of smart keys 5. Add smart key 6. Clear the smart key
86	Mazda	Australia	Mazda 3	2009-2013		Smart key system	1. Lose all the keys 2. Add key 3. All smart keys are lost 4. Add smart key 5. Number of keys 6. Turn on the ignition switch
87	Mazda	Australia	Mazda 5	-2011		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
88	Mazda	Australia	Mazda 5	2012-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
89	Mazda	Australia	Mazda 6	2002-2008		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key
90	Mazda	Australia	Mazda 6	2008-2012		Smart key system	1. Lose all the keys 2. Add key 3. All smart keys are lost 4. Add smart key 5. Number of keys 6. Turn on the ignition switch

91	Mazda	Australia	Mazda CX-7	2004-2009		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
92	Mazda	Australia	Mazda CX-7	2009-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
93	Mazda	Australia	Mazda CX-7	-2016		Smart key system	1. Add the key 2. Lose all the keys 3. Add smart key 4. Clear the smart key 5. Number of smart keys
94	Mazda	Australia	Mazda CX-9	2004-2009		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
95	Mazda	Australia	Mazda CX-9	2009-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 5. Synchronous engine and anti-theft
96	Mazda	Australia	Demio	-2001		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 6. Synchronous engine and anti-theft
97	Mazda	Australia	Demio	2002-2007		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 7. Synchronous engine and anti-theft
98	Mazda	Australia	Demio	2008-2013		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 8. Synchronous engine and anti-theft
99	Mazda	Australia	Demio	2008-2013		Smart key system	1. Lose all the keys 2. Add key 3. All smart keys are lost 4. Add smart key 5. Number of keys 6. Turn on the ignition switch
100	Mazda	Australia	Mx5	2005-2009		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
101	Mazda	Australia	Mx5	2009-2015		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft

102	Mazda	Australia	Premacy	2005-		Smart key system	1. Lose all the keys 2. Add key 3. All smart keys are lost 4. Add smart key 5. Number of keys 6. Turn on the ignition switch
103	Mazda	Australia	Premacy	2005-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
104	Mazda	Australia	RX-8	2004-2009		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
105	Mazda	Australia	RX-8	2009-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
106	Mazda	Australia	RX-8	2009-		Smart key system	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
107	Mazda	Europe	BT-50	2011-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Clear the key
108	Mazda	Europe	Mazda 121			Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
109	Mazda	Europe	Mazda 2	2002-2008		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key
110	Mazda	Europe	Mazda 2	2008-2014		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
111	Mazda	Europe	Mazda 2	2008-2014		Smart key system	1. Lose all the keys 2. Add key 3. All smart keys are lost 4. Add smart key 5. Number of keys 6. Turn on the ignition switch
112	Mazda	Europe	Mazda 3	2004-2008		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
113	Mazda	Europe	Mazda 3	2009-2013		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft

114	Mazda	Europe	Mazda 3	2004-2008		Smart key system	1. Number of keys 2. Lose all the keys 3. Add key 4. Number of smart keys 5. Add smart key 6. Clear the smart key
115	Mazda	Europe	Mazda 3	2009-2013		Smart key system	1. Lose all the keys 2. Add key 3. All smart keys are lost 4. Add smart key 5. Number of keys 6. Turn on the ignition switch
116	Mazda	Europe	Mazda 5	-2011		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
117	Mazda	Europe	Mazda 5	2012-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
118	Mazda	Europe	Mazda 6	2008-2012		Smart key system	1. Lose all the keys 2. Add key 3. All smart keys are lost 4. Add smart key 5. Number of keys 6. Turn on the ignition switch
119	Mazda	Europe	Mazda 6	2002-2008		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key
120	Mazda	Europe	Mazda CX-7	2004-2009		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
121	Mazda	Europe	Mazda CX-7	2009-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
122	Mazda	Europe	Mazda CX-7	-2016		Smart key system	1. Add the key 2. Lose all the keys 3. Add smart key 4. Clear the smart key 5. Number of smart keys
123	Mazda	Europe	Mazda CX-9	2004-2009		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
124	Mazda	Europe	Mazda CX-9	2009-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
125	Mazda	Europe	Demio	-2001		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft

126	Mazda	Europe	Demio	2002-2007		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
127	Mazda	Europe	Demio	2008-2013		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
128	Mazda	Europe	Demio	2008-2013		Smart key system	1. Lose all the keys 2. Add key 3. All smart keys are lost 4. Add smart key 5. Number of keys 6. Turn on the ignition switch
129	Mazda	Europe	Mx5	2005-2009		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
130	Mazda	Europe	Mx5	2009-2015		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
131	Mazda	Europe	Premacy	2005-		Smart key system	1. Lose all the keys 2. Add key 3. All smart keys are lost 4. Add smart key 5. Number of keys 6. Turn on the ignition switch
132	Mazda	Europe	Premacy	2005-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
133	Mazda	Europe	RX-8	2004-2009		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key
134	Mazda	Europe	RX-8	2009-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
135	Mazda	Europe	RX-8	2009-		Smart key system	1. Number of keys 2. Lose all the keys 3. Add key
136	Mazda	North America	B series	-2007		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
137	Mazda	North America	B series	2007-2011		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft

138	Mazda	North America	Mazda 3	2004-2005		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key
139	Mazda	North America	Mazda 3	2006-2009		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
140	Mazda	North America	Mazda 3	2010-2013		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
141	Mazda	North America	Mazda 5	2006-2014		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
142	Mazda	North America	Mazda 5	2015-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
143	Mazda	North America	Mazda 6	2003-2008	Type 1	Smart key system	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
144	Mazda	North America	Mazda 6	2003-2008	Type 1	Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key
145	Mazda	North America	Mazda 6	2008-	Type 2	Smart key system	1. Number of keys 2. Lose all the keys 3. Add key 4. Number of smart keys 5. Add smart key 6. Clear the smart key
146	Mazda	North America	Mazda 6	2008-	Type 2	Immobiliser	1. Lose all the keys 2. Add key 3. All smart keys are lost 4. Add smart key 5. Number of keys 6. Turn on the ignition switch
147	Mazda	North America	Mazda CX-7	2004-2007		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
148	Mazda	North America	Mazda CX-7	2007-2014		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
149	Mazda	North America	Mazda CX-9	2004-2006		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft

150	Mazda	North America	Mazda CX-9	2007-2014		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
151	Mazda	North America	Mx5	2004-2005		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
152	Mazda	North America	Mx5	2005-2013		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
153	Mazda	North America	RX-8	2004-2005		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
154	Mazda	North America	Tribute	2001-2004		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
155	Mazda	North America	Tribute	2005-2008		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key
156	Mazda	North America	Tribute	2009-2011		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key
157	Mazda	South America	BT-50	2011-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Clear the key
158	Mazda	South America	Mazda 121			Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key
159	Mazda	South America	Mazda 2	2002-2008		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key
160	Mazda	South America	Mazda 2	2008-2014		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
161	Mazda	South America	Mazda 3	2004-2008		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Number of smart keys 5. Add smart key 6. Clear the smart key
162	Mazda	South America	Mazda 3	2009-2013		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft

163	Mazda	South America	Mazda 3	2004-2008		Smart key system	1. Number of keys 2. Lose all the keys 3. Add key 5. Synchronous engine and anti-theft
164	Mazda	South America	Mazda 3	2009-2013		Smart key system	1. Lose all the keys 2. Add key 3. All smart keys are lost 4. Add smart key 5. Number of keys 6. Turn on the ignition switch
165	Mazda	South America	Mazda 5	-2011		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
166	Mazda	South America	Mazda 5	2012-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
167	Mazda	South America	Mazda 6	2002-2008		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key
168	Mazda	South America	Mazda 6	2008-2012		Smart key system	1. Lose all the keys 2. Add key 3. All smart keys are lost 4. Add smart key 5. Number of keys 6. Turn on the ignition switch
169	Mazda	South America	Mazda CX-7	2004-2009		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
170	Mazda	South America	Mazda CX-7	2009-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
171	Mazda	South America	Mazda CX-7	-2016		Smart key system	1. Add the key 2. Lose all the keys 3. Add smart key 4. Clear the smart key 5. Number of smart keys
172	Mazda	South America	Mazda CX-9	2004-2009		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
173	Mazda	South America	Mazda CX-9	2009-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
174	Mazda	South America	Demio	-2001		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key

175	Mazda	South America	Demio	2002-2007		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key
176	Mazda	South America	Demio	2008-2013		Immobiliser	1. Lose all the keys 2. Add key 3. All smart keys are lost 4. Add smart key 5. Number of keys 6. Turn on the ignition switch
177	Mazda	South America	Demio	2008-2013		Smart key system	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
178	Mazda	South America	Mx5	2005-2009		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
179	Mazda	South America	Mx5	2009-2015		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
180	Mazda	South America	Premacy	2005-		Smart key system	1. Lose all the keys 2. Add key 3. All smart keys are lost 4. Add smart key 5. Number of keys 6. Turn on the ignition switch
181	Mazda	South America	Premacy	2005-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
182	Mazda	South America	RX-8	2004-2009		Immobiliser	1. Add the key 2. Lose all the keys 3. Number of keys
183	Mazda	South America	RX-8	2009-		Immobiliser	1. Number of keys 2. Lose all the keys 3. Add key 4. Synchronous engine and anti-theft
184	Mazda	South America	RX-8	2009-		With intelligence	1. Add the key 2. Lose all the keys 3. Number of keys

