

| | |
|--------|---|
| Notes: | |
| √ | Functions is fully supported and already existed in former software version. |
| ※ | Functions is fully supported and newly added in current software version. |
| Number | Index number of the special function , you can find the name from the special function table. |
| | Functions is not supported. |

| Vehicle | System | Ecu Info. | Read Codes | Erase Codes | Live data | Freez Frame | Active Test | Special Function |
|-------------|-----------------------------|-----------|------------|-------------|-----------|-------------|-------------|--|
| ALASKAN | Injection | √ | √ | √ | √ | √ | √ | 0580, 0482, 0559, 0438, 0558, 0836, 0417, 0838, 0837, 0839, 0551, 0771, 0513, 0450, 0570, 0580, 0505, 0428, 0562, 0561, 0541, 0563, 0544, 0565, 0589, 0438 |
| ALASKAN | Anti-lock Brake System(ABS) | √ | √ | √ | √ | | | 0417 |
| ALASKAN | Instrument Panel | √ | √ | √ | √ | | | 0417 |
| ALASKAN | UCH | √ | √ | √ | √ | √ | | 0417 |
| ALASKAN | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | √ | | 0422, 0423 |
| ALASKAN | Front Radar | √ | √ | √ | √ | | | 0417 |
| ALASKAN | AirConditioning(AC) | √ | √ | √ | √ | | | 0417 |
| ALASKAN | Automatic Gearbox(AT) | √ | √ | √ | √ | | | 0417 |
| ALASKAN | Communications Unit | √ | √ | √ | √ | | | 0420 |
| ALASKAN | UPC | √ | √ | √ | √ | | | 0417 |
| ALASKAN | Laser Radar | √ | √ | √ | √ | √ | | 0421 |
| ALASKAN | Differential Lock | √ | √ | √ | √ | | | 0420 |
| ALASKAN | Around View Monitoring | √ | √ | √ | √ | | | 0417 |
| ALASKAN | 4 Wheels Drive(4WD) | √ | √ | √ | √ | | | 0416 |
| ALASKAN | Parking PROX CAN | √ | √ | √ | √ | | | 0419 |
| ALASKAN | PTC Heater Control Unit | √ | √ | √ | √ | | | 0417 |
| ALASKAN | Urea Dosing Control Module | √ | √ | √ | √ | √ | √ | 0424, 0432, 0447, 0461, 0466, 0474, 0607, 0613, 0623, 0632, 0641, 0650, 0662, 0669, 0675 |
| ALASKAN | Energy Control Unit | √ | √ | √ | √ | | | 0418 |
| ALPINE A110 | Injection | √ | √ | √ | √ | √ | √ | 0289, 0428, 0529, 0531, 0567, 0580, 0840, 0841, 0845, 0846, 0852 |
| ALPINE A110 | Anti-lock Brake System(ABS) | √ | √ | √ | √ | √ | √ | 0428, 0486, 0490, 0492, 0498, 0507, 0510, 0515, 0621, 0649, 0658, 0786, 0800, 0802, 0805 |
| ALPINE A110 | UCH | √ | √ | √ | √ | √ | √ | 0107, 0327, 0358, 0385, 0428 |
| ALPINE A110 | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | √ | 0372, 0428, 0645, 0660 |
| ALPINE A110 | Air Conditioning(AC) | √ | √ | √ | √ | | √ | 0428, 0625, 0634 |
| ALPINE A110 | Automatic Gearbox(AT) | √ | √ | √ | √ | √ | √ | 0461, 0519, 0666, 0748 |
| ALPINE A110 | VARIABLE P.A.S. | √ | √ | √ | √ | √ | √ | 0428 |
| ALPINE A110 | UPC | √ | √ | √ | √ | | √ | 0457, 0648, 0651 |

| | | | | | | | | |
|---------------------------------|-----------------------------|---|---|---|---|---|---|---|
| ALPINE A110 | Adaptation Unit | √ | √ | √ | √ | | | 0200, 0202, 0440 |
| ALPINE A110 | Parking PROX CAN | √ | √ | √ | √ | | √ | 0003, 0045, 0071, 0077, 0428 |
| ALPINE A110 | Telematic CTRL Unit | √ | √ | √ | √ | | √ | 0426, 0452 |
| ALPINE A110 | Hands - Fress Module | √ | √ | √ | √ | √ | √ | 0128, 0428 |
| ALPINE A110 | Communications Unit | √ | √ | √ | | | | 0461, 0468 |
| AVANTIME | Injection | √ | √ | √ | | | | |
| AVANTIME | Anti-lock Brake System(ABS) | √ | √ | √ | | | | |
| AVANTIME | Instrument Panel | √ | √ | √ | | | | |
| AVANTIME | UCH | √ | √ | √ | | | | |
| AVANTIME | Airbag / Pretensioners(SRS) | √ | √ | √ | | | | |
| AVANTIME | Air Conditioning(AC) | √ | √ | √ | | | | |
| AVANTIME | Automatic Gearbox(AT) | √ | √ | √ | | | | |
| AVANTIME | Lighting | √ | √ | √ | | | | |
| AVANTIME | Discharge Lamp | √ | √ | √ | | | | |
| AVANTIME | Heater | √ | √ | √ | | | | |
| CAPTUR - KAPTUR BR - IN - RU | Injection | √ | √ | √ | √ | √ | √ | 0580, 0537, 0836, 0835, 0838, 0837, 0839, 0771, 0551, 0531, 0553, 0574, 0428, 0598, 0513, 0579, 0534, 0776, 0450, 0580, 0428, 0505, 0464, 0541, 0544, 0543, 0840, 0568, 0743, 0567, 0842 |
| CAPTUR - KAPTUR BR - IN - RU | Anti-lock Brake System(ABS) | √ | √ | √ | √ | √ | √ | 0490, 0492, 0658, 0649, 0428, 0507, 0498, 0486, 0621, 0786, 0428, 0658, 0787 |
| CAPTUR - KAPTUR BR - IN - RU | Instrument Panel | √ | √ | √ | √ | | √ | 0292, 0428, 0093, 0231, 0245, 0093, 0292, 0345, 0248 |
| CAPTUR - KAPTUR BR - IN - RU | UCH | √ | √ | √ | √ | √ | √ | 0327, 0767, 0407, 0428, 0516, 0509, 0385, 0520, 0773, 0522, 0411, 0107, 0358, 0523 |
| CAPTUR - KAPTUR BR - IN - RU | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | √ | 0428, 0703, 0174, 0660, 0428, 0645 |
| CAPTUR - KAPTUR BR - IN - RU | Air Conditioning(AC) | √ | √ | √ | √ | | √ | 0428, 0433, 0634 |
| CAPTUR - KAPTUR BR - IN - RU | Automatic Gearbox(AT) | √ | √ | √ | √ | √ | √ | 0713, 0517, 0769, 0518, 0461, 0461, 0674, 0761, 0467, 0511, 0702 |
| CAPTUR - KAPTUR BR - IN - RU | UPC | √ | √ | √ | √ | | √ | 0149, 0162, 0457, 0494, 0648, 0651 |
| CAPTUR - KAPTUR BR - IN - RU | 4 Wheels Drive(4WD) | √ | √ | √ | √ | √ | √ | 0624, 0428, 0014, 0654, 0611 |
| CAPTUR - KAPTUR BR - IN - RU | Telematic CTRL Unit | √ | √ | √ | √ | | √ | 0426, 0717, 0452, 0426, 0458, 0699 |
| CAPTUR - KAPTUR BR - IN - RU | Hands - Fress Module | √ | √ | √ | √ | √ | √ | 0128, 0428 |
| CAPTUR - KAPTUR BR - IN - RU | RADIO | √ | √ | √ | √ | | √ | 0182, 0087, 0452, 0176, 0087, 0112, 0182, 0469, 0622 |
| CAPTUR - KAPTUR BR - IN - RU | Multimedia Interface | √ | √ | √ | √ | | √ | 0428 |

| | | | | | | | | |
|------------------------------|-----------------------------|---|---|---|---|---|---|---|
| CAPTUR - KAPTUR BR - IN - RU | Amplifier | √ | √ | √ | √ | | √ | 0048, 0469 |
| CAPTUR - KAPTUR BR - IN - RU | Lighting | √ | √ | √ | √ | | √ | 0428, 0612 |
| CAPTUR - QM3 - KABIN | Injection | √ | √ | √ | √ | √ | √ | 0580, 0582, 0581, 0819, 0450, 0537, 0538, 0617, 0771, 0573, 0572, 0531, 0575, 0574, 0530, 0577, 0535, 0579, 0534, 0590, 0471, 0580, 0548, 0547, 0428, 0505, 0549, 0626, 0827, 0829, 0828, 0584, 0583, 0102, 0542, 0586, 0585, 0464, 0541, 0544, 0588, 0543, 0587, 0546, 0560, 0284, 0482, 0438, 0558, 0836, 0838, 0837, 0839, 0551, 0550, 0553, 0555, 0830, 0554, 0598, 0513, 0556, 0450, 0571, 0570, 0602, 0847, 0529, 0848, 0608, 0562, 0561, 0564, 0841, 0566, 0565, 0840, 0521, |
| CAPTUR - QM3 - KABIN | Anti-lock Brake System(ABS) | √ | √ | √ | √ | √ | √ | 0658, 0490, 0649, 0492, 0507, 0498, 0486, 0428, 0621, 0786, 0787 |
| CAPTUR - QM3 - KABIN | Instrument Panel | √ | √ | √ | √ | | √ | 0292, 0428, 0093, 0231, 0245, 0093, 0292, 0345, 0248 |
| CAPTUR - QM3 - KABIN | UCH | √ | √ | √ | √ | √ | √ | 0767, 0107, 0327, 0407, 0428, 0516, 0509, 0385, 0520, 0773, 0522, 0411, 0327, 0107, 0358, 0523 |
| CAPTUR - QM3 - KABIN | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | √ | 0660, 0428, 0645 |
| CAPTUR - QM3 - KABIN | Air Conditioning(AC) | √ | √ | √ | √ | | √ | 0625, 0428, 0428, 0433, 0642, 0634, 0625 |
| CAPTUR - QM3 - KABIN | Automatic Gearbox(AT) | √ | √ | √ | √ | √ | √ | 0461, 0493, 0461, 0504, 0757, 0748, 0758, 0519, 0454, 0454, 0511, 0752, 0502, 0656, 0755, 0666 |
| CAPTUR - QM3 - KABIN | VARIABLE P.A.S. | √ | √ | √ | √ | √ | √ | 0428 |
| CAPTUR - QM3 - KABIN | UPC | √ | √ | √ | √ | | √ | 0457, 0149, 0648, 0162, 0494, 0651, 0457 |
| CAPTUR - QM3 - KABIN | Parking PROX CAN | √ | √ | √ | √ | | √ | 0614, 0428, 0071, 0082, 0003, 0045, 0077 |
| CAPTUR - QM3 - KABIN | Telematic CTRL Unit | √ | √ | √ | √ | | √ | 0426, 0717, 0452, 0426, 0458, 0699 |
| CAPTUR - QM3 - KABIN | Hands - Fress Module | √ | √ | √ | √ | √ | √ | 0128, 0428 |
| CAPTUR - QM3 - KABIN | Communications Unit | √ | √ | √ | √ | | √ | 0017, 0129, 0159, 0161, 0437, 0461 |
| CAPTUR - QM3 - KABIN | Multimedia Interface | √ | √ | √ | √ | | √ | 0428 |
| CAPTUR - QM3 - KABIN | Amplifier | √ | √ | √ | √ | | √ | 0048, 0469 |
| CAPTUR - QM3 - KABIN | Lighting | √ | √ | √ | √ | | √ | 0428, 0612 |

| | | | | | | | | |
|--------------------|-----------------------------|---|---|---|---|---|---|--|
| CLIO 2 | Injection | √ | √ | √ | √ | | √ | 0428, 0471, 0667, 0690 |
| CLIO 2 | Anti-lock Brake System(ABS) | √ | √ | √ | | | | |
| CLIO 2 | UCH | √ | √ | √ | | | | |
| CLIO 2 | Airbag / Pretensioners(SRS) | √ | √ | √ | | | | |
| CLIO 2 | Air Conditioning(AC) | √ | √ | √ | | | | |
| CLIO 2 | Automatic Gearbox(AT) | √ | √ | √ | | | | |
| CLIO 2 | Engine(petrol) | √ | √ | √ | | | | |
| CLIO II p2 - 3 - 4 | Injection | √ | √ | √ | √ | | √ | 0428, 0471, 0667, 0690 |
| CLIO II p2 - 3 - 4 | Anti-lock Brake System(ABS) | √ | √ | √ | | | | |
| CLIO II p2 - 3 - 4 | UCH | √ | √ | √ | | | | |
| CLIO II p2 - 3 - 4 | Airbag / Pretensioners(SRS) | √ | √ | √ | | | | |
| CLIO II p2 - 3 - 4 | Air Conditioning(AC) | √ | √ | √ | | | | |
| CLIO II p2 - 3 - 4 | Automatic Gearbox(AT) | √ | √ | √ | | | | |
| CLIO II p2 - 3 - 4 | Engine(petrol) | √ | √ | √ | | | | |
| CLIO II p2 - 3 - 4 | VARIABLE P.A.S. | √ | √ | √ | | | | |
| CLIO II p2 - 3 - 4 | Lighting | √ | √ | √ | | | | |
| CLIO II p2 - 3 - 4 | Discharge Lamp | √ | √ | √ | | | | |
| CLIO II Ph 6 | Injection | √ | √ | √ | √ | √ | √ | 0428, 0529, 0450, 0771, 0482, 0531, 0553, 0428, 0535, 0524 |
| CLIO II Ph 6 | Anti-lock Brake System(ABS) | √ | √ | √ | √ | | √ | 0428, 0631, 0649, 0658 |
| CLIO II Ph 6 | UCH | √ | √ | √ | √ | | √ | 0428, 0267, 0352, 0267, 0428 |
| CLIO II Ph 6 | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | | 0137, 0299, 0300, 0302, 0341, 0347, 0348, 0372, 0428, 0645, 0660 |
| CLIO II Ph 6 | Tracker | √ | √ | √ | √ | | | 0012, 0415, 0428 |
| CLIO III | Injection | √ | √ | √ | √ | √ | √ | 0482, 0834, 0438, 0833, 0536, 0539, 0538, 0617, 0771, 0531, 0530, 0535, 0832, 0534, 0776, 0831, 0690, 0450, 0471, 0482, 0602, 0528, 0428, 0626, 0505, 0529, 0608, 0540, 0542, 0464, 0541, 0544, 0667, 0524, 0537 |
| CLIO III | Anti-lock Brake System(ABS) | √ | √ | √ | √ | | √ | 0658, 0745, 0649, 0428, 0738, 0451, 0428, 0631, 0741, 0766, 0658 |
| CLIO III | UCH | √ | √ | √ | √ | | √ | 0271, 0095, 0273, 0053, 0053, 0095, 0218, 0107, 0118, 0209, 0428, 0067, 0320, 0099, 0121, 0114, 0213, 0138, 0710 |
| CLIO III | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | | 0064, 0361, 0317, 0319, 0341, 0353, 0330, 0332, 0334, 0315, 0314, 0070, 0074, 0296, 0295, 0372, 0668, 0329, 0428, 0056, 0364, 0341, 0363, 0660, 0645, 0369 |
| CLIO III | Air Conditioning(AC) | √ | √ | √ | √ | | √ | 0106, 0157, 0225, 0428 |
| CLIO III | Automatic Gearbox(AT) | √ | √ | √ | √ | | √ | 0461, 0692, 0461, 0702, 0713, 0429, 0719, 0674, 0443, 0454, 0467, 0488, 0697, 0666 |
| CLIO III | VARIABLE P.A.S. | √ | √ | √ | √ | | | 0428, 0639, 0630, 0428 |
| CLIO III | UPC | √ | √ | √ | √ | | √ | 0428 |

| | | | | | | | | |
|--------------|-----------------------------|---|---|---|---|---|---|--|
| CLIO III | Tyres | √ | √ | √ | √ | | | 0042, 0440, 0740 |
| CLIO III | Lighting | √ | √ | √ | √ | | √ | 0428, 0014, 0040, 0043, 0023, 0033, 0018, 0612 |
| CLIO III | Communications Unit | √ | √ | √ | √ | | √ | 0437, 0129, 0606, 0150, 0461, 0110, 0110, 0132, 0156, 0129 |
| CLIO III | RADIO | √ | √ | √ | √ | | √ | 0452, 0622 |
| CLIO III | Multimedia Interface | √ | √ | √ | √ | | √ | 0014, 0049, 0051, 0059, 0072, 0428 |
| CLIO III | Multimedia Connection | √ | √ | √ | √ | | | 0013, 0428, 0606 |
| CLIO III | Parking Assistance | √ | √ | √ | √ | | | 0614, 0428, 0041, 0003, 0045, 0003, 0614 |
| CLIO IV | Anti-lock Brake System(ABS) | √ | √ | √ | √ | √ | √ | 0428, 0486, 0490, 0492, 0507, 0621, 0649, 0658, 0786, 0787 |
| CLIO IV | Instrument Panel | √ | √ | √ | √ | | √ | 0292, 0428, 0093, 0231, 0245, 0093, 0292, 0345, 0248 |
| CLIO IV | UCH | √ | √ | √ | √ | √ | √ | 0107, 0327, 0767, 0407, 0428, 0516, 0509, 0385, 0520, 0773, 0522, 0411, 0767, 0327, 0358, 0523 |
| CLIO IV | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | √ | 0660, 0428, 0645 |
| CLIO IV | Air Conditioning(AC) | √ | √ | √ | √ | | √ | 0625, 0428, 0428, 0433, 0642, 0634, 0625 |
| CLIO IV | Automatic Gearbox(AT) | √ | √ | √ | √ | √ | √ | 0461, 0493, 0461, 0504, 0757, 0748, 0758, 0519, 0454, 0454, 0511, 0752, 0502, 0656, 0755, 0666 |
| CLIO IV | VARIABLE P.A.S. | √ | √ | √ | √ | √ | √ | 0428 |
| CLIO IV | UPC | √ | √ | √ | √ | | √ | 0457, 0149, 0648, 0162, 0494, 0651, 0149, 0457 |
| CLIO IV | Parking PROX CAN | √ | √ | √ | √ | | √ | 0614, 0428, 0071, 0082, 0003, 0045, 0077 |
| CLIO IV | RADIO | √ | √ | √ | √ | | √ | 0182, 0087, 0452, 0176, 0465, 0112, 0182, 0469, 0622 |
| CLIO IV | Telematic CTRL Unit | √ | √ | √ | √ | | √ | 0426, 0717, 0452, 0426, 0458, 0699 |
| CLIO IV | Hands - Fress Module | √ | √ | √ | √ | √ | √ | 0128, 0428 |
| CLIO IV | Communications Unit | √ | √ | √ | √ | | √ | 0017, 0129, 0159, 0161, 0437, 0461 |
| CLIO IV | Multimedia Interface | √ | √ | √ | √ | | √ | 0428 |
| CLIO IV | Amplifier | √ | √ | √ | √ | | √ | 0048, 0469 |
| CLIO IV | Lighting | √ | √ | √ | √ | | √ | 0428, 0612 |
| CLIO V6 | Injection | √ | √ | √ | | | | |
| CLIO V6 | UCH | √ | √ | √ | | | | |
| CLIO V6 | Air Conditioning(AC) | √ | √ | √ | | | | |
| CLIO V6 ph 2 | Injection | √ | √ | √ | | | | |
| CLIO V6 ph 2 | UCH | √ | √ | √ | | | | |
| CLIO V6 ph 2 | Airbag / Pretensioners(SRS) | √ | √ | √ | | | | |
| CLIO V6 ph 2 | Air Conditioning(AC) | √ | √ | √ | | | | |

| | | | | | | | | |
|-----------------|-----------------------------|---|---|---|---|---|---|---|
| DOKKER - KANGOO | Injection | √ | √ | √ | √ | √ | √ | 0580, 0582, 0581, 0819, 0537, 0538, 0288, 0617, 0771, 0573, 0572, 0531, 0575, 0574, 0530, 0577, 0535, 0579, 0534, 0590, 0593, 0471, 0592, 0580, 0548, 0547, 0428, 0505, 0549, 0626, 0827, 0829, 0828, 0584, 0583, 0102, 0542, 0586, 0585, 0464, 0541, 0544, 0588, 0543, 0587, 0546, 0589, 0560, 0284, 0482, 0438, 0558, 0836, 0838, 0837, 0839, 0551, 0595, 0550, 0594, 0553, 0597, 0596, 0555, 0830, 0599, 0554, 0598, 0513, 0556, 0237, 0450, 0571, 0570, 0602, 0847, 0529, 0848, 0608, 0562, 0561, 0564, 0841, 0566, 0565, 0840, 0521, 0843, 0568, 0524, |
| DOKKER - KANGOO | Anti-lock Brake System(ABS) | √ | √ | √ | √ | √ | √ | 0658, 0490, 0649, 0492, 0498, 0486, 0428, 0621, 0787 |
| DOKKER - KANGOO | Instrument Panel | √ | √ | √ | √ | | √ | 0292, 0093, 0262, 0093, 0292, 0825, 0428, 0254, 0264, 0245, 0278, 0321, 0255, 0346, 0678, 0248 |
| DOKKER - KANGOO | UCH | √ | √ | √ | √ | √ | √ | 0107, 0327, 0767, 0407, 0428, 0516, 0509, 0385, 0520, 0773, 0522, 0411, 0767, 0327, 0358, 0523 |
| DOKKER - KANGOO | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | √ | 0660, 0428, 0645 |
| DOKKER - KANGOO | VARIABLE P.A.S. | √ | √ | √ | √ | | | 0428, 0639 |
| DOKKER - KANGOO | RADIO | √ | √ | √ | √ | | √ | 0182, 0087, 0452, 0176, 0465, 0112, 0182, 0469, 0622 |
| DOKKER - KANGOO | Telematic CTRL Unit | √ | √ | √ | √ | | √ | 0426, 0717, 0452, 0426, 0458, 0699 |
| DOKKER - KANGOO | Urea Dosing Control Module | √ | √ | √ | √ | √ | √ | 0461, 0484, 0794, 0795, 0797, 0799, 0801, 0803 |
| DOKKER - KANGOO | Hands - Fress Module | √ | √ | √ | √ | √ | √ | 0128, 0428 |
| DOKKER - KANGOO | Multimedia Interface | √ | √ | √ | √ | | √ | 0428 |
| DUSTER | Automatic Gearbox(AT) | √ | √ | √ | √ | | √ | 0461, 0467, 0674, 0702, 0713 |
| DUSTER | 4 Wheels Drive(4WD) | √ | √ | √ | √ | √ | √ | 0624, 0428, 0014, 0014, 0654, 0624, 0611 |
| DUSTER | RADIO | √ | √ | √ | √ | | √ | 0081, 0087, 0707, 0452, 0465, 0112, 0469, 0081, 0622 |
| DUSTER | Anti-lock Brake System(ABS) | √ | √ | √ | √ | | √ | 0658, 0503, 0649, 0428, 0631 |
| DUSTER | UCH | √ | √ | √ | √ | | √ | 0428, 0267, 0352, 0267, 0428 |
| DUSTER | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | | 0137, 0166, 0168, 0169, 0173, 0299, 0300, 0302, 0317, 0319, 0341, 0353, 0356, 0357, 0366, 0367, 0372, 0428, 0645, 0660 |
| DUSTER | VARIABLE P.A.S. | √ | √ | √ | √ | | | 0639, 0428 |
| DUSTER | Tracker | √ | √ | √ | √ | | | 0012, 0415, 0428 |

| | | | | | | | | |
|------------|-----------------------------|---|---|---|---|---|---|--|
| DUSTER ph2 | Injection | √ | √ | √ | √ | √ | √ | 0580, 0482, 0537, 0438, 0558, 0836, 0835, 0838, 0837, 0839, 0771, 0551, 0531, 0553, 0575, 0574, 0555, 0598, 0513, 0579, 0237, 0534, 0776, 0556, 0590, 0450, 0570, 0580, 0505, 0428, 0562, 0561, 0464, 0541, 0544, 0543, 0840, 0565, 0568, 0843, 0743, 0567, 0842, 0428 |
| DUSTER ph2 | Anti-lock Brake System(ABS) | √ | √ | √ | √ | √ | √ | 0658, 0490, 0649, 0492, 0507, 0498, 0486, 0428, 0621, 0786, 0787 |
| DUSTER ph2 | Instrument Panel | √ | √ | √ | √ | | √ | 0093, 0245, 0248, 0254, 0255, 0264, 0278, 0292, 0321, 0428, 0678, 0825 |
| DUSTER ph2 | UCH | √ | √ | √ | √ | √ | √ | 0107, 0327, 0767, 0407, 0428, 0516, 0509, 0385, 0520, 0773, 0522, 0411, 0767, 0327, 0358, 0523 |
| DUSTER ph2 | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | √ | 0428, 0703, 0174, 0660, 0428, 0645 |
| DUSTER ph2 | Air Conditioning(AC) | √ | √ | √ | √ | | √ | 0428, 0433, 0634 |
| DUSTER ph2 | Automatic Gearbox(AT) | √ | √ | √ | √ | √ | √ | 0713, 0517, 0769, 0518, 0461, 0461, 0674, 0761, 0467, 0511, 0702 |
| DUSTER ph2 | VARIABLE P.A.S. | √ | √ | √ | √ | | | 0428, 0639 |
| DUSTER ph2 | 4 Wheels Drive(4WD) | √ | √ | √ | √ | √ | √ | 0624, 0428, 0014, 0654, 0611 |
| DUSTER ph2 | RADIO | √ | √ | √ | √ | | √ | 0182, 0087, 0452, 0176, 0465, 0112, 0182, 0469, 0622 |
| DUSTER ph2 | Telematic CTRL Unit | √ | √ | √ | √ | | √ | 0426, 0717, 0452, 0426, 0458, 0699 |
| DUSTER ph2 | Multimedia Interface | √ | √ | √ | √ | | √ | 0428 |
| DUSTER ph3 | Injection | √ | √ | √ | √ | √ | √ | 0580, 0537, 0836, 0835, 0838, 0837, 0839, 0771, 0551, 0550, 0531, 0553, 0574, 0598, 0513, 0579, 0535, 0534, 0776, 0450, 0482, 0580, 0428, 0505, 0529, 0464, 0541, 0544, 0543, 0840, 0568, 0743, 0567, 0842 |
| DUSTER ph3 | Anti-lock Brake System(ABS) | √ | √ | √ | √ | √ | √ | |
| DUSTER ph3 | Instrument Panel | √ | √ | √ | √ | √ | √ | 0093, 0231, 0241, 0245, 0246, 0248, 0292, 0428 |
| DUSTER ph3 | UCH | √ | √ | √ | √ | √ | √ | 0107, 0327, 0407, 0428, 0516, 0084, 0509, 0053, 0385, 0378, 0138 |
| DUSTER ph3 | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | √ | |
| DUSTER ph3 | Air Conditioning(AC) | √ | √ | √ | √ | | √ | |
| DUSTER ph3 | Automatic Gearbox(AT) | √ | √ | √ | √ | √ | √ | 0713, 0517, 0769, 0518, 0461, 0461, 0674, 0761, 0467, 0511, 0702 |
| DUSTER ph3 | Communications Unit | √ | √ | √ | √ | √ | √ | 0461, 0437, 0468 |
| DUSTER ph3 | Blind Spot Detection | √ | √ | √ | √ | | √ | 0428 |
| DUSTER ph3 | VARIABLE P.A.S. | √ | √ | √ | √ | √ | | 0428, 0684, 0684, 0428 |
| DUSTER ph3 | UPC | √ | √ | √ | √ | | √ | 0514, 0648, 0651, 0754 |
| DUSTER ph3 | 4 Wheels Drive(4WD) | √ | √ | √ | √ | √ | √ | |
| DUSTER ph3 | RADIO | √ | √ | √ | √ | | √ | 0182, 0087, 0452, 0176, 0087, 0465, 0112, 0182, 0469, 0622 |
| DUSTER ph3 | Telematic CTRL Unit | √ | √ | √ | √ | | | 0426, 0452, 0458, 0709, 0725, 0732 |

| | | | | | | | | |
|------------|-----------------------------|---|---|---|---|---|---|--|
| DUSTER ph3 | Urea Dosing Control Module | √ | √ | √ | √ | √ | √ | 0801, 0803, 0461, 0484, 0795, 0794, 0797, 0799 |
| DUSTER ph3 | Hands - Fress Module | √ | √ | √ | √ | √ | √ | 0117, 0126, 0128, 0133, 0428 |
| DUSTER ph3 | Around View Monitoring | √ | √ | √ | √ | | √ | 0428, 0434 |
| DUSTER ph3 | Central GateWay | √ | √ | √ | √ | √ | | 0004, 0428 |
| DUSTER ph3 | Multimedia Interface | √ | √ | √ | √ | | √ | 0428 |
| ESPACE | Injection | √ | √ | √ | | | | |
| ESPACE | Anti-lock Brake System(ABS) | √ | √ | √ | | | | |
| ESPACE | Instrument Panel | √ | √ | √ | | | | |
| ESPACE | UCH | √ | √ | √ | | | | |
| ESPACE | Airbag / Pretensioners(SRS) | √ | √ | √ | | | | |
| ESPACE | Air Conditioning(AC) | √ | √ | √ | | | | |
| ESPACE | Automatic Gearbox(AT) | √ | √ | √ | | | | |
| ESPACE | Lighting | √ | √ | √ | | | | |
| ESPACE | Discharge Lamp | √ | √ | √ | | | | |
| ESPACE | Heater | √ | √ | √ | | | | |
| ESPACE IV | Injection | √ | √ | √ | √ | | √ | 0450, 0681, 0482, 0471, 0681, 0438, 0822, 0115, 0771, 0652, 0123, 0115, 0524, 0776 |
| ESPACE IV | Instrument Panel | √ | √ | √ | √ | | √ | 0261, 0260, 0241, 0270, 0239, 0635, 0254, 0231, 0253, 0255, 0258, 0259, 0270, 0093, 0291, 0250, 0272, 0252, 0251, 0428, 0231, 0243, 0287, 0242, 0245, 0244, 0148, 0247, 0246, 0249, 0248 |
| ESPACE IV | Automatic Gearbox(AT) | √ | √ | √ | √ | | √ | 0674, 0467, 0429, 0722 |
| ESPACE IV | Anti-lock Brake System(ABS) | √ | √ | √ | √ | | √ | 0490, 0492, 0186, 0185, 0186, 0490, 0658, 0649, 0428, 0738, 0760, 0187, 0762, 0486, 0631, 0741 |
| ESPACE IV | UCH | √ | √ | √ | √ | | √ | 0080, 0280, 0062, 0240, 0053, 0218, 0134, 0236, 0138, 0193, 0195, 0095, 0293, 0197, 0274, 0053, 0130, 0080, 0207, 0107, 0206, 0228, 0428, 0067, 0441, 0661, 0121, 0104, 0203, 0269, 0224, 0268, 0127, 0204 |
| ESPACE IV | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | | 0668, 0428, 0372, 0372, 0660, 0668, 0645 |
| ESPACE IV | Air Conditioning(AC) | √ | √ | √ | √ | | √ | 0106, 0208, 0219, 0428, 0184, 0220, 0223, 0222, 0214, 0225, 0226 |
| ESPACE IV | Gas Injection | √ | √ | √ | √ | | √ | 0049, 0428 |
| ESPACE IV | Discharge Lamp | √ | √ | √ | √ | | √ | 0005, 0428, 0030, 0030 |
| ESPACE IV | Parking Assistance | √ | √ | √ | √ | | | 0614, 0428, 0041, 0003, 0045, 0003, 0614 |
| ESPACE IV | Heater | √ | √ | √ | √ | | √ | 0427, 0439, 0461 |

| | | | | | | | | |
|----------------------|---------------------------------------|---|---|---|---|---|---|--|
| ESPACE V | Injection | √ | √ | √ | √ | √ | √ | 0580, 0617, 0771, 0531, 0535, 0579, 0593, 0471, 0592, 0580, 0505, 0626, 0428, 0542, 0541, 0783, 0544, 0589, 0482, 0558, 0836, 0838, 0837, 0839, 0551, 0595, 0594, 0597, 0596, 0555, 0599, 0428, 0513, 0557, 0556, 0450, 0570, 0845, 0602, 0846, 0529, 0608, 0562, 0561, 0288, 0563, 0566, 0565, 0648, 0568, 0842, 0567, 0842, 0600 |
| ESPACE V | Anti-lock Brake System(ABS) | √ | √ | √ | √ | √ | √ | 0078, 0428, 0480, 0486, 0490, 0492, 0498, 0507, 0621, 0658, 0718, 0753, 0777, 0785, 0787 |
| ESPACE V | UCH | √ | √ | √ | √ | √ | √ | 0381, 0084, 0351, 0383, 0084, 0405, 0028, 0107, 0327, 0404, 0406, 0428, 0374, 0385, 0410, 0398, 0324, 0379, 0403, 0028, 0358 |
| ESPACE V | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | √ | 0428, 0372, 0660, 0645 |
| ESPACE V | Front Radar | √ | √ | √ | √ | √ | | 0428 |
| ESPACE V | Air Conditioning(AC) | √ | √ | √ | √ | | √ | 0428, 0433, 0634 |
| ESPACE V | Automatic Gearbox(AT) | √ | √ | √ | √ | √ | √ | 0748, 0519, 0461, 0461, 0750, 0748, 0763, 0666 |
| ESPACE V | Gas Injection | √ | √ | √ | √ | √ | | 0428, 0714, 0720, 0731 |
| ESPACE V | VARIABLE P.A.S. | √ | √ | √ | √ | √ | | 0428 |
| ESPACE V | UPC | √ | √ | √ | √ | | √ | 0144, 0164, 0457, 0494, 0506, 0512, 0651, 0754 |
| ESPACE V | Power Back Door | √ | √ | √ | √ | | | 0009, 0428 |
| ESPACE V | 4 Wheels Steering | √ | √ | √ | √ | √ | √ | 0636, 0627, 0428 |
| ESPACE V | Parking PROX CAN | √ | √ | √ | √ | | √ | |
| ESPACE V | Gearbox Elec Control | √ | √ | √ | √ | √ | √ | 0428, 0616 |
| ESPACE V | Piloted Suspension | √ | √ | √ | √ | √ | | 0440 |
| ESPACE V | Driver's Seat | √ | √ | √ | √ | | √ | 0428, 0663, 0673, 0676 |
| ESPACE V | Front Camera | √ | √ | √ | √ | | | 0005, 0068, 0428 |
| ESPACE V | RADIO | √ | √ | √ | √ | | √ | 0779, 0172, 0087, 0179, 0465, 0487, 0112, 0178, 0090, 0469 |
| ESPACE V | Telematic CTRL Unit | √ | √ | √ | √ | | √ | 0426, 0717, 0452, 0426, 0458, 0699 |
| ESPACE V | Urea Dosing Control Module | √ | √ | √ | √ | √ | √ | 0461, 0484, 0794, 0795, 0797, 0799, 0801, 0803 |
| ESPACE V | Left - Hand Door or Passenger Seat | √ | √ | √ | √ | | √ | 0428, 0633, 0647, 0653 |
| ESPACE V | Right - Hand Door or Collapsible Seat | √ | √ | √ | √ | | √ | 0428 |
| ESPACE V | Head up Display | √ | √ | √ | | | √ | 0428 |
| ESPACE V | Multimedia Interface | √ | √ | √ | | | √ | 0437 |
| ESPACE V | Amplifier | √ | √ | √ | √ | | √ | 0060, 0428, 0456 |
| ESPACEIV ph2 - 3 - 4 | Injection | √ | √ | √ | √ | √ | √ | 0681, 0482, 0471, 0450, 0438, 0558, 0771, 0551, 0770, 0652, 0115, 0532, 0513, 0535, 0534, 0776, 0471, 0428, 0505, 0542, 0541, 0123, 0544, 0687, 0840 |

| | | | | | | | | |
|----------------------|-----------------------------|---|---|---|---|---|---|--|
| ESPACEIV ph2 - 3 - 4 | Instrument Panel | √ | √ | √ | √ | | √ | 0270, 0291, 0093, 0250, 0272, 0241, 0093, 0270, 0428, 0318, 0243, 0254, 0287, 0231, 0253, 0245, 0255, 0321, 0148, 0247, 0246 |
| ESPACEIV ph2 - 3 - 4 | Automatic Gearbox(AT) | √ | √ | √ | √ | | √ | 0429, 0493, 0674, 0467, 0429, 0722 |
| ESPACEIV ph2 - 3 - 4 | VARIABLE P.A.S. | √ | √ | √ | √ | √ | | 0428, 0644 |
| ESPACEIV ph2 - 3 - 4 | Lighting | √ | √ | √ | √ | | √ | 0428, 0063, 0014, 0040, 0054, 0065, 0023, 0612, 0018 |
| ESPACEIV ph2 - 3 - 4 | Parking PROX CAN | √ | √ | √ | √ | | | 0003, 0041, 0045, 0047, 0057, 0428, 0614, 0649 |
| ESPACEIV ph2 - 3 - 4 | Communications Unit | √ | √ | √ | √ | | √ | 0014, 0428, 0437, 0449, 0628 |
| ESPACEIV ph2 - 3 - 4 | RADIO | √ | √ | √ | √ | | √ | 0090, 0109, 0452, 0452, 0430, 0622 |
| ESPACEIV ph2 - 3 - 4 | Multimedia Interface | √ | √ | √ | √ | | √ | 0437, 0428, 0049, 0014 |
| ESPACEIV ph2 - 3 - 4 | Multimedia Connection | √ | √ | √ | √ | | | 0013, 0428, 0606 |
| ESPACEIV ph2 - 3 - 4 | Anti-lock Brake System(ABS) | √ | √ | √ | √ | | √ | |
| ESPACEIV ph2 - 3 - 4 | UCH | √ | √ | √ | √ | | √ | 0053, 0062, 0067, 0080, 0095, 0104, 0107, 0121, 0130, 0134, 0138, 0193, 0195, 0197, 0203, 0206, 0207, 0218, 0224, 0228, 0236, 0240, 0268, 0274, 0280, 0293, 0428, 0441, 0661 |
| ESPACEIV ph2 - 3 - 4 | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | | |
| ESPACEIV ph2 - 3 - 4 | Air Conditioning(AC) | √ | √ | √ | √ | | √ | |
| ESPACEIV ph2 - 3 - 4 | Parking Assistance | √ | √ | √ | √ | | | 0614, 0428, 0041, 0003, 0045, 0003, 0614 |
| ESPACEIV ph2 - 3 - 4 | Heater | √ | √ | √ | √ | | √ | 0427, 0439, 0461 |
| KADJAR | Injection | √ | √ | √ | √ | √ | √ | 0580, 0450, 0617, 0771, 0531, 0575, 0574, 0535, 0579, 0590, 0593, 0471, 0592, 0580, 0505, 0626, 0428, 0829, 0542, 0541, 0783, 0544, 0589, 0482, 0438, 0558, 0836, 0838, 0837, 0839, 0551, 0595, 0594, 0597, 0596, 0555, 0599, 0830, 0598, 0513, 0557, 0556, 0450, 0570, 0845, 0602, 0846, 0529, 0608, 0562, 0561, 0288, 0563, 0566, 0565, 0840, 0568, 0843, 0524, 0567, 0614, 0661 |
| KADJAR | Anti-lock Brake System(ABS) | √ | √ | √ | √ | √ | √ | 0658, 0490, 0649, 0492, 0507, 0498, 0486, 0428, 0621, 0786, 0787 |
| KADJAR | Instrument Panel | √ | √ | √ | √ | | √ | 0292, 0093, 0428, 0241, 0020, 0020, 0264, 0245, 0292, 0248 |
| KADJAR | UCH | √ | √ | √ | √ | √ | √ | 0381, 0084, 0351, 0383, 0084, 0405, 0028, 0107, 0327, 0404, 0406, 0428, 0374, 0385, 0410, 0398, 0324, 0379, 0403, 0028, 0358 |
| KADJAR | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | √ | 0428, 0372, 0660, 0645 |
| KADJAR | Front Radar | √ | √ | √ | √ | | | 0428 |
| KADJAR | Automatic Gearbox(AT) | √ | √ | √ | √ | √ | √ | 0504, 0757, 0748, 0758, 0519, 0454, 0461, 0493, 0461, 0752, 0755, 0666 |

| | | | | | | | | |
|-----------|-----------------------------|---|---|---|---|---|---|--|
| KADJAR | Gas Injection | √ | √ | √ | √ | √ | | 0428, 0714, 0720, 0731 |
| KADJAR | VARIABLE P.A.S. | √ | √ | √ | √ | √ | | 0428 |
| KADJAR | UPC | √ | √ | √ | √ | | √ | 0144, 0164, 0457, 0494, 0506, 0512, 0651, 0754 |
| KADJAR | 4 Wheels Drive(4WD) | √ | √ | √ | √ | | | 0428 |
| KADJAR | Parking PROX CAN | √ | √ | √ | √ | | √ | |
| KADJAR | Front Camera | √ | √ | √ | √ | | | 0005, 0428, 0068 |
| KADJAR | RADIO | √ | √ | √ | √ | | √ | 0182, 0172, 0087, 0182, 0090, 0452, 0176, 0465, 0179, 0487, 0112, 0178, 0469, 0622, 0779 |
| KADJAR | Telematic CTRL Unit | √ | √ | √ | √ | | √ | 0426, 0717, 0452, 0426, 0458, 0699 |
| KADJAR | Urea Dosing Control Module | √ | √ | √ | √ | √ | √ | 0461, 0484, 0794, 0795, 0797, 0799, 0801, 0803 |
| KADJAR | Multimedia Interface | √ | √ | √ | √ | | √ | 0469, 0609, 0448, 0469 |
| KADJAR | Amplifier | √ | √ | √ | √ | | √ | 0060, 0428, 0456 |
| KADJAR CN | Injection | √ | √ | √ | √ | √ | √ | 0845, 0428, 0846, 0580, 0529, 0771, 0531, 0288, 0428, 0840, 0845, 0567 |
| KADJAR CN | Anti-lock Brake System(ABS) | √ | √ | √ | √ | √ | √ | 0658, 0490, 0649, 0492, 0507, 0498, 0486, 0428, 0621, 0786, 0787 |
| KADJAR CN | Instrument Panel | √ | √ | √ | √ | | √ | 0292, 0093, 0428, 0241, 0020, 0020, 0264, 0245, 0292, 0248 |
| KADJAR CN | UCH | √ | √ | √ | √ | √ | √ | 0381, 0084, 0351, 0383, 0084, 0405, 0028, 0107, 0327, 0404, 0406, 0428, 0374, 0385, 0410, 0398, 0324, 0379, 0403, 0028, 0358 |
| KADJAR CN | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | √ | 0428, 0372, 0660, 0645 |
| KADJAR CN | Air Conditioning(AC) | √ | √ | √ | √ | | √ | 0428, 0433, 0634 |
| KADJAR CN | Automatic Gearbox(AT) | √ | √ | √ | √ | | | |
| KADJAR CN | Gas Injection | √ | √ | √ | √ | √ | | 0428, 0714, 0720, 0731 |
| KADJAR CN | VARIABLE P.A.S. | √ | √ | √ | √ | √ | | 0428 |
| KADJAR CN | UPC | √ | √ | √ | √ | | √ | 0144, 0164, 0457, 0494, 0506, 0512, 0651, 0754 |
| KADJAR CN | 4 Wheels Drive(4WD) | √ | √ | √ | √ | | | 0428 |
| KADJAR CN | Parking PROX CAN | √ | √ | √ | √ | | √ | |
| KADJAR CN | Front Camera | √ | √ | √ | √ | | | 0005, 0068, 0428 |
| KADJAR CN | RADIO | √ | √ | √ | √ | | √ | 0182, 0172, 0087, 0182, 0090, 0452, 0176, 0179, 0465, 0487, 0112, 0178, 0469, 0779, 0622 |
| KADJAR CN | Telematic CTRL Unit | √ | √ | √ | √ | | √ | 0426, 0717, 0452, 0426, 0458, 0699 |
| KADJAR CN | Amplifier | √ | √ | √ | √ | | √ | 0060, 0428, 0456 |
| KANGOO | Injection | √ | √ | √ | √ | | √ | 0428, 0471, 0667, 0690 |
| KANGOO | Anti-lock Brake System(ABS) | √ | √ | √ | | | | |
| KANGOO | UCH | √ | √ | √ | | | | |
| KANGOO | Airbag / Pretensioners(SRS) | √ | √ | √ | | | | |
| KANGOO | Air Conditioning(AC) | √ | √ | √ | | | | |
| KANGOO | Automatic Gearbox(AT) | √ | √ | √ | | | | |
| KANGOO | Engine(petrol) | √ | √ | √ | | | | |

| | | | | | | | | |
|------------|-----------------------------|---|---|---|---|---|---|--|
| KANGOO | Supervisor or DCDC | √ | √ | √ | | | | |
| KANGOO | Inverter | √ | √ | √ | | | | |
| KANGOO | Heater | √ | √ | √ | | | | |
| KANGOO II | Injection | √ | √ | √ | √ | √ | √ | 0690, 0438, 0537, 0834, 0833, 0536, 0539, 0538, 0617, 0771, 0531, 0530, 0428, 0535, 0832, 0534, 0776, 0831, 0450, 0471, 0602, 0528, 0428, 0626, 0505, 0529, 0608, 0540, 0542, 0464, 0541, 0544, 0667, 0524 |
| KANGOO II | Anti-lock Brake System(ABS) | √ | √ | √ | √ | √ | √ | 0492, 0490, 0658, 0745, 0649, 0428, 0079, 0738, 0507, 0793, 0498, 0762, 0079, 0486, 0621, 0786, 0631, 0741, 0785, 0796, 0787, 0798 |
| KANGOO II | Instrument Panel | √ | √ | √ | √ | | √ | 0180, 0340, 0262, 0020, 0093, 0812, 0339, 0811, 0338, 0816, 0815, 0818, 0817, 0254, 0253, 0297, 0135, 0255, 0139, 0810, 0337, 0655, 0152, 0180, 0789, 0428, 0705, 0264, 0665, 0820, 0680, 0276, 0672, 0792, 0231, 0278, 0036, 0678, 0290, 0093, 0291, 0294, 0809, 0646, 0804, 0806, 0243, 0245, 0247, 0246, 0688 |
| KANGOO II | UCH | √ | √ | √ | √ | √ | √ | 0390, 0393, 0395, 0336, 0428, 0508, 0342, 0397, 0388, 0508, 0354, 0398, 0401 |
| KANGOO II | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | √ | 0076, 0086, 0088, 0101, 0103, 0108, 0113, 0120, 0140, 0142, 0299, 0300, 0341, 0353, 0372, 0428, 0645, 0660 |
| KANGOO II | Air Conditioning(AC) | √ | √ | √ | √ | | √ | 0106, 0223, 0225, 0229, 0428 |
| KANGOO II | Automatic Gearbox(AT) | √ | √ | √ | √ | | √ | 0702, 0713, 0461, 0674, 0467 |
| KANGOO II | VARIABLE P.A.S. | √ | √ | √ | √ | | | 0183, 0428, 0630, 0639 |
| KANGOO II | UPC | √ | √ | √ | √ | | √ | 0428, 0640 |
| KANGOO II | Tyres | √ | √ | √ | | √ | | 0440 |
| KANGOO II | Communications Unit | √ | √ | √ | √ | | √ | 0437, 0129, 0606, 0461, 0110, 0110, 0132, 0154, 0156, 0129 |
| KANGOO II | RADIO | √ | √ | √ | √ | | √ | 0452, 0707, 0622 |
| KANGOO II | Multimedia Interface | √ | √ | √ | √ | | √ | 0049, 0051, 0059, 0072, 0428 |
| KANGOO II | Multimedia Connection | √ | √ | √ | √ | | | 0013, 0428, 0606 |
| KANGOO II | Adaptation Unit | √ | √ | √ | √ | | | 0428 |
| KANGOO II | Parking Assistance | √ | √ | √ | √ | | | 0428, 0041, 0003, 0045, 0003, 0428 |
| KANGOO MUX | Injection | √ | √ | √ | √ | | √ | 0428, 0471, 0667, 0690 |
| KANGOO MUX | Anti-lock Brake System(ABS) | √ | √ | √ | | | | |
| KANGOO MUX | UCH | √ | √ | √ | | | | |
| KANGOO MUX | Airbag / Pretensioners(SRS) | √ | √ | √ | | | | |
| KANGOO MUX | Automatic Gearbox(AT) | √ | √ | √ | | | | |
| KANGOO MUX | Engine(petrol) | √ | √ | √ | | | | |

| | | | | | | | | |
|-----------------------------|-----------------------------|---|---|---|---|---|---|---|
| KANGOO VLL | Injection | √ | √ | √ | √ | √ | √ | 0529, 0450, 0771, 0482, 0531, 0553, 0428, 0535, 0524 |
| KANGOO VLL | Anti-lock Brake System(ABS) | √ | √ | √ | √ | | √ | 0428, 0631, 0649, 0658 |
| KANGOO VLL | UCH | √ | √ | √ | √ | | √ | 0352, 0428 |
| KANGOO VLL | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | | 0302, 0428, 0645, 0660, 0668 |
| KANGOO VLL | VARIABLE P.A.S. | √ | √ | √ | √ | | | 0428, 0639 |
| KANGOO VLL | Tracker | √ | √ | √ | √ | | | 0012, 0415, 0428 |
| KANGOO ZE - StopStart - ph2 | Injection | √ | √ | √ | √ | √ | √ | 0580, 0581, 0819, 0537, 0288, 0771, 0573, 0572, 0531, 0575, 0530, 0574, 0535, 0579, 0534, 0590, 0593, 0471, 0592, 0580, 0428, 0505, 0827, 0828, 0584, 0583, 0542, 0586, 0541, 0585, 0544, 0588, 0543, 0589, 0560, 0482, 0438, 0558, 0836, 0838, 0837, 0839, 0551, 0595, 0550, 0594, 0597, 0596, 0555, 0599, 0554, 0598, 0513, 0556, 0450, 0571, 0570, 0847, 0529, 0848, 0562, 0561, 0564, 0841, 0521, 0565, |
| KANGOO ZE - StopStart - ph2 | Anti-lock Brake System(ABS) | √ | √ | √ | √ | √ | √ | 0490, 0492, 0490, 0658, 0745, 0649, 0428, 0738, 0507, 0486, 0786, 0428, 0631, 0741, 0787 |
| KANGOO ZE - StopStart - ph2 | Instrument Panel | √ | √ | √ | √ | | √ | 0780, 0093, 0290, 0812, 0811, 0672, 0231, 0297, 0775, 0678, 0810, 0655, 0290, 0291, 0093, 0809, 0646, 0428, 0705, 0243, 0782, 0264, 0245, 0784, 0665 |
| KANGOO ZE - StopStart - ph2 | UCH | √ | √ | √ | √ | | √ | 0428, 0508, 0354, 0354, 0428 |
| KANGOO ZE - StopStart - ph2 | Air Conditioning(AC) | √ | √ | √ | √ | | √ | 0625, 0106, 0428 |
| KANGOO ZE - StopStart - ph2 | Automatic Gearbox(AT) | √ | √ | √ | √ | √ | √ | 0461, 0493, 0461, 0504, 0757, 0748, 0758, 0519, 0454, 0454, 0511, 0752, 0502, 0656, 0755, 0666 |
| KANGOO ZE - StopStart - ph2 | VARIABLE P.A.S. | √ | √ | √ | √ | | | 0183, 0428, 0630, 0639 |
| KANGOO ZE - StopStart - ph2 | UPC | √ | √ | √ | √ | | √ | 0141, 0494, 0715, 0671, 0693, 0751, 0698, 0158, 0499, 0457, 0677, 0494, 0141, 0648, 0747, 0428, 0706, 0749, 0682, 0640, 0664, 0686, 0689, 0744, 0501 |
| KANGOO ZE - StopStart - ph2 | Tyres | √ | √ | √ | √ | √ | | 0440 |
| KANGOO ZE - StopStart - ph2 | Charge Controller | √ | √ | √ | √ | √ | | 0428 |
| KANGOO ZE - StopStart - ph2 | Parking PROX CAN | √ | √ | √ | √ | | √ | 0614, 0428, 0071, 0082, 0003, 0045, 0077 |

| | | | | | | | | |
|-----------------------------|-----------------------------|---|---|---|---|---|---|--|
| KANGOO ZE - StopStart - ph2 | RADIO | √ | √ | √ | √ | | √ | 0182, 0087, 0087, 0182, 0629, 0452, 0176, 0055, 0465, 0035, 0112, 0049, 0469, 0622, 0105 |
| KANGOO ZE - StopStart - ph2 | Telematic CTRL Unit | √ | √ | √ | √ | | √ | 0426, 0717, 0452, 0426, 0458, 0699 |
| KANGOO ZE - StopStart - ph2 | Urea Dosing Control Module | √ | √ | √ | √ | √ | √ | 0461, 0484, 0794, 0795, 0797, 0799, 0801, 0803 |
| KANGOO ZE - StopStart - ph2 | BCB | √ | √ | √ | √ | √ | √ | 0428 |
| KANGOO ZE - StopStart - ph2 | BMS | √ | √ | √ | √ | √ | | 0701, 0428, 0445, 0428, 0455, 0620, 0701 |
| KANGOO ZE - StopStart - ph2 | EVC | √ | √ | √ | √ | √ | √ | 0026, 0604, 0637, 0813, 0481, 0431, 0460, 0452, 0473, 0431, 0477, 0435 |
| KANGOO ZE - StopStart - ph2 | PEB | √ | √ | √ | √ | √ | | 0442, 0428 |
| KANGOO ZE - StopStart - ph2 | BMS SAFETY | √ | √ | √ | √ | √ | | 0428, 0619, 0428 |
| KANGOO ZE - StopStart - ph2 | Communications Unit | √ | √ | √ | √ | | √ | 0017, 0090, 0129, 0437, 0606, 0161, 0461, 0159 |
| KANGOO ZE - StopStart - ph2 | Multimedia Interface | √ | √ | √ | √ | | √ | 0428 |
| KANGOO ZE - StopStart - ph2 | Multimedia Connection | √ | √ | √ | √ | | | 0428, 0437, 0606 |
| KANGOO ZE - StopStart - ph2 | Adaptation Unit | √ | √ | √ | √ | | | 0428 |
| KANGOO ZE - StopStart - ph2 | Parking Assistance | √ | √ | √ | √ | | √ | 0614, 0428, 0003, 0045, 0003, 0614 |
| KANGOO ZE - StopStart - ph2 | Heater | √ | √ | √ | √ | | | 0427, 0439, 0461 |
| KOLEOS - QM5 | Injection | √ | √ | √ | √ | √ | √ | 0471, 0681, 0808, 0526, 0525, 0814, 0428, 0527, 0807, 0771, 0495, 0428, 0532, 0821, 0776 |
| KOLEOS - QM5 | Anti-lock Brake System(ABS) | √ | √ | √ | √ | | √ | 0428, 0774 |
| KOLEOS - QM5 | UCH | √ | √ | √ | √ | √ | √ | 0080, 0360, 0062, 0350, 0053, 0218, 0107, 0327, 0349, 0428, 0265, 0496, 0355, 0134, 0189, 0277, 0227, 0127 |
| KOLEOS - QM5 | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | | 0428 |
| KOLEOS - QM5 | Automatic Gearbox(AT) | √ | √ | √ | √ | | | 0739, 0461, 0461, 0739 |
| KOLEOS - QM5 | Gas Injection | √ | √ | √ | √ | √ | √ | 0049, 0428, 0444, 0694, 0704, 0711 |
| KOLEOS - QM5 | Blind Spot Detection | √ | √ | √ | √ | | √ | 0007, 0428 |
| KOLEOS - QM5 | VARIABLE P.A.S. | √ | √ | √ | √ | | | 0428 |
| KOLEOS - QM5 | UPC | √ | √ | √ | √ | | √ | 0428 |
| KOLEOS - QM5 | Tyres | √ | √ | √ | √ | √ | √ | 0052, 0440, 0683, 0440, 0052 |
| KOLEOS - QM5 | 4 Wheels Drive(4WD) | √ | √ | √ | √ | | | 0428 |
| KOLEOS - QM5 | Parking PROX CAN | √ | √ | √ | √ | | | 0003, 0045, 0047, 0057, 0061, 0069, 0428, 0649 |
| KOLEOS - QM5 | Auto Front Lighting | √ | √ | √ | √ | | √ | 0428, 0603 |
| KOLEOS - QM5 | Telematic CTRL Unit | √ | √ | √ | √ | | √ | 0426, 0025, 0452 |

| | | | | | | | | |
|-----------------|------------------------------------|---|---|---|---|---|---|--|
| KOLEOS - QM5 | Communications Unit | √ | √ | √ | √ | | √ | 0129, 0437, 0428, 0181, 0606, 0461, 0110, 0110, 0014, 0145, 0147, 0437 |
| KOLEOS - QM5 | RADIO | √ | √ | √ | √ | | √ | 0087, 0075, 0090, 0081, 0735, 0723, 0469, 0737, 0728, 0452, 0055, 0465, 0035, 0469, 0622 |
| KOLEOS - QM5 | Multimedia Interface | √ | √ | √ | √ | | √ | 0428, 0014, 0051, 0021, 0021, 0049, 0059, 0029 |
| KOLEOS - QM5 | Amplifier | √ | √ | √ | √ | | √ | 0016, 0048, 0428, 0456, 0622 |
| KOLEOS - QM5 | Multimedia Connection | √ | √ | √ | √ | | | 0013, 0428, 0606 |
| KOLEOS - QM5 | Discharge Lamp | √ | √ | √ | √ | | √ | 0679, 0659, 0428, 0670, 0708, 0428, 0679, 0700 |
| KOLEOS II - QM6 | Injection | √ | √ | √ | √ | √ | √ | 0580, 0617, 0771, 0531, 0535, 0579, 0593, 0471, 0592, 0580, 0505, 0626, 0428, 0542, 0541, 0783, 0544, 0589, 0482, 0558, 0836, 0838, 0837, 0839, 0551, 0595, 0594, 0597, 0596, 0555, 0599, 0428, 0513, 0557, 0556, 0450, 0570, 0845, 0602, 0846, 0529, 0608, 0562, 0561, 0288, 0563, 0566, 0565, 0840, 0568, 0842, 0567, 0840, 0600 |
| KOLEOS II - QM6 | Anti-lock Brake System(ABS) | √ | √ | √ | √ | √ | √ | 0658, 0490, 0649, 0492, 0507, 0498, 0486, 0428, 0621, 0786, 0787 |
| KOLEOS II - QM6 | UCH | √ | √ | √ | √ | √ | √ | 0381, 0084, 0351, 0383, 0084, 0405, 0028, 0107, 0327, 0404, 0406, 0428, 0374, 0385, 0410, 0398, 0324, 0379, 0403, 0028, 0358 |
| KOLEOS II - QM6 | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | √ | 0428, 0372, 0660, 0645 |
| KOLEOS II - QM6 | Front Radar | √ | √ | √ | √ | | | 0428 |
| KOLEOS II - QM6 | Air Conditioning(AC) | √ | √ | √ | √ | | √ | 0428, 0433, 0634 |
| KOLEOS II - QM6 | Automatic Gearbox(AT) | √ | √ | √ | √ | | | |
| KOLEOS II - QM6 | Gas Injection | √ | √ | √ | √ | √ | | 0428, 0714, 0720, 0731 |
| KOLEOS II - QM6 | VARIABLE P.A.S. | √ | √ | √ | √ | √ | | 0428 |
| KOLEOS II - QM6 | UPC | √ | √ | √ | √ | | √ | 0144, 0164, 0457, 0494, 0506, 0512, 0651, 0754 |
| KOLEOS II - QM6 | Power Back Door | √ | √ | √ | √ | | | 0009, 0428 |
| KOLEOS II - QM6 | 4 Wheels Drive(4WD) | √ | √ | √ | √ | | | 0428 |
| KOLEOS II - QM6 | Parking PROX CAN | √ | √ | √ | √ | | √ | |
| KOLEOS II - QM6 | Driver's Seat | √ | √ | √ | √ | | √ | 0428 |
| KOLEOS II - QM6 | Front Camera | √ | √ | √ | √ | √ | | 0657, 0428 |
| KOLEOS II - QM6 | RADIO | √ | √ | √ | √ | | √ | 0172, 0087, 0087, 0090, 0779, 0179, 0465, 0487, 0112, 0178, 0475, 0469, 0779 |
| KOLEOS II - QM6 | Telematic CTRL Unit | √ | √ | √ | √ | | √ | 0426, 0717, 0452, 0426, 0458, 0699 |
| KOLEOS II - QM6 | Urea Dosing Control Module | √ | √ | √ | √ | √ | √ | 0461, 0484, 0794, 0795, 0797, 0799, 0801, 0803 |
| KOLEOS II - QM6 | Left - Hand Door or Passenger Seat | √ | √ | √ | √ | | √ | 0428 |
| KOLEOS II - QM6 | Multimedia Interface | √ | √ | √ | √ | | √ | 0437, 0448, 0469 |
| KOLEOS II - QM6 | Amplifier | √ | √ | √ | √ | | √ | 0060, 0428, 0456 |

| | | | | | | | | |
|--------------------------|------------------------------------|---|---|---|---|---|---|---|
| KOLEOS II CN - QM6 CN | Injection | √ | √ | √ | √ | √ | √ | 0428, 0529, 0531, 0567, 0580, 0840, 0845, 0846 |
| KOLEOS II CN - QM6 CN | Anti-lock Brake System(ABS) | √ | √ | √ | √ | √ | √ | 0658, 0490, 0649, 0492, 0507, 0498, 0486, 0428, 0621, 0786, 0787 |
| KOLEOS II CN - QM6 CN | Instrument Panel | √ | √ | √ | √ | | √ | 0292, 0093, 0428, 0241, 0020, 0020, 0264, 0245, 0292, 0248 |
| KOLEOS II CN - QM6 CN | UCH | √ | √ | √ | √ | √ | √ | 0381, 0084, 0351, 0383, 0084, 0405, 0028, 0107, 0327, 0404, 0406, 0428, 0374, 0385, 0410, 0398, 0324, 0379, 0403, 0028, 0358 |
| KOLEOS II CN - QM6 CN | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | √ | 0428, 0372, 0660, 0645 |
| KOLEOS II CN - QM6 CN | Front Radar | √ | √ | √ | √ | | | 0428 |
| KOLEOS II CN - QM6 CN | Air Conditioning(AC) | √ | √ | √ | √ | | √ | 0428, 0433, 0634 |
| KOLEOS II CN - QM6 CN | Automatic Gearbox(AT) | √ | √ | √ | √ | | | |
| KOLEOS II CN - QM6 CN | VARIABLE P.A.S. | √ | √ | √ | √ | √ | | 0428 |
| KOLEOS II CN - QM6 CN | UPC | √ | √ | √ | √ | | √ | 0144, 0164, 0457, 0494, 0506, 0512, 0651, 0754 |
| KOLEOS II CN - QM6 CN | Power Back Door | √ | √ | √ | √ | | | 0009, 0428 |
| KOLEOS II CN - QM6 CN | 4 Wheels Drive(4WD) | √ | √ | √ | √ | | | 0428 |
| KOLEOS II CN - QM6 CN | Parking PROX CAN | √ | √ | √ | √ | | √ | |
| KOLEOS II CN - QM6 CN | Driver's Seat | √ | √ | √ | √ | | √ | 0428 |
| KOLEOS II CN - QM6 CN | Front Camera | √ | √ | √ | √ | | | |
| KOLEOS II CN - QM6 CN | RADIO | √ | √ | √ | √ | | √ | 0779, 0172, 0087, 0179, 0465, 0487, 0112, 0178, 0090, 0469 |
| KOLEOS II CN - QM6 CN | Telematic CTRL Unit | √ | √ | √ | √ | | √ | 0426, 0717, 0452, 0426, 0458, 0699 |
| KOLEOS II CN - QM6 CN | Left - Hand Door or Passenger Seat | √ | √ | √ | √ | | √ | 0428 |
| KOLEOS II CN - QM6 CN | Multimedia Interface | √ | √ | √ | √ | | √ | 0437 |
| KOLEOS II CN - QM6 CN | Amplifier | √ | √ | √ | √ | | √ | 0060, 0428, 0456 |
| KWID | Injection | √ | √ | √ | √ | √ | √ | 0450, 0582, 0482, 0582, 0450, 0438, 0844, 0529, 0771, 0531, 0553, 0840, 0851, 0535 |
| KWID | Anti-lock Brake System(ABS) | √ | √ | √ | √ | √ | √ | 0428, 0507, 0649, 0658 |
| KWID | Instrument Panel | √ | √ | √ | √ | √ | √ | 0292, 0428, 0263, 0292, 0678 |
| KWID | UCH | √ | √ | √ | √ | √ | √ | 0428 |
| KWID | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | √ | 0703, 0428, 0174, 0660, 0428, 0645 |

| | | | | | | | | |
|-----------|-----------------------------|---|---|---|---|---|---|--|
| KWID | VARIABLE P.A.S. | √ | √ | √ | √ | | | 0428 |
| KWID | RADIO | √ | √ | √ | √ | | √ | 0087, 0465, 0112, 0469, 0622 |
| KWID BR | Injection | √ | √ | √ | √ | √ | √ | 0450, 0582, 0482, 0582, 0450, 0844, 0529, 0771, 0531, 0553, 0840, 0851, 0535 |
| KWID BR | Anti-lock Brake System(ABS) | √ | √ | √ | √ | √ | √ | 0658, 0649, 0507, 0428 |
| KWID BR | Instrument Panel | √ | √ | √ | √ | √ | √ | 0093, 0245, 0254, 0278, 0292, 0428, 0678 |
| KWID BR | UCH | √ | √ | √ | √ | √ | √ | 0107, 0327, 0358, 0428 |
| KWID BR | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | √ | 0428, 0703, 0174, 0660, 0428, 0645 |
| KWID BR | VARIABLE P.A.S. | √ | √ | √ | √ | | | 0428 |
| KWID BR | RADIO | √ | √ | √ | √ | | √ | 0087, 0465, 0112, 0469, 0622 |
| KWID BR | Multimedia Interface | √ | √ | √ | √ | | | 0428 |
| LAGUNA | Injection | √ | √ | √ | | | | |
| LAGUNA | Anti-lock Brake System(ABS) | √ | √ | √ | | | | |
| LAGUNA | Instrument Panel | √ | √ | √ | | | | |
| LAGUNA | UCH | √ | √ | √ | | | | |
| LAGUNA | Airbag / Pretensioners(SRS) | √ | √ | √ | | | | |
| LAGUNA | Air Conditioning(AC) | √ | √ | √ | | | | |
| LAGUNA | Voice Synthesiser | √ | √ | √ | | | | |
| LAGUNA | VARIABLE P.A.S. | √ | √ | √ | | | | |
| LAGUNA | Driver's Seat | √ | √ | √ | | | | |
| LAGUNA II | Instrument Panel | √ | √ | √ | √ | | √ | 0261, 0260, 0241, 0262, 0680, 0163, 0254, 0672, 0231, 0253, 0135, 0256, 0255, 0258, 0257, 0678, 0655, 0259, 0092, 0093, 0250, 0251, 0163, 0160, 0646, 0428, 0243, 0287, 0242, 0146, 0245, 0244, 0148, 0247, 0665, 0246 |
| LAGUNA II | Injection | √ | √ | √ | √ | | √ | 0115, 0681, 0482, 0471, 0771, 0652, 0123, 0524, 0776 |
| LAGUNA II | Anti-lock Brake System(ABS) | √ | √ | √ | √ | | √ | 0658, 0649, 0428, 0185, 0187 |
| LAGUNA II | UCH | √ | √ | √ | √ | | √ | 0080, 0240, 0210, 0212, 0234, 0211, 0695, 0238, 0193, 0195, 0073, 0095, 0130, 0196, 0062, 0107, 0228, 0428, 0067, 0221, 0441, 0661, 0201, 0104, 0269, 0224, 0268, 0205, 0227, 0127, 0204 |
| LAGUNA II | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | | 0668, 0428, 0372, 0372, 0660, 0668, 0645 |
| LAGUNA II | Air Conditioning(AC) | √ | √ | √ | √ | | √ | 0217, 0428, 0170, 0184, 0157, 0184, 0214, 0217, 0216 |
| LAGUNA II | Automatic Gearbox(AT) | √ | √ | √ | √ | | √ | 0461, 0483, 0461, 0702, 0713, 0429, 0409, 0408, 0476, 0674, 0467, 0412, 0414, 0413 |
| LAGUNA II | Engine(petrol) | √ | √ | √ | √ | | √ | 0428 |
| LAGUNA II | Discharge Lamp | √ | √ | √ | √ | | √ | 0005, 0428, 0030, 0030 |
| LAGUNA II | Parking Assistance | √ | √ | √ | √ | | | 0614, 0428, 0041, 0003, 0045, 0003, 0614 |

| | | | | | | | | |
|---------------|-----------------------------|---|---|---|---|---|---|--|
| LAGUNA II | Heater | √ | √ | √ | √ | | √ | 0427, 0439, 0461 |
| LAGUNA II ph2 | Injection | √ | √ | √ | √ | | √ | 0428, 0681, 0482, 0471, 0771, 0471, 0770, 0652, 0428, 0532, 0776 |
| LAGUNA II ph2 | Instrument Panel | √ | √ | √ | √ | | √ | 0261, 0260, 0241, 0262, 0680, 0163, 0254, 0672, 0231, 0253, 0135, 0256, 0255, 0258, 0257, 0678, 0655, 0259, 0092, 0093, 0250, 0251, 0163, 0160, 0646, 0428, 0243, 0287, 0242, 0146, 0245, 0244, 0148, 0247, 0665, 0246 |
| LAGUNA II ph2 | Lighting | √ | √ | √ | √ | | √ | 0014, 0018, 0023, 0033, 0040, 0428, 0612 |
| LAGUNA II ph2 | Communications Unit | √ | √ | √ | √ | | √ | 0449, 0437, 0428, 0014, 0628, 0428 |
| LAGUNA II ph2 | RADIO | √ | √ | √ | √ | | √ | 0090, 0109, 0452, 0452, 0430, 0622 |
| LAGUNA II ph2 | Anti-lock Brake System(ABS) | √ | √ | √ | √ | | √ | 0490, 0492, 0186, 0186, 0658, 0649, 0428, 0738, 0760, 0762, 0486, 0631, 0741, 0658 |
| LAGUNA II ph2 | UCH | √ | √ | √ | √ | | √ | 0062, 0240, 0218, 0210, 0212, 0234, 0134, 0211, 0695, 0236, 0238, 0138, 0193, 0195, 0095, 0293, 0073, 0197, 0274, 0053, 0130, 0196, 0080, 0207, 0107, 0206, 0228, 0428, 0067, 0441, 0661, 0221, 0121, 0201, 0104, 0203, 0269, 0224, 0268, 0205, 0227, 0127, 0204 |
| LAGUNA II ph2 | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | | |
| LAGUNA II ph2 | Air Conditioning(AC) | √ | √ | √ | √ | | √ | |
| LAGUNA II ph2 | Automatic Gearbox(AT) | √ | √ | √ | √ | | √ | 0461, 0467, 0702, 0713 |
| LAGUNA II ph2 | Gas Injection | √ | √ | √ | √ | | √ | 0049, 0428 |
| LAGUNA II ph2 | Parking Assistance | √ | √ | √ | √ | | | 0614, 0428, 0041, 0003, 0045, 0003, 0614 |
| LAGUNA II ph2 | Heater | √ | √ | √ | √ | | √ | 0427, 0439, 0461 |
| LAGUNA III | Injection | √ | √ | √ | √ | √ | √ | 0450, 0438, 0537, 0536, 0558, 0539, 0836, 0838, 0837, 0839, 0771, 0551, 0495, 0696, 0531, 0553, 0530, 0428, 0513, 0535, 0237, 0776, 0534, 0450, 0471, 0822, 0428, 0505, 0529, 0826, 0540, 0561, 0542, 0464, 0541, 0544, 0565, 0821, 0567 |
| LAGUNA III | Anti-lock Brake System(ABS) | √ | √ | √ | √ | √ | √ | 0658, 0649, 0490, 0428, 0492, 0486, 0428, 0658, 0787 |
| LAGUNA III | Instrument Panel | √ | √ | √ | √ | | √ | 0093, 0428, 0241, 0231, 0264, 0245, 0255, 0428, 0093, 0248 |
| LAGUNA III | UCH | √ | √ | √ | √ | √ | √ | 0428, 0210, 0661, 0376 |
| LAGUNA III | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | | 0372, 0428, 0645, 0660, 0730 |
| LAGUNA III | Air Conditioning(AC) | √ | √ | √ | √ | | √ | 0106, 0428, 0618, 0625 |
| LAGUNA III | Automatic Gearbox(AT) | √ | √ | √ | √ | √ | √ | 0461, 0493, 0493, 0504, 0757, 0429, 0748, 0758, 0454, 0752, 0429, 0502, 0755, 0666 |

| | | | | | | | | |
|----------------|---------------------------------------|---|---|---|---|---|---|--|
| LAGUNA III | Gas Injection | √ | √ | √ | √ | √ | √ | 0428, 0685 |
| LAGUNA III | VARIABLE P.A.S. | √ | √ | √ | √ | √ | | 0428, 0644 |
| LAGUNA III | Lighting | √ | √ | √ | √ | | √ | 0428, 0612 |
| LAGUNA III | 4 Wheels Steering | √ | √ | √ | √ | √ | √ | 0428, 0627, 0636 |
| LAGUNA III | Parking PROX CAN | √ | √ | √ | √ | | √ | 0428, 0071, 0082, 0045, 0077, 0003, 0047, 0057, 0614 |
| LAGUNA III | Driver's Door | √ | √ | √ | √ | | √ | 0428 |
| LAGUNA III | Passenger's Door | √ | √ | √ | √ | | √ | 0428 |
| LAGUNA III | Driver's Seat | √ | √ | √ | √ | | | 0428, 0610 |
| LAGUNA III | Telematic CTRL Unit | √ | √ | √ | √ | | √ | |
| LAGUNA III | Left - Hand Door or Passenger Seat | √ | | | | | | 0601 |
| LAGUNA III | Right - Hand Door or Collapsible Seat | √ | | | | | | 0015, 0601 |
| LAGUNA III | Communications Unit | √ | √ | √ | √ | | √ | 0017, 0129, 0437, 0428, 0606, 0161, 0461, 0159, 0090 |
| LAGUNA III | RADIO | √ | √ | √ | √ | | √ | 0087, 0087, 0109, 0629, 0035, 0430, 0452, 0055, 0465, 0035, 0112, 0436, 0469, 0622, 0105 |
| LAGUNA III | Multimedia Interface | √ | √ | √ | √ | | √ | 0428, 0021, 0029 |
| LAGUNA III | Amplifier | √ | √ | √ | √ | | √ | 0011, 0428, 0456, 0622 |
| LAGUNA III | Multimedia Connection | √ | √ | √ | √ | | | 0428, 0437, 0606 |
| LAGUNA phase 2 | Injection | √ | √ | √ | | | | |
| LAGUNA phase 2 | Anti-lock Brake System(ABS) | √ | √ | √ | | | | |
| LAGUNA phase 2 | Instrument Panel | √ | √ | √ | | | | |
| LAGUNA phase 2 | UCH | √ | √ | √ | | | | |
| LAGUNA phase 2 | Airbag / Pretensioners(SRS) | √ | √ | √ | | | | |
| LAGUNA phase 2 | Air Conditioning(AC) | √ | √ | √ | | | | |
| LAGUNA phase 2 | Automatic Gearbox(AT) | √ | √ | √ | | | | |
| LAGUNA phase 2 | Voice Synthesiser | √ | √ | √ | | | | |
| LAGUNA phase 2 | Engine(petrol) | √ | √ | √ | | | | |
| LAGUNA phase 2 | VARIABLE P.A.S. | √ | √ | √ | | | | |
| LAGUNA phase 2 | Driver's Seat | √ | √ | √ | | | | |
| LATITUDE - SM5 | Injection | √ | √ | √ | √ | √ | √ | 0450, 0471, 0790, 0482, 0537, 0526, 0536, 0525, 0539, 0428, 0527, 0824, 0529, 0771, 0485, 0495, 0531, 0553, 0544, 0428, 0532, 0821, 0776, 0479 |
| LATITUDE - SM5 | Anti-lock Brake System(ABS) | √ | √ | √ | √ | √ | √ | 0658, 0649, 0490, 0428, 0492, 0486, 0621, 0428, 0658 |
| LATITUDE - SM5 | UCH | √ | √ | √ | √ | √ | √ | 0368, 0428, 0661, 0428 |
| LATITUDE - SM5 | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | | 0372, 0428, 0645, 0660 |
| LATITUDE - SM5 | Air Conditioning(AC) | √ | √ | √ | √ | | √ | 0625, 0106, 0428, 0428 |
| LATITUDE - SM5 | Automatic Gearbox(AT) | √ | √ | √ | √ | √ | √ | 0461, 0493, 0461, 0504, 0757, 0748, 0758, 0519, 0674, 0454, 0511, 0752, 0502, 0656, 0755, 0666 |
| LATITUDE - SM5 | Gas Injection | √ | √ | √ | √ | √ | √ | 0428, 0685 |
| LATITUDE - SM5 | Blind Spot Detection | √ | √ | √ | √ | | √ | 0428 |

| | | | | | | | | |
|----------------|---------------------------------------|---|---|---|---|---|---|--|
| LATITUDE - SM5 | VARIABLE P.A.S. | √ | √ | √ | √ | √ | | 0428 |
| LATITUDE - SM5 | UPC | √ | √ | √ | √ | | √ | 0428, 0648, 0141, 0144, 0141, 0651, 0648, 0457 |
| LATITUDE - SM5 | Lighting | √ | √ | √ | √ | | √ | 0428, 0612 |
| LATITUDE - SM5 | Parking PROX CAN | √ | √ | √ | √ | | √ | 0614, 0071, 0082, 0428, 0045, 0077, 0003, 0047, 0057, 0428, 0614 |
| LATITUDE - SM5 | Driver's Door | √ | √ | √ | √ | | √ | 0428 |
| LATITUDE - SM5 | Passenger's Door | √ | √ | √ | √ | | √ | 0428 |
| LATITUDE - SM5 | Driver's Seat | √ | √ | √ | √ | | | 0428, 0610 |
| LATITUDE - SM5 | Telematic CTRL Unit | √ | √ | √ | √ | | √ | 0426, 0717, 0452, 0426, 0458, 0699 |
| LATITUDE - SM5 | Left - Hand Door or Passenger Seat | √ | | | √ | | | 0601 |
| LATITUDE - SM5 | Right - Hand Door or Collapsible Seat | √ | | | √ | | | 0601 |
| LATITUDE - SM5 | Communications Unit | √ | √ | √ | √ | | √ | 0017, 0129, 0437, 0428, 0606, 0161, 0461, 0154, 0159, 0090 |
| LATITUDE - SM5 | RADIO | √ | √ | √ | √ | | √ | 0182, 0087, 0087, 0182, 0452, 0055, 0176, 0465, 0035, 0112, 0469, 0436, 0105, 0622 |
| LATITUDE - SM5 | Multimedia Interface | √ | √ | √ | √ | | √ | 0021, 0029, 0428 |
| LATITUDE - SM5 | Amplifier | √ | √ | √ | √ | | √ | 0011, 0428, 0456, 0622 |
| LATITUDE - SM5 | Multimedia Connection | √ | √ | √ | √ | | | 0428, 0437, 0606 |
| LODGY | Anti-lock Brake System(ABS) | √ | √ | √ | √ | √ | √ | 0658, 0490, 0649, 0492, 0498, 0486, 0428, 0621, 0787 |
| LODGY | Instrument Panel | √ | √ | √ | √ | | √ | 0292, 0093, 0262, 0093, 0292, 0825, 0428, 0254, 0264, 0245, 0278, 0321, 0255, 0346, 0678, 0248 |
| LODGY | UCH | √ | √ | √ | √ | √ | √ | 0107, 0327, 0767, 0407, 0428, 0516, 0509, 0385, 0520, 0773, 0522, 0411, 0767, 0327, 0358, 0523 |
| LODGY | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | √ | 0660, 0428, 0645 |
| LODGY | Automatic Gearbox(AT) | √ | √ | √ | √ | √ | √ | 0713, 0517, 0769, 0518, 0461, 0461, 0674, 0761, 0467, 0511, 0702 |
| LODGY | VARIABLE P.A.S. | √ | √ | √ | √ | | | 0428, 0639 |
| LODGY | RADIO | √ | √ | √ | √ | | √ | 0182, 0087, 0452, 0176, 0465, 0112, 0182, 0469, 0622 |
| LODGY | Urea Dosing Control Module | √ | √ | √ | √ | √ | √ | 0461, 0484, 0794, 0795, 0797, 0799, 0801, 0803 |
| LODGY | Hands - Fress Module | √ | √ | √ | √ | √ | √ | 0128, 0428 |
| LODGY | Multimedia Interface | √ | √ | √ | √ | | √ | 0428 |
| LOGAN | Injection | √ | √ | √ | √ | √ | √ | 0482, 0482, 0450, 0537, 0428, 0529, 0771, 0551, 0531, 0553, 0544, 0577, 0543, 0576, 0535, 0524, 0237, 0578 |
| LOGAN | Automatic Gearbox(AT) | √ | √ | √ | √ | | √ | 0702, 0713, 0461, 0674, 0467 |
| LOGAN | RADIO | √ | √ | √ | √ | | √ | 0081, 0087, 0707, 0452, 0465, 0112, 0469, 0081, 0622 |
| LOGAN | Anti-lock Brake System(ABS) | √ | √ | √ | √ | | √ | 0658, 0649, 0428, 0631 |
| LOGAN | UCH | √ | √ | √ | √ | | √ | 0428, 0267, 0352, 0267, 0428 |
| LOGAN | Engine(petrol) | √ | √ | √ | √ | | √ | 0428 |

| | | | | | | | | |
|-----------------------|-----------------------------|---|---|---|---|---|---|---|
| LOGAN | VARIABLE P.A.S. | √ | √ | √ | √ | | √ | 0428, 0639, 0194, 0428, 0050 |
| LOGAN | Tracker | √ | √ | √ | √ | | | 0012, 0415, 0428 |
| LOGAN II - SANDERO II | Injection | √ | √ | √ | √ | √ | √ | 0580, 0582, 0581, 0819, 0537, 0538, 0617, 0771, 0573, 0572, 0531, 0575, 0574, 0530, 0577, 0535, 0579, 0534, 0590, 0471, 0580, 0548, 0547, 0428, 0505, 0549, 0626, 0827, 0829, 0828, 0584, 0583, 0102, 0542, 0586, 0585, 0464, 0541, 0544, 0588, 0543, 0587, 0546, 0560, 0284, 0482, 0438, 0558, 0836, 0838, 0837, 0839, 0551, 0550, 0553, 0555, 0830, 0554, 0598, 0513, 0556, 0237, 0450, 0571, 0570, 0237, 0602, 0847, 0529, 0848, 0608, 0562, 0561, 0564, 0841, 0566, 0565, 0840, |
| LOGAN II - SANDERO II | Anti-lock Brake System(ABS) | √ | √ | √ | √ | √ | √ | 0658, 0490, 0649, 0492, 0507, 0486, 0428, 0621, 0786, 0787 |
| LOGAN II - SANDERO II | Instrument Panel | √ | √ | √ | √ | | √ | 0292, 0093, 0262, 0093, 0292, 0825, 0428, 0254, 0264, 0245, 0278, 0321, 0255, 0346, 0678, 0248 |
| LOGAN II - SANDERO II | UCH | √ | √ | √ | √ | √ | √ | 0327, 0767, 0107, 0407, 0428, 0516, 0509, 0385, 0520, 0773, 0522, 0411, 0107, 0327, 0358, 0523, 0138 |
| LOGAN II - SANDERO II | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | √ | 0660, 0428, 0645 |
| LOGAN II - SANDERO II | Air Conditioning(AC) | √ | √ | √ | √ | | √ | 0625, 0428, 0428, 0433, 0642, 0634, 0625, 0446 |
| LOGAN II - SANDERO II | Automatic Gearbox(AT) | √ | √ | √ | √ | √ | √ | 0702, 0517, 0769, 0518, 0461, 0461, 0674, 0761, 0511, 0467, 0713 |
| LOGAN II - SANDERO II | VARIABLE P.A.S. | √ | √ | √ | √ | | | 0428, 0639 |
| LOGAN II - SANDERO II | UPC | √ | √ | √ | √ | | √ | 0514, 0648, 0651, 0754 |
| LOGAN II - SANDERO II | RADIO | √ | √ | √ | √ | | √ | 0182, 0087, 0452, 0176, 0465, 0112, 0182, 0469, 0622 |
| LOGAN II - SANDERO II | Telematic CTRL Unit | √ | √ | √ | √ | | √ | 0426, 0717, 0452, 0426, 0458, 0699 |
| LOGAN II - SANDERO II | Urea Dosing Control Module | √ | √ | √ | √ | √ | √ | 0461, 0484, 0794, 0795, 0797, 0799, 0801, 0803 |
| LOGAN II - SANDERO II | Hands - Fress Module | √ | √ | √ | √ | √ | √ | 0128, 0428 |
| LOGAN II - SANDERO II | Tracker | √ | √ | √ | √ | | | 0012, 0415, 0428 |
| MAST RWD ph2 | Injection | √ | √ | √ | | | | |
| MAST RWD ph2 | Anti-lock Brake System(ABS) | √ | √ | √ | | | | |
| MAST RWD ph2 | UCH | √ | √ | √ | | | | |
| MAST RWD ph2 | Airbag / Pretensioners(SRS) | √ | √ | √ | | | | |
| MAST RWD ph2 | Adaptation Unit | √ | √ | √ | | | | |

| | | | | | | | | |
|--------------|-----------------------------|---|---|---|---|---|---|--|
| MAST RWD ph3 | Injection | √ | √ | √ | √ | | √ | 0428, 0471, 0771, 0776 |
| MAST RWD ph3 | Anti-lock Brake System(ABS) | √ | √ | √ | √ | | √ | 0428, 0649, 0658 |
| MAST RWD ph3 | Communications Unit | √ | √ | √ | √ | | √ | |
| MAST RWD ph3 | UCH | √ | √ | √ | √ | | √ | 0080, 0428, 0428, 0080 |
| MAST RWD ph3 | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | | 0428, 0645, 0660, 0668 |
| MAST RWD ph3 | Adaptation Unit | √ | √ | √ | √ | | | 0428 |
| MASTER | Injection | √ | √ | √ | | | | |
| MASTER | Anti-lock Brake System(ABS) | √ | √ | √ | | | | |
| MASTER | UCH | √ | √ | √ | | | | |
| MASTER | Airbag / Pretensioners(SRS) | √ | √ | √ | | | | |
| MASTER | Piloted Suspension | √ | √ | √ | | | | |
| MASTER III | Injection | √ | √ | √ | √ | √ | √ | 0580, 0482, 0559, 0438, 0558, 0836, 0838, 0617, 0837, 0839, 0551, 0771, 0552, 0530, 0533, 0535, 0513, 0534, 0590, 0450, 0570, 0580, 0602, 0428, 0505, 0626, 0608, 0540, 0562, 0561, 0542, 0541, 0464, 0563, 0544, 0565, 0568, 0567, 0580, 0438 |
| MASTER III | Anti-lock Brake System(ABS) | √ | √ | √ | √ | √ | √ | 0490, 0492, 0085, 0490, 0658, 0649, 0428, 0507, 0078, 0078, 0486, 0621, 0786, 0787 |
| MASTER III | Instrument Panel | √ | √ | √ | √ | √ | √ | 0241, 0093, 0812, 0811, 0672, 0231, 0297, 0775, 0678, 0810, 0655, 0290, 0292, 0093, 0291, 0809, 0780, 0646, 0428, 0705, 0243, 0782, 0264, 0245, 0784, 0665, 0246, 0248 |
| MASTER III | UCH | √ | √ | √ | √ | | √ | 0428, 0508, 0354, 0354, 0428 |
| MASTER III | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | | 0341, 0372, 0428, 0645, 0660 |
| MASTER III | Front Radar | √ | √ | √ | | | | 0428 |
| MASTER III | Air Conditioning(AC) | √ | √ | √ | √ | | √ | 0625, 0618, 0428 |
| MASTER III | Automatic Gearbox(AT) | √ | √ | √ | √ | √ | √ | 0443, 0461, 0692, 0719, 0443, 0454, 0674, 0759, 0488, 0697, 0666 |
| MASTER III | Blind Spot Detection | √ | √ | √ | √ | | √ | 0428 |
| MASTER III | VARIABLE P.A.S. | √ | √ | √ | √ | | | 0083, 0428 |
| MASTER III | Tyres | √ | √ | √ | √ | √ | | 0440 |
| MASTER III | Adaptation Unit | √ | √ | √ | √ | | | 0440, 0428 |
| MASTER III | Lighting | √ | √ | √ | √ | | √ | 0428 |
| MASTER III | Charge Controller | √ | √ | √ | √ | √ | | 0428 |
| MASTER III | Parking PROX CAN | √ | √ | √ | √ | | √ | 0003, 0045, 0071, 0077, 0428, 0614 |
| MASTER III | Dashboard Adaptation Box | √ | √ | √ | √ | | | 0006, 0428 |
| MASTER III | Hands - Fress Access | √ | √ | √ | √ | | | 0462, 0469, 0727, 0734, 0736, 0742, 0746 |
| MASTER III | Front Camera | √ | √ | √ | √ | | | 0437, 0428 |
| MASTER III | RADIO | √ | √ | √ | √ | | √ | 0182, 0172, 0087, 0182, 0090, 0779, 0452, 0176, 0465, 0179, 0487, 0112, 0178, 0469, 0622 |
| MASTER III | Telematic CTRL Unit | √ | √ | √ | √ | | √ | 0426, 0717, 0452, 0426, 0458, 0699 |

| | | | | | | | | |
|----------------|-----------------------------|---|---|---|---|---|---|--|
| MASTER III | Urea Dosing Control Module | √ | √ | √ | √ | √ | √ | 0461, 0461, 0669, 0801, 0613, 0803, 0607, 0474, 0650, 0484, 0432, 0641, 0795, 0662, 0794, 0632, 0797, 0466, 0675, 0447, 0623, 0799, 0424 |
| MASTER III | BCB | √ | √ | √ | √ | √ | | |
| MASTER III | BMS | √ | √ | √ | √ | √ | | |
| MASTER III | EVC | √ | √ | √ | √ | √ | √ | 0431, 0435, 0452, 0460, 0477, 0604, 0813 |
| MASTER III | PEB | √ | √ | √ | √ | √ | | |
| MASTER III | BMS SAFETY | √ | | | | | | |
| MASTER III | Communications Unit | √ | √ | √ | √ | | √ | 0017, 0129, 0437, 0606, 0161, 0461, 0159, 0090 |
| MASTER III | Central GateWay | √ | √ | √ | √ | √ | | 0004, 0428 |
| MASTER III | Multimedia Interface | √ | √ | √ | √ | | √ | 0428, 0021, 0038, 0428, 0029 |
| MASTER III | Multimedia Connection | √ | √ | √ | √ | | | 0428, 0437, 0606 |
| MASTER III | Tracker | √ | √ | √ | √ | | | 0012, 0415, 0428 |
| MASTER III | Parking Assistance | √ | √ | √ | √ | | √ | 0614, 0428, 0003, 0045, 0003, 0614 |
| MASTER ph 2 | Injection | √ | √ | √ | | | | |
| MASTER ph 2 | Anti-lock Brake System(ABS) | √ | √ | √ | | | | |
| MASTER ph 2 | UCH | √ | √ | √ | | | | |
| MASTER ph 2 | Airbag / Pretensioners(SRS) | √ | √ | √ | | | | |
| MASTER ph 2 | Automatic Gearbox(AT) | √ | √ | √ | | | | |
| MASTER ph 2 | Adaptation Unit | √ | √ | √ | | | | |
| MASTER ph 2 | Parking PROX CAN | √ | √ | √ | | | | |
| MASTER ph 2 | Piloted Suspension | √ | √ | √ | | | | |
| MASTER ph 2 | Parking Assistance | √ | √ | √ | | | | |
| MASTER ph 3 | Communications Unit | √ | √ | √ | √ | | √ | |
| MASTER ph 3 | Anti-lock Brake System(ABS) | √ | √ | √ | √ | | √ | 0658, 0724, 0649, 0428, 0621 |
| MASTER ph 3 | UCH | √ | √ | √ | √ | | √ | 0080, 0428, 0428, 0080 |
| MASTER ph 3 | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | | 0428, 0645, 0660, 0668 |
| MASTER ph 3 | Automatic Gearbox(AT) | √ | √ | √ | √ | | √ | 0692, 0719, 0443, 0454, 0674, 0500, 0429, 0488, 0697, 0666 |
| MASTER ph 3 | Tracker | √ | √ | √ | √ | | | 0012, 0415, 0428 |
| MASTER ph 3 | Adaptation Unit | √ | √ | √ | √ | | | 0428 |
| MASTER ph 3 | Piloted Suspension | √ | √ | √ | √ | | √ | 0428 |
| MASTER ph 3 | Parking Assistance | √ | √ | √ | √ | | | 0003, 0041, 0045, 0428 |
| MASTER RWD | Injection | √ | √ | √ | | | | |
| MASTER RWD | UCH | √ | √ | √ | | | | |
| MASTER RWD | Airbag / Pretensioners(SRS) | √ | √ | √ | | | | |
| MEGANE - SCEN. | Injection | √ | √ | √ | | | | |
| MEGANE - SCEN. | Anti-lock Brake System(ABS) | √ | √ | √ | | | | |
| MEGANE - SCEN. | Airbag / Pretensioners(SRS) | √ | √ | √ | | | | |
| MEGANE - SCEN. | Air Conditioning(AC) | √ | √ | √ | | | | |
| MEGANE - SCEN. | Automatic Gearbox(AT) | √ | √ | √ | | | | |
| MEGANE - SCEN. | Engine(petrol) | √ | √ | √ | | | | |
| MEGANE - SCEN. | Tyres | √ | √ | √ | | | | |

| | | | | | | | | |
|-------------------------|-----------------------------|---|---|---|---|---|---|---|
| MEGANE - SCEN. | Sunroof Control Unit | √ | √ | √ | | | | |
| MEGANE - SCEN. | Driver's Seat | √ | √ | √ | | | | |
| MEGANE II | Injection | √ | √ | √ | √ | √ | √ | 0681, 0438, 0834, 0537, 0833, 0536, 0539, 0538, 0617, 0771, 0770, 0652, 0531, 0530, 0428, 0532, 0535, 0832, 0534, 0776, 0831, 0690, 0450, 0471, 0482, 0602, 0528, 0428, 0626, 0505, 0529, 0608, 0540, 0542, 0464, 0541, 0544, 0667, 0524 |
| MEGANE II | Anti-lock Brake System(ABS) | √ | √ | √ | √ | | √ | 0658, 0745, 0649, 0428, 0738, 0451, 0428, 0631, 0741, 0766, 0658 |
| MEGANE II | Instrument Panel | √ | √ | √ | √ | | √ | 0262, 0020, 0254, 0672, 0253, 0135, 0255, 0136, 0139, 0678, 0655, 0092, 0291, 0250, 0131, 0020, 0646, 0428, 0243, 0242, 0143, 0245, 0046, 0247, 0148, 0665, 0246, 0248 |
| MEGANE II | UCH | √ | √ | √ | √ | | √ | 0095, 0053, 0053, 0095, 0107, 0118, 0209, 0428, 0089, 0067, 0320, 0099, 0266, 0127, 0116, 0710 |
| MEGANE II | Air Conditioning(AC) | √ | √ | √ | √ | | | 0157, 0225, 0428 |
| MEGANE II | Automatic Gearbox(AT) | √ | √ | √ | √ | | √ | 0713, 0702, 0461, 0461, 0674, 0476, 0467, 0702 |
| MEGANE II | VARIABLE P.A.S. | √ | √ | √ | √ | | | 0428, 0639, 0199, 0198, 0630, 0428 |
| MEGANE II | UPC | √ | √ | √ | √ | | √ | 0428, 0001, 0428 |
| MEGANE II | Sunroof Control Unit | √ | √ | √ | √ | | √ | 0010, 0428 |
| MEGANE II | Lighting | √ | √ | √ | √ | | √ | 0014, 0018, 0023, 0040, 0428, 0612 |
| MEGANE II | Communications Unit | √ | √ | √ | √ | | √ | |
| MEGANE II | Engine(petrol) | √ | √ | √ | √ | | √ | 0428 |
| MEGANE II | Tracker | √ | √ | √ | √ | | | 0012, 0415, 0428 |
| MEGANE II | Discharge Lamp | √ | √ | √ | √ | | | 0032, 0428 |
| MEGANE II | Left COSLAD | √ | √ | √ | √ | | √ | 0005, 0030, 0032, 0428 |
| MEGANE II | Right COSLAD | √ | √ | √ | √ | | √ | 0005, 0030, 0032, 0428 |
| MEGANE II | Parking Assistance | √ | √ | √ | √ | | | 0003, 0041, 0045, 0428 |
| MEGANE III - SCENIC III | Injection | √ | √ | √ | √ | √ | √ | 0580, 0450, 0537, 0536, 0539, 0538, 0617, 0771, 0495, 0531, 0575, 0530, 0533, 0535, 0579, 0776, 0534, 0593, 0471, 0592, 0580, 0548, 0547, 0428, 0505, 0549, 0626, 0826, 0540, 0542, 0464, 0541, 0783, 0544, 0546, 0589, 0482, 0558, 0836, 0838, 0837, 0839, 0551, 0595, 0550, 0594, 0553, 0597, 0552, 0596, 0555, 0599, 0513, 0557, 0556, 0237, 0450, 0570, 0845, 0602, 0846, 0529, 0608, 0562, 0561, 0563, 0288, 0566, 0565, 0840, 0568, 0843, |
| MEGANE III - SCENIC III | Anti-lock Brake System(ABS) | √ | √ | √ | √ | √ | √ | 0658, 0649, 0490, 0428, 0492, 0498, 0486, 0428, 0658, 0787 |

| | | | | | | | | |
|-------------------------|-----------------------------|---|---|---|---|---|---|--|
| MEGANE III - SCENIC III | Instrument Panel | √ | √ | √ | √ | | √ | 0093, 0428, 0241, 0254, 0231, 0264, 0245, 0255, 0093, 0764, 0301, 0248 |
| MEGANE III - SCENIC III | UCH | √ | √ | √ | √ | √ | √ | 0316, 0371, 0428, 0729 |
| MEGANE III - SCENIC III | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | | 0372, 0428, 0645, 0660 |
| MEGANE III - SCENIC III | Air Conditioning(AC) | √ | √ | √ | √ | | √ | 0625, 0428 |
| MEGANE III - SCENIC III | Gas Injection | √ | √ | √ | √ | √ | √ | 0428, 0685, 0714, 0720 |
| MEGANE III - SCENIC III | VARIABLE P.A.S. | √ | √ | √ | √ | √ | √ | 0428, 0630 |
| MEGANE III - SCENIC III | UPC | √ | √ | √ | √ | | √ | 0494, 0141, 0715, 0648, 0428, 0706, 0671, 0682, 0693, 0428, 0698, 0499, 0664, 0686, 0689, 0457, 0501, 0677 |
| MEGANE III - SCENIC III | Sunroof Control Unit | √ | √ | √ | √ | | √ | 0615, 0428, 0434, 0428, 0624 |
| MEGANE III - SCENIC III | Lighting | √ | √ | √ | √ | | √ | 0428, 0612 |
| MEGANE III - SCENIC III | Parking PROX CAN | √ | √ | √ | √ | | √ | 0614, 0071, 0082, 0428, 0045, 0077, 0003, 0047, 0057, 0428, 0614 |
| MEGANE III - SCENIC III | Driver's Door | √ | √ | √ | √ | | √ | 0428, 0625 |
| MEGANE III - SCENIC III | Passenger's Door | √ | √ | √ | √ | | | 0428 |
| MEGANE III - SCENIC III | Driver's Seat | √ | √ | √ | √ | | | 0428, 0610 |
| MEGANE III - SCENIC III | Front Camera | √ | √ | √ | √ | | | 0437, 0428 |
| MEGANE III - SCENIC III | Telematic CTRL Unit | √ | √ | √ | √ | | √ | 0426, 0717, 0452, 0426, 0458, 0699 |
| MEGANE III - SCENIC III | Communications Unit | √ | √ | √ | √ | | √ | 0017, 0090, 0129, 0437, 0606, 0161, 0461, 0159 |
| MEGANE III - SCENIC III | RADIO | √ | √ | √ | √ | | √ | 0087, 0087, 0109, 0629, 0035, 0452, 0430, 0055, 0465, 0035, 0112, 0049, 0436, 0622, 0105 |
| MEGANE III - SCENIC III | Multimedia Interface | √ | √ | √ | √ | | √ | 0428, 0021, 0038, 0428, 0029 |
| MEGANE III - SCENIC III | Multimedia Connection | √ | √ | √ | √ | | | 0428, 0437, 0606 |

| | | | | | | | | |
|-----------|------------------------------------|---|---|---|---|---|---|---|
| MEGANE IV | Injection | √ | √ | √ | √ | √ | √ | 0580, 0582, 0581, 0288, 0617, 0771, 0573, 0572, 0531, 0575, 0850, 0574, 0535, 0579, 0591, 0590, 0593, 0471, 0592, 0580, 0505, 0626, 0428, 0829, 0542, 0541, 0783, 0544, 0589, 0482, 0559, 0438, 0558, 0836, 0838, 0837, 0839, 0551, 0595, 0594, 0550, 0597, 0596, 0555, 0599, 0830, 0554, 0598, 0513, 0557, 0556, 0450, 0570, 0845, 0602, 0846, 0849, 0529, 0608, 0562, 0561, 0288, 0563, 0566, 0565, 0840, |
| MEGANE IV | Anti-lock Brake System(ABS) | √ | √ | √ | √ | √ | √ | 0078, 0428, 0480, 0486, 0490, 0492, 0498, 0507, 0621, 0658, 0718, 0753, 0777, 0785, 0787 |
| MEGANE IV | Instrument Panel | √ | √ | √ | √ | | √ | 0292, 0093, 0428, 0241, 0020, 0020, 0264, 0245, 0292, 0248 |
| MEGANE IV | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | √ | 0428, 0372, 0660, 0645 |
| MEGANE IV | Front Radar | √ | √ | √ | √ | √ | | 0428 |
| MEGANE IV | Air Conditioning(AC) | √ | √ | √ | √ | | √ | 0428, 0433, 0634 |
| MEGANE IV | Automatic Gearbox(AT) | √ | √ | √ | √ | √ | √ | 0461, 0519, 0750, 0763 |
| MEGANE IV | Gas Injection | √ | √ | √ | √ | √ | | 0428, 0714, 0720, 0731 |
| MEGANE IV | Supervisor or DCDC | √ | √ | √ | √ | √ | √ | 0497 |
| MEGANE IV | VARIABLE P.A.S. | √ | √ | √ | √ | √ | | 0428 |
| MEGANE IV | UPC | √ | √ | √ | √ | | √ | 0144, 0164, 0457, 0494, 0506, 0512, 0651, 0754 |
| MEGANE IV | Adaptation Unit | √ | √ | √ | √ | | | 0200, 0202, 0440 |
| MEGANE IV | 4 Wheels Steering | √ | √ | √ | √ | √ | √ | 0636, 0627, 0428 |
| MEGANE IV | Parking PROX CAN | √ | √ | √ | √ | | √ | |
| MEGANE IV | Driver's Seat | √ | √ | √ | √ | | √ | 0428, 0663, 0673, 0676 |
| MEGANE IV | Front Camera | √ | √ | √ | √ | | | 0005, 0068, 0428 |
| MEGANE IV | RADIO | √ | √ | √ | √ | | √ | 0779, 0172, 0087, 0179, 0465, 0487, 0112, 0178, 0090, 0469 |
| MEGANE IV | Telematic CTRL Unit | √ | √ | √ | √ | | √ | 0426, 0717, 0452, 0426, 0458, 0699 |
| MEGANE IV | Urea Dosing Control Module | √ | √ | √ | √ | √ | √ | 0461, 0484, 0794, 0795, 0797, 0799, 0801, 0803 |
| MEGANE IV | Left - Hand Door or Passenger Seat | √ | √ | √ | √ | | √ | 0428, 0633, 0647, 0653 |
| MEGANE IV | BMS | √ | √ | √ | √ | √ | √ | 0428, 0620, 0701 |
| MEGANE IV | PEB | √ | √ | √ | √ | √ | | 0428 |
| MEGANE IV | BMS SAFETY | √ | √ | √ | | | | 0428, 0619 |
| MEGANE IV | Head up Display | √ | √ | √ | | | √ | 0428 |
| MEGANE IV | Multimedia Interface | √ | √ | √ | √ | | √ | 0437 |
| MEGANE IV | Amplifier | √ | √ | √ | √ | | √ | 0060, 0428, 0456 |

| | | | | | | | | |
|-----------------|------------------------------------|---|---|---|---|---|---|--|
| MEGANE IV SEDAN | Injection | √ | √ | √ | √ | √ | √ | 0580, 0617, 0771, 0531, 0535, 0579, 0593, 0471, 0592, 0580, 0505, 0626, 0428, 0542, 0541, 0783, 0544, 0589, 0482, 0558, 0836, 0838, 0837, 0839, 0551, 0595, 0594, 0597, 0596, 0555, 0599, 0428, 0513, 0557, 0556, 0450, 0570, 0845, 0602, 0846, 0529, 0608, 0562, 0561, 0288, 0563, 0566, 0565, 0848, 0568, 0849, 0567, 0849, 0600 |
| MEGANE IV SEDAN | Anti-lock Brake System(ABS) | √ | √ | √ | √ | √ | √ | 0078, 0428, 0480, 0486, 0490, 0492, 0498, 0507, 0621, 0658, 0718, 0753, 0777, 0785, 0787 |
| MEGANE IV SEDAN | UCH | √ | √ | √ | √ | √ | √ | 0381, 0084, 0351, 0383, 0084, 0405, 0028, 0107, 0327, 0404, 0406, 0428, 0374, 0385, 0410, 0398, 0324, 0379, 0403, 0028, 0358 |
| MEGANE IV SEDAN | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | √ | 0428, 0372, 0660, 0645 |
| MEGANE IV SEDAN | Front Radar | √ | √ | √ | √ | √ | | 0428 |
| MEGANE IV SEDAN | Air Conditioning(AC) | √ | √ | √ | √ | | √ | 0428, 0433, 0634 |
| MEGANE IV SEDAN | Automatic Gearbox(AT) | √ | √ | √ | √ | √ | √ | |
| MEGANE IV SEDAN | Gas Injection | √ | √ | √ | √ | √ | | 0428, 0714, 0720, 0731 |
| MEGANE IV SEDAN | VARIABLE P.A.S. | √ | √ | √ | √ | √ | | 0428 |
| MEGANE IV SEDAN | UPC | √ | √ | √ | √ | | √ | 0144, 0164, 0457, 0494, 0506, 0512, 0651, 0754 |
| MEGANE IV SEDAN | Parking PROX CAN | √ | √ | √ | √ | | √ | |
| MEGANE IV SEDAN | Driver's Seat | √ | √ | √ | √ | | √ | 0428, 0663, 0673, 0676 |
| MEGANE IV SEDAN | Front Camera | √ | √ | √ | √ | | | 0005, 0068, 0428 |
| MEGANE IV SEDAN | RADIO | √ | √ | √ | √ | | √ | 0779, 0172, 0087, 0179, 0465, 0487, 0112, 0178, 0090, 0469 |
| MEGANE IV SEDAN | Telematic CTRL Unit | √ | √ | √ | √ | | √ | |
| MEGANE IV SEDAN | Urea Dosing Control Module | √ | √ | √ | √ | √ | √ | 0461, 0484, 0794, 0795, 0797, 0799, 0801, 0803 |
| MEGANE IV SEDAN | Left - Hand Door or Passenger Seat | √ | √ | √ | √ | | √ | 0428, 0633, 0647, 0653 |
| MEGANE IV SEDAN | Head up Display | √ | √ | √ | | | √ | |
| MEGANE IV SEDAN | Multimedia Interface | √ | √ | √ | √ | | √ | 0437 |
| MEGANE IV SEDAN | Amplifier | √ | √ | √ | √ | | √ | 0060, 0428, 0456 |
| MODUS | Injection | √ | √ | √ | √ | √ | √ | 0438, 0602, 0428, 0626, 0690, 0617, 0471, 0608, 0464, 0428, 0667, 0438 |
| MODUS | Anti-lock Brake System(ABS) | √ | √ | √ | √ | | √ | 0658, 0745, 0649, 0428, 0738, 0451, 0428, 0631, 0741, 0766, 0658 |
| MODUS | Instrument Panel | √ | √ | √ | √ | | √ | 0291, 0093, 0254, 0672, 0231, 0253, 0255, 0772, 0678, 0655, 0093, 0291, 0250, 0294, 0768, 0646, 0726, 0428, 0243, 0242, 0245, 0148, 0247, 0665, 0246, 0721 |
| MODUS | UCH | √ | √ | √ | √ | | √ | 0218, 0107, 0209, 0428, 0095, 0053, 0114, 0213, 0138, 0215, 0710 |

| | | | | | | | | |
|----------------------------|-----------------------------|---|---|---|---|---|---|--|
| MODUS | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | | 0064, 0361, 0317, 0319, 0341, 0353, 0330, 0310, 0332, 0313, 0357, 0334, 0356, 0315, 0314, 0070, 0074, 0296, 0295, 0372, 0668, 0329, 0428, 0056, 0341, 0660, 0645, 0369 |
| MODUS | Automatic Gearbox(AT) | √ | √ | √ | √ | | √ | 0461, 0692, 0461, 0702, 0713, 0429, 0719, 0674, 0443, 0454, 0467, 0488, 0697, 0666 |
| MODUS | VARIABLE P.A.S. | √ | √ | √ | √ | | | 0428, 0639, 0630, 0428 |
| MODUS | UPC | √ | √ | √ | √ | | √ | 0428 |
| MODUS | Tyres | √ | √ | √ | √ | | | 0042, 0440, 0740 |
| MODUS | Lighting | √ | √ | √ | √ | | √ | 0428, 0014, 0040, 0043, 0023, 0033, 0018, 0612 |
| MODUS | Hands - Fress KIT | √ | √ | √ | √ | | √ | 0058, 0428, 0606, 0643 |
| MODUS | Parking Assistance | √ | √ | √ | √ | | | 0614, 0428, 0041, 0003, 0045, 0003, 0614 |
| NEW SM3 - FLUENCE - MEGANE | Injection | √ | √ | √ | √ | √ | √ | 0450, 0537, 0536, 0558, 0539, 0836, 0838, 0837, 0839, 0771, 0551, 0550, 0531, 0553, 0575, 0530, 0555, 0428, 0535, 0513, 0557, 0556, 0534, 0237, 0450, 0471, 0570, 0428, 0505, 0529, 0826, 0562, 0540, 0561, 0542, 0541, 0563, 0464, 0544, 0565, 0543, 0567 |
| NEW SM3 - FLUENCE - MEGANE | Anti-lock Brake System(ABS) | √ | √ | √ | √ | √ | √ | 0658, 0649, 0490, 0428, 0492, 0498, 0486, 0428, 0658, 0787 |
| NEW SM3 - FLUENCE - MEGANE | Instrument Panel | √ | √ | √ | √ | | √ | 0290, 0093, 0241, 0093, 0290, 0428, 0254, 0276, 0231, 0264, 0245, 0344, 0255, 0343, 0764, 0247, 0248 |
| NEW SM3 - FLUENCE - MEGANE | UCH | √ | √ | √ | √ | √ | √ | 0207, 0316, 0371, 0428 |
| NEW SM3 - FLUENCE - MEGANE | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | | 0372, 0428, 0645, 0660 |
| NEW SM3 - FLUENCE - MEGANE | Air Conditioning(AC) | √ | √ | √ | √ | | √ | 0428, 0625 |
| NEW SM3 - FLUENCE - MEGANE | Automatic Gearbox(AT) | √ | √ | √ | √ | √ | √ | 0713, 0461, 0493, 0461, 0674, 0761, 0467, 0702 |
| NEW SM3 - FLUENCE - MEGANE | Gas Injection | √ | √ | √ | √ | √ | √ | 0428, 0685, 0714, 0720 |
| NEW SM3 - FLUENCE - MEGANE | Blind Spot Detection | √ | √ | √ | √ | | √ | 0428 |
| NEW SM3 - FLUENCE - MEGANE | VARIABLE P.A.S. | √ | √ | √ | √ | √ | √ | 0630, 0428 |
| NEW SM3 - FLUENCE - MEGANE | UPC | √ | √ | √ | √ | | √ | 0648, 0153, 0141, 0155, 0141, 0648, 0457 |
| NEW SM3 - FLUENCE - MEGANE | Sunroof Control Unit | √ | √ | √ | √ | | √ | 0428, 0615, 0624 |
| NEW SM3 - FLUENCE - MEGANE | Lighting | √ | √ | √ | √ | | √ | 0428, 0612 |

| | | | | | | | | |
|----------------------------|-----------------------------|---|---|---|---|---|---|--|
| NEW SM3 - FLUENCE - MEGANE | Parking PROX CAN | √ | √ | √ | √ | | √ | 0614, 0071, 0082, 0428, 0045, 0077, 0003, 0047, 0057, 0428, 0614 |
| NEW SM3 - FLUENCE - MEGANE | Driver's Door | √ | √ | √ | √ | | √ | 0428, 0625 |
| NEW SM3 - FLUENCE - MEGANE | Telematic CTRL Unit | √ | √ | √ | √ | | √ | 0426, 0717, 0691, 0452, 0426, 0458, 0699 |
| NEW SM3 - FLUENCE - MEGANE | BCB | √ | √ | √ | √ | √ | √ | 0019, 0428, 0002, 0002, 0024, 0019 |
| NEW SM3 - FLUENCE - MEGANE | EVC | √ | √ | √ | √ | √ | √ | 0026, 0604, 0637, 0813, 0481, 0431, 0460, 0452, 0473, 0431, 0477, 0435 |
| NEW SM3 - FLUENCE - MEGANE | PEB | √ | √ | √ | √ | √ | | 0428, 0442, 0428 |
| NEW SM3 - FLUENCE - MEGANE | BMS SAFETY | √ | √ | √ | √ | √ | | 0428, 0619, 0428 |
| NEW SM3 - FLUENCE - MEGANE | Communications Unit | √ | √ | √ | √ | | √ | 0017, 0129, 0437, 0606, 0161, 0461, 0461, 0159, 0090 |
| NEW SM3 - FLUENCE - MEGANE | RADIO | √ | √ | √ | √ | | √ | 0182, 0087, 0452, 0176, 0087, 0112, 0182, 0469, 0622 |
| NEW SM3 - FLUENCE - MEGANE | Multimedia Interface | √ | √ | √ | √ | | √ | 0428, 0021, 0038, 0428, 0029 |
| NEW SM3 - FLUENCE - MEGANE | Amplifier | √ | √ | √ | √ | | √ | 0011, 0428, 0456, 0622 |
| NEW SM3 - FLUENCE - MEGANE | Multimedia Connection | √ | √ | √ | √ | | | 0428, 0437, 0606 |
| NEW SM3 - FLUENCE - MEGANE | Tracker | √ | √ | √ | √ | | | 0012, 0415, 0428 |
| SANDERO | Injection | √ | √ | √ | √ | √ | √ | 0428, 0529, 0450, 0771, 0482, 0531, 0553, 0428, 0535, 0524 |
| SANDERO | Automatic Gearbox(AT) | √ | √ | √ | √ | | √ | 0461, 0467, 0674, 0702, 0713 |
| SANDERO | RADIO | √ | √ | √ | √ | | √ | 0081, 0087, 0707, 0452, 0465, 0112, 0469, 0081, 0622 |
| SANDERO | Anti-lock Brake System(ABS) | √ | √ | √ | √ | | √ | 0658, 0649, 0428, 0631 |
| SANDERO | UCH | √ | √ | √ | √ | | √ | 0428, 0267, 0352, 0267, 0428 |
| SANDERO | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | | 0096, 0372, 0096, 0317, 0319, 0428, 0100, 0166, 0353, 0341, 0660, 0168, 0300, 0366, 0299, 0137, 0302, 0428, 0367, 0348, 0645, 0347 |
| SANDERO | Engine(petrol) | √ | √ | √ | √ | | √ | 0428 |
| SANDERO | VARIABLE P.A.S. | √ | √ | √ | √ | | √ | 0428, 0639, 0194, 0428, 0050 |
| SANDERO | Tracker | √ | √ | √ | √ | | | 0012, 0415, 0428 |
| SCENIC II | Injection | √ | √ | √ | √ | √ | √ | 0681, 0482, 0438, 0834, 0537, 0833, 0536, 0539, 0538, 0617, 0771, 0770, 0652, 0531, 0530, 0428, 0532, 0535, 0832, 0534, 0776, 0831, 0690, 0450, 0471, 0482, 0602, 0528, 0428, 0626, 0505, 0529, 0608, 0540, 0542, 0464, 0541, 0541, 0667, 0524 |
| SCENIC II | Anti-lock Brake System(ABS) | √ | √ | √ | √ | | √ | 0658, 0745, 0649, 0428, 0738, 0451, 0428, 0631, 0741, 0766, 0658 |

| | | | | | | | | |
|-----------|-----------------------------|---|---|---|---|---|---|--|
| SCENIC II | Instrument Panel | √ | √ | √ | √ | | √ | 0291, 0250, 0251, 0020, 0020, 0291, 0646, 0428, 0243, 0254, 0672, 0242, 0245, 0255, 0247, 0148, 0665, 0246, 0678, 0248, 0655 |
| SCENIC II | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | | |
| SCENIC II | Air Conditioning(AC) | √ | √ | √ | √ | | | 0157, 0225, 0428 |
| SCENIC II | Automatic Gearbox(AT) | √ | √ | √ | √ | | √ | 0713, 0429, 0461, 0493, 0674, 0476, 0467, 0429, 0702 |
| SCENIC II | Gas Injection | √ | √ | √ | √ | | √ | 0049, 0428 |
| SCENIC II | VARIABLE P.A.S. | √ | √ | √ | √ | | | 0428, 0639, 0199, 0198, 0630, 0428 |
| SCENIC II | UPC | √ | √ | √ | √ | | √ | 0428, 0001, 0428 |
| SCENIC II | Parking PROX CAN | √ | √ | √ | √ | | | 0003, 0041, 0045, 0047, 0057, 0428, 0614, 0649 |
| SCENIC II | Communications Unit | √ | √ | √ | √ | | √ | 0014, 0428, 0437, 0449, 0628 |
| SCENIC II | RADIO | √ | √ | √ | √ | | √ | 0090, 0109, 0452, 0452, 0430, 0622 |
| SCENIC II | Multimedia Interface | √ | √ | √ | √ | | √ | 0437, 0428, 0049, 0014 |
| SCENIC II | Engine(petrol) | √ | √ | √ | √ | | √ | 0428 |
| SCENIC II | Discharge Lamp | √ | √ | √ | √ | | √ | 0005, 0428, 0030, 0030 |
| SCENIC II | Parking Assistance | √ | √ | √ | √ | | | 0003, 0041, 0045, 0428 |
| SCENIC IV | Injection | √ | √ | √ | √ | √ | √ | 0580, 0617, 0771, 0531, 0575, 0850, 0535, 0579, 0591, 0593, 0471, 0592, 0580, 0505, 0626, 0428, 0542, 0541, 0783, 0544, 0589, 0482, 0558, 0836, 0838, 0837, 0839, 0551, 0595, 0594, 0597, 0596, 0555, 0599, 0513, 0557, 0556, 0450, 0570, 0845, 0602, 0846, 0849, 0529, 0608, 0562, 0561, 0288, 0563, 0566, 0565, 0840, 0568, 0843, 0564, 0567, 0616, 0666, 0466 |
| SCENIC IV | Anti-lock Brake System(ABS) | √ | √ | √ | √ | √ | √ | 0078, 0428, 0480, 0486, 0490, 0492, 0498, 0507, 0621, 0658, 0718, 0753, 0777, 0785, 0787 |
| SCENIC IV | Instrument Panel | √ | √ | √ | √ | | √ | 0292, 0093, 0428, 0241, 0020, 0020, 0264, 0245, 0292, 0248 |
| SCENIC IV | UCH | √ | √ | √ | √ | √ | √ | 0381, 0084, 0351, 0383, 0084, 0405, 0028, 0107, 0327, 0404, 0406, 0428, 0374, 0385, 0410, 0398, 0324, 0379, 0403, 0028, 0358 |
| SCENIC IV | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | √ | 0428, 0372, 0660, 0645 |
| SCENIC IV | Air Conditioning(AC) | √ | √ | √ | √ | | √ | 0428, 0433, 0634 |
| SCENIC IV | Automatic Gearbox(AT) | √ | √ | √ | √ | √ | √ | |
| SCENIC IV | Gas Injection | √ | √ | √ | √ | √ | | 0428, 0714, 0720, 0731 |
| SCENIC IV | Supervisor or DCDC | √ | √ | √ | √ | √ | √ | 0497 |
| SCENIC IV | UPC | √ | √ | √ | √ | | √ | 0144, 0164, 0457, 0494, 0506, 0512, 0651, 0754 |
| SCENIC IV | Parking PROX CAN | √ | √ | √ | √ | | √ | |
| SCENIC IV | Driver's Seat | √ | √ | √ | √ | | √ | 0428, 0663, 0673, 0676 |

| | | | | | | | | |
|-----------|---------------------------------------|---|---|---|---|---|---|--|
| SCENIC IV | Front Camera | √ | √ | √ | √ | √ | | |
| SCENIC IV | RADIO | √ | √ | √ | √ | | √ | 0779, 0172, 0087, 0179, 0465, 0487, 0112, 0178, 0090, 0469 |
| SCENIC IV | Telematic CTRL Unit | √ | √ | √ | √ | | √ | 0426, 0717, 0452, 0426, 0458, 0699 |
| SCENIC IV | Urea Dosing Control Module | √ | √ | √ | √ | √ | √ | 0461, 0484, 0794, 0795, 0797, 0799, 0801, 0803 |
| SCENIC IV | Left - Hand Door or Passenger Seat | √ | √ | √ | √ | | √ | 0428, 0633, 0647, 0653 |
| SCENIC IV | Right - Hand Door or Collapsible Seat | √ | √ | √ | √ | | √ | 0428 |
| SCENIC IV | BMS | √ | √ | √ | √ | √ | √ | 0428, 0620, 0701 |
| SCENIC IV | PEB | √ | √ | √ | √ | √ | | 0428 |
| SCENIC IV | BMS SAFETY | √ | √ | √ | | | | 0428, 0619 |
| SCENIC IV | Head up Display | √ | √ | √ | | | √ | 0428 |
| SCENIC IV | Multimedia Interface | √ | √ | √ | √ | | √ | 0437 |
| SCENIC IV | Amplifier | √ | √ | √ | √ | | √ | 0060, 0428, 0456 |
| SM7 - L47 | Injection | √ | √ | √ | √ | √ | √ | |
| SM7 - L47 | Anti-lock Brake System(ABS) | √ | √ | √ | √ | √ | √ | 0428, 0486, 0490, 0492, 0621, 0649, 0658 |
| SM7 - L47 | Instrument Panel | √ | √ | √ | √ | | √ | |
| SM7 - L47 | UCH | √ | √ | √ | √ | √ | √ | |
| SM7 - L47 | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | | 0372, 0428, 0645, 0660 |
| SM7 - L47 | Air Conditioning(AC) | √ | √ | √ | √ | | √ | |
| SM7 - L47 | Automatic Gearbox(AT) | √ | √ | √ | √ | √ | √ | 0461, 0493, 0493, 0461, 0504, 0757, 0748, 0758, 0519, 0454, 0511, 0752, 0502, 0656, 0755, 0666 |
| SM7 - L47 | Gas Injection | √ | √ | √ | √ | √ | √ | 0428, 0685 |
| SM7 - L47 | Blind Spot Detection | √ | √ | √ | √ | | √ | 0428 |
| SM7 - L47 | VARIABLE P.A.S. | √ | √ | √ | √ | √ | | 0428 |
| SM7 - L47 | UPC | √ | √ | √ | √ | | √ | 0457, 0648, 0428, 0141, 0144, 0651, 0457 |
| SM7 - L47 | Lighting | √ | √ | √ | √ | | √ | 0428, 0612 |
| SM7 - L47 | Parking PROX CAN | √ | √ | √ | √ | | √ | 0428, 0071, 0082, 0045, 0077, 0003, 0047, 0057, 0614 |
| SM7 - L47 | Driver's Door | √ | √ | √ | √ | | √ | 0428 |
| SM7 - L47 | Passenger's Door | √ | √ | √ | √ | | √ | 0428 |
| SM7 - L47 | Driver's Seat | √ | √ | √ | √ | | | 0428, 0610 |
| SM7 - L47 | Left - Hand Door or Passenger Seat | √ | | | √ | | | 0601 |
| SM7 - L47 | Communications Unit | √ | √ | √ | √ | | √ | 0017, 0090, 0129, 0437, 0606, 0161, 0461, 0159 |
| SM7 - L47 | RADIO | √ | √ | √ | √ | | √ | 0182, 0087, 0182, 0452, 0055, 0176, 0465, 0035, 0112, 0469, 0436, 0105, 0622 |
| SM7 - L47 | Multimedia Interface | √ | √ | √ | √ | | √ | 0021, 0029, 0428 |
| SM7 - L47 | Amplifier | √ | √ | √ | √ | | √ | 0011, 0428, 0456, 0622 |
| SM7 - L47 | Multimedia Connection | √ | √ | √ | √ | | | 0428, 0437, 0606 |

| | | | | | | | | |
|-----------------|------------------------------------|---|---|---|---|---|---|--|
| TALISMAN - SM6 | Injection | √ | √ | √ | √ | √ | √ | 0580, 0582, 0581, 0617, 0771, 0573, 0572, 0531, 0574, 0535, 0579, 0593, 0471, 0592, 0580, 0505, 0626, 0428, 0542, 0541, 0783, 0544, 0589, 0482, 0559, 0558, 0836, 0838, 0837, 0839, 0551, 0595, 0594, 0550, 0597, 0596, 0555, 0599, 0428, 0554, 0598, 0513, 0557, 0556, 0450, 0570, 0845, 0602, 0846, 0529, 0608, 0562, 0561, 0288, 0563, 0566, 0565, 0840, 0568, 0843, 0557, 0513, 0588 |
| TALISMAN - SM6 | Anti-lock Brake System(ABS) | √ | √ | √ | √ | √ | √ | 0078, 0428, 0480, 0486, 0490, 0492, 0498, 0507, 0621, 0658, 0718, 0753, 0777, 0785, 0787 |
| TALISMAN - SM6 | Instrument Panel | √ | √ | √ | √ | | √ | 0292, 0093, 0428, 0241, 0020, 0020, 0264, 0245, 0292, 0248 |
| TALISMAN - SM6 | UCH | √ | √ | √ | √ | √ | √ | 0381, 0084, 0351, 0383, 0084, 0405, 0028, 0107, 0327, 0404, 0406, 0428, 0374, 0385, 0410, 0398, 0324, 0379, 0403, 0028, 0358 |
| TALISMAN - SM6 | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | √ | 0428, 0372, 0660, 0645 |
| TALISMAN - SM6 | Front Radar | √ | √ | √ | √ | √ | | 0428 |
| TALISMAN - SM6 | Air Conditioning(AC) | √ | √ | √ | √ | | √ | 0428, 0433, 0634 |
| TALISMAN - SM6 | Automatic Gearbox(AT) | √ | √ | √ | √ | √ | √ | |
| TALISMAN - SM6 | Gas Injection | √ | √ | √ | √ | √ | | 0428, 0714, 0720, 0731 |
| TALISMAN - SM6 | VARIABLE P.A.S. | √ | √ | √ | √ | √ | | 0428 |
| TALISMAN - SM6 | UPC | √ | √ | √ | √ | | √ | 0144, 0164, 0457, 0494, 0506, 0512, 0651, 0754 |
| TALISMAN - SM6 | Power Back Door | √ | √ | √ | √ | | | 0009, 0428 |
| TALISMAN - SM6 | 4 Wheels Steering | √ | √ | √ | √ | √ | √ | 0636, 0627, 0428 |
| TALISMAN - SM6 | Parking PROX CAN | √ | √ | √ | √ | | √ | |
| TALISMAN - SM6 | Piloted Suspension | √ | √ | √ | √ | √ | | 0440 |
| TALISMAN - SM6 | Driver's Seat | √ | √ | √ | √ | | √ | 0428, 0663, 0673, 0676 |
| TALISMAN - SM6 | RADIO | √ | √ | √ | √ | | √ | 0779, 0172, 0087, 0179, 0465, 0487, 0112, 0178, 0090, 0469 |
| TALISMAN - SM6 | Telematic CTRL Unit | √ | √ | √ | √ | | √ | 0426, 0717, 0452, 0426, 0458, 0699 |
| TALISMAN - SM6 | Urea Dosing Control Module | √ | √ | √ | √ | √ | √ | 0461, 0484, 0794, 0795, 0797, 0799, 0801, 0803 |
| TALISMAN - SM6 | Left - Hand Door or Passenger Seat | √ | √ | √ | √ | | √ | 0428, 0633, 0647, 0653 |
| TALISMAN - SM6 | Head up Display | √ | √ | √ | | | √ | 0428 |
| TALISMAN - SM6 | Multimedia Interface | √ | √ | √ | √ | | √ | 0437 |
| TALISMAN - SM6 | Amplifier | √ | √ | √ | √ | | √ | 0060, 0428, 0456 |
| THALIA - SYMB.2 | Injection | √ | √ | √ | √ | √ | √ | 0450, 0482, 0119, 0438, 0602, 0428, 0626, 0529, 0617, 0111, 0608, 0771, 0232, 0495, 0531, 0553, 0428, 0115, 0489, 0687, 0535, 0524, 0743 |
| THALIA - SYMB.2 | Anti-lock Brake System(ABS) | √ | √ | √ | √ | | √ | 0428, 0631, 0649, 0658 |

| | | | | | | | | |
|------------------|-----------------------------|---|---|---|---|--|---|--|
| THALIA - SYMB.2 | UCH | √ | √ | √ | √ | | √ | 0428, 0267, 0352, 0267, 0428 |
| THALIA - SYMB.2 | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | | 0372, 0317, 0319, 0428, 0166, 0353, 0660, 0165, 0341, 0168, 0300, 0366, 0299, 0137, 0302, 0428, 0367, 0645, 0348, 0347 |
| THALIA - SYMB.2 | Air Conditioning(AC) | √ | √ | √ | √ | | √ | 0428 |
| THALIA - SYMB.2 | Automatic Gearbox(AT) | √ | √ | √ | √ | | √ | 0713, 0702, 0461, 0461, 0674, 0467, 0702 |
| THALIA - SYMB.2 | VARIABLE P.A.S. | √ | √ | √ | √ | | | 0428, 0639 |
| THALIA - SYMB.2 | Tracker | √ | √ | √ | √ | | | 0012, 0415, 0428 |
| THALIA - SYMBL | Injection | √ | √ | √ | √ | | √ | 0428, 0471, 0667, 0690 |
| THALIA - SYMBL | Anti-lock Brake System(ABS) | √ | √ | √ | | | | |
| THALIA - SYMBL | UCH | √ | √ | √ | | | | |
| THALIA - SYMBL | Airbag / Pretensioners(SRS) | √ | √ | √ | | | | |
| THALIA - SYMBL | Air Conditioning(AC) | √ | √ | √ | | | | |
| THALIA - SYMBL | Automatic Gearbox(AT) | √ | √ | √ | | | | |
| TRAFIC II | Injection | √ | √ | √ | | | | |
| TRAFIC II | Anti-lock Brake System(ABS) | √ | √ | √ | | | | |
| TRAFIC II | UCH | √ | √ | √ | | | | |
| TRAFIC II | Airbag / Pretensioners(SRS) | √ | √ | √ | | | | |
| TRAFIC II | Automatic Gearbox(AT) | √ | √ | √ | | | | |
| TRAFIC II | Adaptation Unit | √ | √ | √ | | | | |
| TRAFIC II | Parking PROX CAN | √ | √ | √ | | | | |
| TRAFIC II | Parking Assistance | √ | √ | √ | | | | |
| TRAFIC II | Heater | √ | √ | √ | | | | |
| TRAFIC II p2 - 3 | Anti-lock Brake System(ABS) | √ | √ | √ | √ | | √ | 0658, 0724, 0745, 0649, 0428, 0451, 0621, 0428, 0631, 0766, 0777, 0658 |
| TRAFIC II p2 - 3 | Instrument Panel | √ | √ | √ | √ | | √ | 0139, 0148, 0180, 0231, 0243, 0245, 0247, 0254, 0255, 0262, 0264, 0291, 0294, 0298, 0305, 0306, 0307, 0428, 0680 |
| TRAFIC II p2 - 3 | Air Conditioning(AC) | √ | √ | √ | √ | | √ | 0157, 0230, 0428 |
| TRAFIC II p2 - 3 | Automatic Gearbox(AT) | √ | √ | √ | √ | | √ | 0461, 0692, 0692, 0429, 0443, 0719, 0454, 0674, 0443, 0500, 0488, 0697, 0666 |
| TRAFIC II p2 - 3 | Communications Unit | √ | √ | √ | √ | | √ | 0437, 0129, 0606, 0461, 0110, 0110, 0132, 0154, 0156, 0129 |
| TRAFIC II p2 - 3 | RADIO | √ | √ | √ | √ | | √ | |
| TRAFIC II p2 - 3 | Multimedia Interface | √ | √ | √ | √ | | √ | 0049, 0051, 0059, 0072, 0428 |
| TRAFIC II p2 - 3 | Multimedia Connection | √ | √ | √ | √ | | | 0013, 0428, 0606 |
| TRAFIC II p2 - 3 | UCH | √ | √ | √ | √ | | √ | 0080, 0428, 0362, 0053, 0212, 0428, 0269, 0080, 0359, 0138, 0765 |
| TRAFIC II p2 - 3 | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | | 0668, 0428, 0372, 0660, 0645 |
| TRAFIC II p2 - 3 | Adaptation Unit | √ | √ | √ | √ | | | 0428 |
| TRAFIC II p2 - 3 | Parking Assistance | √ | √ | √ | √ | | | 0428, 0041, 0003, 0045, 0003, 0428 |
| TRAFIC II p2 - 3 | Heater | √ | √ | √ | √ | | √ | 0427, 0439, 0461 |

| | | | | | | | | |
|------------|-----------------------------|---|---|---|---|---|---|--|
| TRAFIC III | Injection | √ | √ | √ | √ | √ | √ | 0580, 0288, 0617, 0771, 0535, 0579, 0593, 0471, 0592, 0580, 0505, 0626, 0542, 0541, 0544, 0545, 0589, 0482, 0559, 0558, 0836, 0838, 0837, 0839, 0551, 0595, 0594, 0597, 0596, 0555, 0599, 0513, 0557, 0556, 0450, 0570, 0602, 0608, 0562, 0561, 0563, 0566, 0565, 0840, 0568, 0843, 0567, 0842, 0000 |
| TRAFIC III | Anti-lock Brake System(ABS) | √ | √ | √ | √ | √ | √ | 0078, 0428, 0480, 0486, 0490, 0492, 0498, 0507, 0621, 0658, 0718, 0753, 0777, 0785, 0787 |
| TRAFIC III | Instrument Panel | √ | √ | √ | √ | | √ | 0292, 0428, 0093, 0231, 0245, 0093, 0292, 0345, 0248 |
| TRAFIC III | UCH | √ | √ | √ | √ | √ | √ | 0107, 0428, 0370, 0053, 0385, 0358 |
| TRAFIC III | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | √ | 0428, 0703, 0174, 0660, 0428, 0645 |
| TRAFIC III | Automatic Gearbox(AT) | √ | √ | √ | √ | √ | √ | |
| TRAFIC III | VARIABLE P.A.S. | √ | √ | √ | √ | | | 0083, 0428 |
| TRAFIC III | UPC | √ | √ | √ | √ | | √ | 0457, 0149, 0648, 0162, 0494, 0651, 0149, 0457 |
| TRAFIC III | Adaptation Unit | √ | √ | √ | √ | | | 0440, 0428 |
| TRAFIC III | Parking PROX CAN | √ | √ | √ | √ | | √ | 0614, 0428, 0071, 0082, 0003, 0045, 0077 |
| TRAFIC III | RADIO | √ | √ | √ | √ | | √ | 0182, 0172, 0087, 0182, 0090, 0779, 0452, 0176, 0465, 0179, 0487, 0112, 0178, 0469, 0622 |
| TRAFIC III | Telematic CTRL Unit | √ | √ | √ | √ | | √ | 0426, 0717, 0452, 0426, 0458, 0699 |
| TRAFIC III | Urea Dosing Control Module | √ | √ | √ | √ | √ | √ | 0461, 0461, 0669, 0801, 0613, 0803, 0607, 0474, 0650, 0484, 0432, 0641, 0795, 0662, 0794, 0632, 0797, 0466, 0675, 0447, 0623, 0799, 0424 |
| TRAFIC III | Hands - Fress Module | √ | √ | √ | √ | √ | √ | 0128, 0428 |
| TRAFIC III | Communications Unit | √ | √ | √ | √ | | √ | 0017, 0129, 0159, 0161, 0437, 0461 |
| TRAFIC III | Multimedia Interface | √ | √ | √ | √ | | √ | 0428 |
| TRAFIC III | Heater | √ | √ | √ | √ | | | 0427, 0439, 0461 |
| TWINGO II | Injection | √ | √ | √ | √ | √ | √ | 0450, 0690, 0438, 0537, 0602, 0626, 0428, 0617, 0529, 0608, 0771, 0531, 0464, 0544, 0428, 0535 |
| TWINGO II | Anti-lock Brake System(ABS) | √ | √ | √ | √ | | √ | 0658, 0503, 0649, 0428, 0738, 0186, 0428, 0621, 0631, 0741 |
| TWINGO II | Instrument Panel | √ | √ | √ | √ | | √ | 0180, 0291, 0262, 0291, 0139, 0428, 0243, 0254, 0143, 0245, 0278, 0255, 0247, 0246, 0279, 0733 |
| TWINGO II | UCH | √ | √ | √ | √ | | √ | 0080, 0094, 0281, 0283, 0271, 0282, 0285, 0273, 0053, 0107, 0118, 0327, 0428, 0099, 0286, 0124, 0212, 0134, 0116, 0127 |

| | | | | | | | | |
|----------------|-----------------------------|---|---|---|---|---|---|--|
| TWINGO II | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | | 0299, 0300, 0314, 0315, 0317, 0319, 0341, 0347, 0348, 0353, 0356, 0357, 0366, 0367, 0372, 0428, 0645, 0660 |
| TWINGO II | Air Conditioning(AC) | √ | √ | √ | √ | | √ | 0106, 0157, 0225, 0428 |
| TWINGO II | Automatic Gearbox(AT) | √ | √ | √ | √ | | √ | 0429, 0443, 0454, 0488, 0666, 0674, 0692, 0697 |
| TWINGO II | Rev Counter/Symbol | √ | √ | | √ | | √ | 0034, 0022, 0027, 0037, 0008 |
| TWINGO II | RADIO | √ | √ | √ | √ | | √ | 0081, 0035, 0087, 0707, 0452, 0465, 0112, 0469, 0436, 0081, 0622 |
| TWINGO II | Multimedia Interface | √ | √ | √ | √ | | √ | 0014, 0049, 0051, 0072, 0428 |
| TWINGO II | VARIABLE P.A.S. | √ | √ | √ | √ | | | 0428, 0183, 0183, 0428 |
| TWINGO II | Parking Assistance | √ | √ | √ | √ | | | 0614, 0428, 0041, 0003, 0045 |
| TWINGO III | Injection | √ | √ | √ | √ | √ | √ | 0450, 0482, 0582, 0559, 0537, 0847, 0428, 0529, 0848, 0771, 0551, 0550, 0531, 0574, 0544, 0841, 0598, 0840, 0535, 0513, 0567 |
| TWINGO III | Anti-lock Brake System(ABS) | √ | √ | √ | √ | √ | √ | 0191, 0190, 0490, 0192, 0492, 0791, 0428, 0507, 0188, 0498, 0486, 0428, 0621, 0786, 0753, 0788, 0777, 0787 |
| TWINGO III | Instrument Panel | √ | √ | √ | √ | | √ | 0292, 0428, 0231, 0245, 0093, 0248 |
| TWINGO III | UCH | √ | √ | √ | √ | √ | √ | 0107, 0327, 0428, 0053, 0138, 0358 |
| TWINGO III | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | √ | 0428, 0703, 0174, 0660, 0428, 0645 |
| TWINGO III | Front Radar | √ | √ | √ | √ | | | 0428 |
| TWINGO III | Air Conditioning(AC) | √ | √ | √ | √ | | √ | 0428, 0625, 0634 |
| TWINGO III | Automatic Gearbox(AT) | √ | √ | √ | √ | √ | √ | 0066, 0454, 0461, 0493, 0666, 0748, 0750, 0755, 0757, 0758 |
| TWINGO III | Communications Unit | √ | √ | √ | √ | √ | √ | 0017, 0437, 0129, 0161, 0461, 0461, 0159, 0468 |
| TWINGO III | VARIABLE P.A.S. | √ | √ | √ | √ | √ | √ | 0428 |
| TWINGO III | UPC | √ | √ | √ | √ | | √ | 0149, 0648, 0162, 0494, 0651, 0514, 0457, 0754 |
| TWINGO III | Adaptation Unit | √ | √ | √ | √ | | | 0200, 0202, 0440 |
| TWINGO III | Central GateWay | √ | √ | √ | √ | √ | | 0004, 0428 |
| TWINGO III | Gearbox Elec Control | √ | √ | √ | | | | 0428 |
| TWINGO III | Front Camera | √ | √ | √ | √ | | | 0437, 0428 |
| TWINGO III | RADIO | √ | √ | √ | √ | | √ | 0182, 0172, 0087, 0182, 0090, 0779, 0452, 0176, 0465, 0179, 0487, 0112, 0178, 0469, 0622 |
| TWINGO III | Telematic CTRL Unit | √ | √ | √ | √ | | √ | 0426, 0725, 0717, 0452, 0709, 0426, 0458, 0699, 0732 |
| TWINGO III | Multimedia Interface | √ | √ | √ | √ | | √ | 0428, 0448, 0469 |
| TWINGO phase 2 | Injection | √ | √ | √ | √ | | √ | 0428, 0471, 0667, 0690 |
| TWINGO phase 2 | Anti-lock Brake System(ABS) | √ | √ | √ | | | | |
| TWINGO phase 2 | UCH | √ | √ | √ | | | | |
| TWINGO phase 2 | Airbag / Pretensioners(SRS) | √ | √ | √ | | | | |
| TWINGO phase 2 | Automatic Gearbox(AT) | √ | √ | √ | | | | |
| TWINGO phase 2 | Engine(petrol) | √ | √ | √ | | | | |

| | | | | | | | | |
|--------------|-----------------------------|---|---|---|---|--|---|--|
| TWIZY | Instrument Panel | √ | √ | √ | √ | | | 0242, 0245, 0325, 0326, 0328, 0331, 0428, 0678, 0688 |
| TWIZY | Adaptation Unit | √ | √ | √ | √ | | | 0440, 0712 |
| TWIZY | BMS | √ | √ | √ | √ | | | 0428 |
| TWIZY | UCH | √ | √ | √ | √ | | √ | 0267, 0428 |
| TWIZY | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | | 0096, 0100, 0137, 0299, 0300, 0302, 0341, 0372, 0428, 0645, 0660 |
| VELSATIS | Injection | √ | √ | √ | √ | | √ | 0115, 0681, 0482, 0471, 0771, 0471, 0652, 0123, 0776 |
| VELSATIS | Instrument Panel | √ | √ | √ | √ | | √ | 0261, 0260, 0241, 0262, 0680, 0163, 0177, 0254, 0672, 0231, 0253, 0135, 0256, 0255, 0258, 0257, 0235, 0678, 0655, 0259, 0092, 0171, 0093, 0250, 0175, 0251, 0163, 0261, 0646, 0428, 0243, 0287, 0242, 0146, 0245, 0167, 0244, 0148, 0247, 0665, 0246 |
| VELSATIS | Hands - Fress KIT | √ | √ | √ | √ | | √ | 0058, 0428, 0606, 0643 |
| VELSATIS | Anti-lock Brake System(ABS) | √ | √ | √ | √ | | √ | 0185, 0187, 0428, 0649, 0658 |
| VELSATIS | UCH | √ | √ | √ | √ | | √ | 0080, 0240, 0210, 0212, 0234, 0211, 0233, 0238, 0193, 0195, 0073, 0095, 0130, 0196, 0062, 0107, 0228, 0428, 0067, 0221, 0201, 0104, 0269, 0224, 0268, 0205, 0227, 0127, 0204 |
| VELSATIS | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | | 0668, 0428, 0372, 0372, 0660, 0668, 0645 |
| VELSATIS | Front Radar | √ | √ | √ | √ | | | 0031, 0039, 0044, 0428, 0459, 0472 |
| VELSATIS | Air Conditioning(AC) | √ | √ | √ | √ | | √ | 0217, 0170, 0428, 0184, 0157, 0214, 0216 |
| VELSATIS | Automatic Gearbox(AT) | √ | √ | √ | √ | | √ | |
| VELSATIS | Gas Injection | √ | √ | √ | √ | | √ | 0049, 0428 |
| VELSATIS | Tyres | √ | √ | √ | √ | | √ | 0042, 0440, 0716, 0740 |
| VELSATIS | Discharge Lamp | √ | √ | √ | √ | | √ | 0005, 0428, 0030, 0030 |
| VELSATIS | Parking Assistance | √ | √ | √ | √ | | | 0614, 0428, 0041, 0003, 0045, 0003, 0614 |
| VELSATIS | Heater | √ | √ | √ | √ | | √ | 0427, 0439, 0461 |
| VELSATIS ph2 | Injection | √ | √ | √ | √ | | √ | 0438, 0115, 0450, 0681, 0482, 0471, 0771, 0652, 0123, 0776 |
| VELSATIS ph2 | Instrument Panel | √ | √ | √ | √ | | √ | 0261, 0260, 0241, 0262, 0680, 0163, 0177, 0254, 0672, 0231, 0253, 0135, 0256, 0255, 0258, 0257, 0235, 0678, 0655, 0259, 0092, 0171, 0093, 0250, 0175, 0251, 0163, 0261, 0646, 0428, 0243, 0287, 0242, 0146, 0245, 0167, 0244, 0148, 0247, 0665, 0246 |
| VELSATIS ph2 | Gas Injection | √ | √ | √ | √ | | √ | 0049, 0428 |
| VELSATIS ph2 | Lighting | √ | √ | √ | √ | | √ | 0014, 0018, 0023, 0033, 0040, 0428, 0612 |

| | | | | | | | | |
|--------------|------------------------------|---|---|---|---|---|---|--|
| VELSATIS ph2 | Parking PROX CAN | √ | √ | √ | √ | | | 0003, 0041, 0045, 0047, 0057, 0428, 0614, 0649 |
| VELSATIS ph2 | Communications Unit | √ | √ | √ | √ | | √ | 0449, 0437, 0428, 0014, 0628, 0428 |
| VELSATIS ph2 | Hands - Fress KIT | √ | √ | √ | √ | | √ | 0058, 0428, 0606, 0643 |
| VELSATIS ph2 | RADIO | √ | √ | √ | √ | | √ | 0090, 0109, 0452, 0452, 0430, 0622 |
| VELSATIS ph2 | Anti-lock Brake System(ABS) | √ | √ | √ | √ | | √ | 0490, 0492, 0186, 0185, 0186, 0490, 0658, 0649, 0428, 0738, 0760, 0187, 0762, 0486, 0631, 0741 |
| VELSATIS ph2 | UCH | √ | √ | √ | √ | | √ | 0080, 0280, 0062, 0240, 0053, 0218, 0234, 0134, 0138, 0193, 0195, 0095, 0293, 0197, 0274, 0130, 0207, 0107, 0206, 0228, 0428, 0067, 0441, 0661, 0121, 0104, 0203, 0224, 0268, 0127 |
| VELSATIS ph2 | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | | |
| VELSATIS ph2 | Air Conditioning(AC) | √ | √ | √ | √ | | √ | |
| VELSATIS ph2 | Parking Assistance | √ | √ | √ | √ | | | 0614, 0428, 0041, 0003, 0045, 0003, 0614 |
| VELSATIS ph2 | Heater | √ | √ | √ | √ | | √ | 0427, 0439, 0461 |
| WIND | Injection | √ | √ | √ | √ | | √ | |
| WIND | Anti-lock Brake System(ABS) | √ | √ | √ | √ | | √ | 0658, 0503, 0649, 0428, 0738, 0186, 0428, 0621, 0631, 0741 |
| WIND | Instrument Panel | √ | √ | √ | √ | | √ | 0093, 0152, 0231, 0245, 0247, 0253, 0255, 0297, 0298, 0428, 0680 |
| WIND | UCH | √ | √ | √ | √ | | √ | 0080, 0094, 0281, 0283, 0271, 0282, 0285, 0053, 0107, 0118, 0327, 0428, 0099, 0286, 0124, 0212, 0134, 0304, 0116, 0127 |
| WIND | Airbag / Pretensioners(SRS) | √ | √ | √ | √ | | | 0169, 0173, 0299, 0300, 0317, 0319, 0341, 0353, 0366, 0367, 0372, 0428, 0645, 0660 |
| WIND | Air Conditioning(AC) | √ | √ | √ | √ | | √ | 0106, 0157, 0225, 0428 |
| WIND | Sunroof Control Unit | √ | √ | √ | √ | √ | | 0428 |
| WIND | RADIO | √ | √ | √ | √ | | √ | 0452, 0622 |
| WIND | Multimedia Interface | √ | √ | √ | √ | | √ | 0049, 0051, 0072, 0428 |
| WIND | Multimedia Connection | √ | √ | √ | √ | | | 0013, 0428, 0606 |
| WIND | VARIABLE P.A.S. | √ | √ | √ | √ | | | 0428, 0183 |
| ZOE | Instrument Panel | | √ | √ | √ | | √ | × |
| ZOE | UCH | | √ | √ | √ | | √ | × |
| ZOE | Airbag / Pretensioners (SRS) | | √ | √ | √ | | √ | × |

| | | | | | | | |
|-----|---------------------------------|---|---|---|---|---|---|
| ZOE | Air Condi oning(AC) | √ | √ | √ | √ | | x |
| ZOE | VARIA BLE P.A.S | √ | √ | √ | √ | √ | x |
| ZOE | UPC | √ | √ | √ | √ | | x |
| ZOE | Adapta tion Unit | √ | √ | √ | √ | | |
| ZOE | Parkin g PRO √ CAN | √ | √ | √ | √ | | x |
| ZOE | Telema tic CTRL Unit | √ | √ | √ | √ | | x |
| ZOE | Uncou pled Pedal | √ | √ | √ | √ | √ | x |
| ZOE | Multim edia Interfa ce | √ | √ | √ | √ | | x |
| ZOE | BCB | √ | √ | √ | √ | √ | |
| ZOE | BMS | √ | √ | √ | √ | √ | |
| ZOE | EVC | √ | √ | √ | √ | √ | x |
| ZOE | PEB | √ | √ | √ | √ | √ | |
| ZOE | BMS SAFETY | √ | | | | | |
| ZOE | Comm unicati ons Unit | √ | √ | √ | √ | | x |
| ZOE | RADIO | √ | √ | √ | √ | | x |

Special Function Table

| | |
|------|---|
| 0001 | Configuration Read/Write[CF001 Alternator Type] |
| 0002 | Configuration Read/Write[CF001 Bms] |
| 0003 | Configuration Read/Write[CF001 Buzzer Volume] |
| 0004 | Configuration Read/Write[CF001 Central Gateway] |
| 0005 | Configuration Read/Write[CF001 Computer Calibration] |
| 0006 | Configuration Read/Write[CF001 Computer Initialisation] |
| 0007 | Configuration Read/Write[CF001 Configuration Privee 1] |

| | |
|------|---|
| 0008 | Configuration Read/Write[CF001 Overspeed Light] |
| 0009 | Configuration Read/Write[CF001 Power Back Door Cylinder] |
| 0010 | Configuration Read/Write[CF001 Roll Bars] |
| 0011 | Configuration Read/Write[CF001 Subwoofer] |
| 0012 | Configuration Read/Write[CF001 Svt Configuration] |
| 0014 | Configuration Read/Write[CF001 Vehicle Type] |
| 0015 | Configuration Read/Write[CF001 Window Winder 1 Deconfiguration] |
| 0016 | Configuration Read/Write[CF002 Computer Configuration] |
| 0017 | Configuration Read/Write[CF002 Country Model] |
| 0018 | Configuration Read/Write[CF002 Dynamic Correction] |
| 0019 | Configuration Read/Write[CF002 Instrument Panel] |
| 0020 | Configuration Read/Write[CF002 Language Configuration] |
| 0021 | Configuration Read/Write[CF002 Temperature Display] |
| 0022 | Configuration Read/Write[CF002 Trajectory Control] |
| 0023 | Configuration Read/Write[CF003 Automatic Fold-Down Headlights] |
| 0024 | Configuration Read/Write[CF003 Charge Plug] |
| 0025 | Configuration Read/Write[CF003 Computer Configuration] |
| 0026 | Configuration Read/Write[CF003 Heating] |
| 0027 | Configuration Read/Write[CF003 Rheostat Lighting] |
| 0028 | Configuration Read/Write[CF003 Testing Card Presented] |
| 0029 | Configuration Read/Write[CF003 Time Format] |
| 0030 | Configuration Read/Write[CF003 Vehicle Type] |
| 0031 | Configuration Read/Write[CF003 Write Date Of Last After Sales Operation] |
| 0032 | Configuration Read/Write[CF004 Computer Address] |
| 0033 | Configuration Read/Write[CF004 Dipped Headlights Raise] |
| 0034 | Configuration Read/Write[CF004 Free Shift] |
| 0035 | Configuration Read/Write[CF004 System Configuration] |
| 0036 | Configuration Read/Write[CF005 Distance Before Next Oil Change Configuration] |
| 0037 | Configuration Read/Write[CF005 Free Shift Display] |
| 0038 | Configuration Read/Write[CF005 Hour Setting] |
| 0039 | Configuration Read/Write[CF005 Km] |
| 0040 | Configuration Read/Write[CF005 Signature] |
| 0041 | Configuration Read/Write[CF005 Vehicle Identification] |
| 0042 | Configuration Read/Write[CF005 Vehicle Type] |
| 0043 | Configuration Read/Write[CF006 Cornering Lights] |
| 0044 | Configuration Read/Write[CF006 Miles] |
| 0045 | Configuration Read/Write[CF006 Tone Adjustment] |
| 0046 | Configuration Read/Write[CF006 Vehicle Speed Signal Transmitter] |
| 0047 | Configuration Read/Write[CF007 Front Buzzer Volume] |
| 0048 | Configuration Read/Write[CF007 System Configuration] |
| 0049 | Configuration Read/Write[CF007 Vehicle Configuration] |
| 0050 | Configuration Read/Write[CF008 Configuration Privee 4] |
| 0051 | Configuration Read/Write[CF008 Radio] |
| 0052 | Configuration Read/Write[CF009 Configuration Privee 1] |
| 0054 | Configuration Read/Write[CF009 Driving Type] |

| | |
|------|---|
| 0055 | Configuration Read/Write[CF009 External Components] |
| 0056 | Configuration Read/Write[CF009 Front Seat Belt Retractors] |
| 0057 | Configuration Read/Write[CF009 Front Tone Setting] |
| 0058 | Configuration Read/Write[CF009 Language] |
| 0059 | Configuration Read/Write[CF009 Navigation] |
| 0060 | Configuration Read/Write[CF009 Noise-Reducing Microphone] |
| 0061 | Configuration Read/Write[CF010 Gearbox Type] |
| 0062 | Configuration Read/Write[CF010 Hands-Free Function] |
| 0063 | Configuration Read/Write[CF010 Light Sensor Signal] |
| 0064 | Configuration Read/Write[CF010 With Fr Chest Airbags+Head-Level Airbags] |
| 0065 | Configuration Read/Write[CF011 Directional Headlights] |
| 0066 | Configuration Read/Write[CF011 Gear Change Paddles] |
| 0067 | Configuration Read/Write[CF011 Gearbox Type] |
| 0068 | Configuration Read/Write[CF011 Geographical Zone] |
| 0069 | Configuration Read/Write[CF011 Sensor Type] |
| 0070 | Configuration Read/Write[CF011 W Fr Chest Airbags W/Out Head-Lvl Airbags] |
| 0071 | Configuration Read/Write[CF012 Front Detection] |
| 0072 | Configuration Read/Write[CF012 Lighting] |
| 0073 | Configuration Read/Write[CF012 Rain Sensor] |
| 0074 | Configuration Read/Write[CF012 Without Side Airbags] |
| 0075 | Configuration Read/Write[CF013 Cd Changer] |
| 0076 | Configuration Read/Write[CF013 Front Left-Hand Chest-Level Side Airbag] |
| 0077 | Configuration Read/Write[CF013 Rear Detection] |
| 0078 | Configuration Read/Write[CF013 Trailer Stability Function] |
| 0079 | Configuration Read/Write[CF014 Computer Configuration] |
| 0080 | Configuration Read/Write[CF014 Daytime Running Lights] |
| 0081 | Configuration Read/Write[CF014 Driving Type] |
| 0082 | Configuration Read/Write[CF014 Side Detection] |
| 0083 | Configuration Read/Write[CF014 Tuning Version Number] |
| 0084 | Configuration Read/Write[CF015 Illuminate Hazard Lamps Upon Impact] |
| 0085 | Configuration Read/Write[CF015 Maintenance Mode] |
| 0086 | Configuration Read/Write[CF015 Rear Right-Hand Inertia Reel] |
| 0087 | Configuration Read/Write[CF016 Country Model] |
| 0088 | Configuration Read/Write[CF016 Rear Left-Hand Inertia Wheel] |
| 0089 | Configuration Read/Write[CF018 Automatic Relocking] |
| 0090 | Configuration Read/Write[CF018 Distance Units] |
| 0091 | Configuration Read/Write[CF018 Front Fog Lights] |
| 0092 | Configuration Read/Write[CF018 Reserve Capacity] |
| 0094 | Configuration Read/Write[CF019 Air Conditioning Type] |
| 0095 | Configuration Read/Write[CF020 Driving Type] |
| 0096 | Configuration Read/Write[CF020 Front Left-Hand Inertia Wheel] |
| 0097 | Configuration Read/Write[CF020 Increment Of Idle Speed] |
| 0098 | Configuration Read/Write[CF021 Decrement Idle Speed] |
| 0099 | Configuration Read/Write[CF021 Front Fog Lights] |
| 0100 | Configuration Read/Write[CF021 Front Right-Hand Inertia Wheel] |

| | |
|------|---|
| 0101 | Configuration Read/Write[CF022 Left-Hand Curtain Airbag] |
| 0102 | Configuration Read/Write[CF022 With Swirl Flap] |
| 0103 | Configuration Read/Write[CF023 Front Right-Hand Chest-Level Side Airbag] |
| 0104 | Configuration Read/Write[CF023 Tyre Pressure Monitor Function] |
| 0105 | Configuration Read/Write[CF024 Emergency Call Number] |
| 0106 | Configuration Read/Write[CF024 Geographical Zone] |
| 0107 | Configuration Read/Write[CF024 Hazard Warning Lights Illumination By Abs] |
| 0108 | Configuration Read/Write[CF024 Right-Hand Curtain Airbag] |
| 0109 | Configuration Read/Write[CF026 Cd Changer And Auxiliary Input] |
| 0110 | Configuration Read/Write[CF026 System Configuration] |
| 0111 | Configuration Read/Write[CF027 Gearbox Type] |
| 0112 | Configuration Read/Write[CF027 Language] |
| 0113 | Configuration Read/Write[CF027 Left-Hand Side Impact Sensor] |
| 0114 | Configuration Read/Write[CF027 Windscreen Type] |
| 0115 | Configuration Read/Write[CF028 Air Conditioning] |
| 0116 | Configuration Read/Write[CF028 Engine Type] |
| 0117 | Configuration Read/Write[CF028 Testing Card Presented] |
| 0118 | Configuration Read/Write[CF029 External Temperature Sensor] |
| 0119 | Configuration Read/Write[CF029 Power Steering Electric Pump Unit] |
| 0120 | Configuration Read/Write[CF029 Right-Hand Side Impact Sensor] |
| 0121 | Configuration Read/Write[CF030 Discharge Lamp] |
| 0122 | Configuration Read/Write[CF030 Front Left-Hand Seat Belt Sensor] |
| 0123 | Configuration Read/Write[CF030 Thermoplungers] |
| 0124 | Configuration Read/Write[CF031 Calibration] |
| 0125 | Configuration Read/Write[CF031 Front Right-Hand Seat Belt Sensor] |
| 0126 | Configuration Read/Write[CF032 Remote Engine Starting] |
| 0127 | Configuration Read/Write[CF032 See-Me-Home Lighting] |
| 0128 | Configuration Read/Write[CF033 Column Steering Lock] |
| 0129 | Configuration Read/Write[CF033 Distance Units] |
| 0130 | Configuration Read/Write[CF033 Electric Child Safety] |
| 0131 | Configuration Read/Write[CF034 Bodywork Type] |
| 0132 | Configuration Read/Write[CF034 Constructor/Manufacturer] |
| 0134 | Configuration Read/Write[CF035 Rain/Light Sensor] |
| 0135 | Configuration Read/Write[CF035 Tank Capacity] |
| 0136 | Configuration Read/Write[CF036 Card/Key] |
| 0137 | Configuration Read/Write[CF036 Pass Airbag Deactivation Warning Light] |
| 0138 | Configuration Read/Write[CF036 Selective Opening Of Doors] |
| 0139 | Configuration Read/Write[CF037 Clock] |
| 0140 | Configuration Read/Write[CF037 Front Left-Hand Buckle Pretensioner] |
| 0141 | Configuration Read/Write[CF037 Stop&Start Function Configuration] |
| 0142 | Configuration Read/Write[CF038 Front Right-Hand Buckle Pretensioner] |
| 0143 | Configuration Read/Write[CF038 Rheostat Presence] |
| 0144 | Configuration Read/Write[CF039 Esm Configuration] |
| 0145 | Configuration Read/Write[CF039 Gsm Connectivity] |
| 0146 | Configuration Read/Write[CF039 Uch] |

| | |
|------|---|
| 0147 | Configuration Read/Write[CF040 Gsm Antenna Circuit] |
| 0148 | Configuration Read/Write[CF040 Particle Filter] |
| 0149 | Configuration Read/Write[CF040 Stop And Start Configuration] |
| 0150 | Configuration Read/Write[CF041 Angle Of Assembly] |
| 0151 | Configuration Read/Write[CF042 Boiler] |
| 0152 | Configuration Read/Write[CF042 Drive Type Configuration] |
| 0153 | Configuration Read/Write[CF043 Esm Inhibition Command] |
| 0154 | Configuration Read/Write[CF043 System Configuration] |
| 0155 | Configuration Read/Write[CF044 Esm Activation Command] |
| 0156 | Configuration Read/Write[CF044 Gsm Antenna] |
| 0157 | Configuration Read/Write[CF044 Vehicle Type] |
| 0158 | Configuration Read/Write[CF045 Alternator Floating Voltage] |
| 0159 | Configuration Read/Write[CF045 Tyre Pressure Units] |
| 0160 | Configuration Read/Write[CF046 Gas Reserv. Capac.] |
| 0161 | Configuration Read/Write[CF046 Language] |
| 0162 | Configuration Read/Write[CF046 Multiple 12V Batteries] |
| 0163 | Configuration Read/Write[CF047 Adaptive Cruise Control] |
| 0164 | Configuration Read/Write[CF047 Stop And Start Function] |
| 0165 | Configuration Read/Write[CF047 Without Inhibition Switch] |
| 0166 | Configuration Read/Write[CF048 Seat Belt Reminder Buzzer] |
| 0167 | Configuration Read/Write[CF049 Oil Pressure Warning Threshold] |
| 0168 | Configuration Read/Write[CF049 Seat Belt Light] |
| 0169 | Configuration Read/Write[CF050 Driver'S Front Inertia Reel] |
| 0170 | Configuration Read/Write[CF050 Heated Windscreen] |
| 0171 | Configuration Read/Write[CF050 Oil Temperature Measurement Threshold] |
| 0172 | Configuration Read/Write[CF050 Time Format] |
| 0174 | Configuration Read/Write[CF052 Sensor Configuration] |
| 0175 | Configuration Read/Write[CF053 Oil Measurement Timer] |
| 0176 | Configuration Read/Write[CF053 Rear Loud Speaker] |
| 0177 | Configuration Read/Write[CF054 Parking Proximity Sensor Function] |
| 0178 | Configuration Read/Write[CF055 Temperature Units] |
| 0179 | Configuration Read/Write[CF056 Tyre Pressure Units] |
| 0180 | Configuration Read/Write[CF058 Adac Configuration] |
| 0181 | Configuration Read/Write[CF058 Type] |
| 0182 | Configuration Read/Write[CF066 Guidelines] |
| 0183 | Configuration Read/Write[CF073 Mode Number] |
| 0184 | Configuration Read/Write[CF076 Compressor Type] |
| 0185 | Configuration Read/Write[CF077 Abs/Esp Calibration] |
| 0186 | Configuration Read/Write[CF079 Gearbox Type] |
| 0187 | Configuration Read/Write[CF080 Vehicle Parameters] |
| 0188 | Configuration Read/Write[CF083 Commande Privee 1] |
| 0189 | Configuration Read/Write[CF083 One-Touch Electric Window(S)] |
| 0190 | Configuration Read/Write[CF084 Commande Privee 2] |
| 0191 | Configuration Read/Write[CF085 Commande Privee 3] |
| 0192 | Configuration Read/Write[CF086 Commande Privee 4] |

| | |
|------|--|
| 0193 | Configuration Read/Write[CF088 Auto Locking Warning Sound] |
| 0194 | Configuration Read/Write[CF088 Computer Calibration] |
| 0195 | Configuration Read/Write[CF089 Memorising Driver'S Seat Position] |
| 0196 | Configuration Read/Write[CF090 Deadlocking] |
| 0197 | Configuration Read/Write[CF091 Sunroof] |
| 0198 | Configuration Read/Write[CF092 Pulling Correction Program] |
| 0199 | Configuration Read/Write[CF093 Pulling Correction] |
| 0200 | Configuration Read/Write[CF093 Vehicle Layout] |
| 0201 | Configuration Read/Write[CF094 Automatic Seat Recall] |
| 0202 | Configuration Read/Write[CF094 Mode] |
| 0203 | Configuration Read/Write[CF097 Vehicle Type] |
| 0204 | Configuration Read/Write[CF098 Card Locking] |
| 0205 | Configuration Read/Write[CF099 Card Reminder Warning] |
| 0206 | Configuration Read/Write[CF100 Hands-Free Start-Up] |
| 0207 | Configuration Read/Write[CF101 Light Sensor Sensitivity] |
| 0208 | Configuration Read/Write[CF103 Alternator Type] |
| 0209 | Configuration Read/Write[CF104 Childproof Lock] |
| 0210 | Configuration Read/Write[CF106 Interior Lighting] |
| 0211 | Configuration Read/Write[CF107 Timer Courtesy Light] |
| 0212 | Configuration Read/Write[CF108 Automatic Locking When Driving] |
| 0214 | Configuration Read/Write[CF110 Drive Ratio] |
| 0215 | Configuration Read/Write[CF110 Tailgate Flap] |
| 0216 | Configuration Read/Write[CF111 Type Of Power Steering] |
| 0217 | Configuration Read/Write[CF112 Evaporator Temperature Sensor] |
| 0218 | Configuration Read/Write[CF112 Headlight Washers] |
| 0219 | Configuration Read/Write[CF113 Additional Heating] |
| 0220 | Configuration Read/Write[CF114 Air Conditioning Type] |
| 0221 | Configuration Read/Write[CF115 Door Unlocking Mode] |
| 0222 | Configuration Read/Write[CF115 Rear Shelves] |
| 0223 | Configuration Read/Write[CF116 Driving Type] |
| 0224 | Configuration Read/Write[CF116 Hands Free Locking] |
| 0225 | Configuration Read/Write[CF117 Heating Resistor Type] |
| 0226 | Configuration Read/Write[CF118 Toxicity Sensor] |
| 0227 | Configuration Read/Write[CF119 Unlocking Mode. Doors Hands Free] |
| 0228 | Configuration Read/Write[CF120 Automatic Closing Of Windows (By Card)] |
| 0229 | Configuration Read/Write[CF122 Bodywork Type] |
| 0230 | Configuration Read/Write[CF125 Compressor Feedback] |
| 0231 | Configuration Read/Write[CF125 Language Version.] |
| 0232 | Configuration Read/Write[CF130 Number Of Heating Elements] |
| 0233 | Configuration Read/Write[CF130 Overspeed Alarm For Arabia] |
| 0234 | Configuration Read/Write[CF131 Voice Synthesiser] |
| 0235 | Configuration Read/Write[CF132 Engine/Gearbox Type] |
| 0236 | Configuration Read/Write[CF132 Vehicle Family] |
| 0237 | Configuration Read/Write[CF133 Configuration Privee 1] |
| 0238 | Configuration Read/Write[CF133 Power-Assisted Steering Program] |

| | |
|------|--|
| 0239 | Configuration Read/Write[CF134 Temperature Units] |
| 0240 | Configuration Read/Write[CF134 Type Of Power Steering] |
| 0241 | Configuration Read/Write[CF136 Tyre Pressure Units] |
| 0242 | Configuration Read/Write[CF137 Vehicle Type] |
| 0243 | Configuration Read/Write[CF138 Fuel Type] |
| 0244 | Configuration Read/Write[CF139 Voice Synthesiser] |
| 0245 | Configuration Read/Write[CF140 Distance Units] |
| 0246 | Configuration Read/Write[CF141 Overspeed Function - Arabia] |
| 0247 | Configuration Read/Write[CF142 Trajectory Control] |
| 0248 | Configuration Read/Write[CF143 Consumption Measurement Units] |
| 0249 | Configuration Read/Write[CF144 Hands Free] |
| 0250 | Configuration Read/Write[CF145 Tyre Pressure Monitoring] |
| 0251 | Configuration Read/Write[CF146 Automatic Handbrake] |
| 0252 | Configuration Read/Write[CF147 Navigation System] |
| 0254 | Configuration Read/Write[CF149 Gearbox Type] |
| 0255 | Configuration Read/Write[CF150 Cruise Ctrl/Spd Limiter] |
| 0256 | Configuration Read/Write[CF152 P9X At] |
| 0257 | Configuration Read/Write[CF153 P9X Manual] |
| 0258 | Configuration Read/Write[CF154 V4Y Automatic Gearbox] |
| 0259 | Configuration Read/Write[CF155 V4Y Manual] |
| 0260 | Configuration Read/Write[CF156 Other At] |
| 0261 | Configuration Read/Write[CF157 Other Manual] |
| 0262 | Configuration Read/Write[CF158 Seat Belt Reminder Buzzer] |
| 0263 | Configuration Read/Write[CF159 Engine Immobiliser] |
| 0264 | Configuration Read/Write[CF160 Overspeed Alarm] |
| 0265 | Configuration Read/Write[CF163 Head Lamp Battery Saver Function] |
| 0266 | Configuration Read/Write[CF166 Rear Screen Wiper] |
| 0267 | Configuration Read/Write[CF167 Flashing Buzzer] |
| 0268 | Configuration Read/Write[CF169 Lights Automatic Illumination] |
| 0269 | Configuration Read/Write[CF170 Overspeed Function - Arabia] |
| 0270 | Configuration Read/Write[CF171 Parking Aid] |
| 0271 | Configuration Read/Write[CF171 Temperature Display] |
| 0272 | Configuration Read/Write[CF172 Directional Headlights] |
| 0273 | Configuration Read/Write[CF173 One-Touch Electric Window(S) / Sunroof] |
| 0274 | Configuration Read/Write[CF174 Inhibition Of Selective Door Opening] |
| 0275 | Configuration Read/Write[CF175 Commande Privee 1] |
| 0276 | Configuration Read/Write[CF179 Rev Counter] |
| 0277 | Configuration Read/Write[CF179 Seat Belt Reminder Buzzer] |
| 0278 | Configuration Read/Write[CF180 External Temperature] |
| 0279 | Configuration Read/Write[CF181 Electric Power Assisted Steering] |
| 0280 | Configuration Read/Write[CF186 Automatic Folding Of Door Mirrors] |
| 0281 | Configuration Read/Write[CF191 Wiper Intermittent Speed Ring] |
| 0282 | Configuration Read/Write[CF192 Opening Elements Central Locking] |
| 0283 | Configuration Read/Write[CF193 Automatic Lighting Function] |
| 0284 | Configuration Read/Write[CF193 Oil Vapour Heater] |

| | |
|------|--|
| 0285 | Configuration Read/Write[CF194 Automatic Front Wiper Function] |
| 0286 | Configuration Read/Write[CF195 Key Type] |
| 0287 | Configuration Read/Write[CF196 Cruise Contr./Sp. Limit. Speed Diff.] |
| 0288 | Configuration Read/Write[CF196 Stop And Start Function] |
| 0289 | Configuration Read/Write[CF197 New Vehicle Storage Mode Deactivation] |
| 0290 | Configuration Read/Write[CF197 Tyre Pressure Monitor Function] |
| 0291 | Configuration Read/Write[CF198 Personalised Oil Change Frequency] |
| 0292 | Configuration Read/Write[CF199 Computer Initialisation] |
| 0294 | Configuration Read/Write[CF202 Free Shift] |
| 0295 | Configuration Read/Write[CF207 Driver'S Lateral Sensor] |
| 0296 | Configuration Read/Write[CF208 Passenger'S Lateral Sensor] |
| 0297 | Configuration Read/Write[CF208 Seat Belt Warning Module] |
| 0298 | Configuration Read/Write[CF209 Computer Initialisation] |
| 0299 | Configuration Read/Write[CF209 Driver'S Front Airbag] |
| 0300 | Configuration Read/Write[CF210 Passenger'S Front Airbag] |
| 0301 | Configuration Read/Write[CF210 Unit Of Volume] |
| 0302 | Configuration Read/Write[CF211 Impact Information Connection] |
| 0303 | Configuration Read/Write[CF212 Type Of Parking Brake] |
| 0304 | Configuration Read/Write[CF213 Gradual Switching On And Off Of Courtesy Light] |
| 0305 | Configuration Read/Write[CF213 Tachograph] |
| 0306 | Configuration Read/Write[CF214 Abs/Esp] |
| 0307 | Configuration Read/Write[CF215 Tyres] |
| 0308 | Configuration Read/Write[CF215 Vehicle Type] |
| 0309 | Configuration Read/Write[CF216 Free Shift Display] |
| 0310 | Configuration Read/Write[CF217 Driver Lap Strap Pretensioner] |
| 0311 | Configuration Read/Write[CF217 Pointer Animation] |
| 0312 | Configuration Read/Write[CF218 Daytime Backlights] |
| 0313 | Configuration Read/Write[CF218 Passenger Lap Strap Pretensioner] |
| 0314 | Configuration Read/Write[CF221 Curtain Side Air Bag, Driver'S Side] |
| 0315 | Configuration Read/Write[CF222 Curtain Side Air Bag, Passenger Side] |
| 0316 | Configuration Read/Write[CF223 Configuration Reservee 10] |
| 0317 | Configuration Read/Write[CF223 Front Thorax Side Air Bag, Driver Side] |
| 0318 | Configuration Read/Write[CF224 Electric Pump Unit] |
| 0319 | Configuration Read/Write[CF224 Front Thorax Side Air Bag, Passenger Side] |
| 0320 | Configuration Read/Write[CF224 Rear Access Aerials] |
| 0321 | Configuration Read/Write[CF225 Battery Charge Warning Information] |
| 0322 | Configuration Read/Write[CF225 Rear Thorax Side Air Bag, Driver Side] |
| 0323 | Configuration Read/Write[CF226 Rear Thorax Side Air Bag, Passenger Side] |
| 0324 | Configuration Read/Write[CF227 Remote Locking Buzzer] |
| 0325 | Configuration Read/Write[CF227 Traction Battery Range] |
| 0326 | Configuration Read/Write[CF228 Traction Battery Range] |
| 0327 | Configuration Read/Write[CF229 Alarm] |
| 0328 | Configuration Read/Write[CF229 Gear Positions Memorization] |
| 0329 | Configuration Read/Write[CF229 Passenger Front Air Bag Circuit 2] |
| 0330 | Configuration Read/Write[CF230 Driver Front Air Bag Circuit 1] |

| | |
|------|--|
| 0331 | Configuration Read/Write[CF230 Econometer] |
| 0332 | Configuration Read/Write[CF231 Driver Front Air Bag Circuit 2] |
| 0334 | Configuration Read/Write[CF236 Passenger Front Air Bag Circuit 1] |
| 0335 | Configuration Read/Write[CF241 Language Configuration] |
| 0336 | Configuration Read/Write[CF244 Fuel Flap Locking] |
| 0337 | Configuration Read/Write[CF245 Hill Start] |
| 0338 | Configuration Read/Write[CF246 Improved Grip Function] |
| 0339 | Configuration Read/Write[CF247 Stop And Start Configuration] |
| 0340 | Configuration Read/Write[CF248 Buzzer] |
| 0341 | Configuration Read/Write[CF248 Passenger Air Bag Locking Mode] |
| 0342 | Configuration Read/Write[CF253 Rear Wiper/Reverse Gear Connection] |
| 0343 | Configuration Read/Write[CF253 Voltmeter] |
| 0344 | Configuration Read/Write[CF254 Ammeter] |
| 0345 | Configuration Read/Write[CF255 Language Version.] |
| 0346 | Configuration Read/Write[CF256 Water Temperature] |
| 0347 | Configuration Read/Write[CF265 Driver'S Front Buckle Pretensioner] |
| 0348 | Configuration Read/Write[CF266 Passenger'S Front Buckle Pretensioner] |
| 0349 | Configuration Read/Write[CF267 Passenger Compartment Heating Resistor] |
| 0350 | Configuration Read/Write[CF268 Raising Of Elect. Window(With Anti-Pinch)] |
| 0351 | Configuration Read/Write[CF270 Scandinavian Runnings Lights] |
| 0352 | Configuration Read/Write[CF272 Sdo] |
| 0353 | Configuration Read/Write[CF273 Driver'S Seat Buckle Sensor] |
| 0354 | Configuration Read/Write[CF273 Timed Lighting Supply] |
| 0355 | Configuration Read/Write[CF274 Dongle] |
| 0356 | Configuration Read/Write[CF274 Passenger'S Seat Buckle Sensor] |
| 0357 | Configuration Read/Write[CF275 Passenger Presence Detection Sensor] |
| 0358 | Configuration Read/Write[CF275 Second Fitting Alarm] |
| 0359 | Configuration Read/Write[CF276 Rear Screen Demister] |
| 0360 | Configuration Read/Write[CF277 Indicator Light Configuration] |
| 0361 | Configuration Read/Write[CF278 Rear Inertia Reels] |
| 0362 | Configuration Read/Write[CF281 Heated Rear Screen Indicator Light Circuit] |
| 0363 | Configuration Read/Write[CF282 Passenger'S Lap Strap/Seat Airbag] |
| 0364 | Configuration Read/Write[CF283 Driver'S Lap Strap/Seat Airbag] |
| 0365 | Configuration Read/Write[CF284 Front Buckle Pretensometers] |
| 0366 | Configuration Read/Write[CF285 Driver'S Front Side Impact Sensor] |
| 0367 | Configuration Read/Write[CF286 Passenger'S Front Side Impact Sensor] |
| 0368 | Configuration Read/Write[CF287 Column Steering Lock] |
| 0369 | Configuration Read/Write[CF289 Driver'S Seat Position Sensor] |
| 0370 | Configuration Read/Write[CF289 Load Area] |
| 0371 | Configuration Read/Write[CF290 Steering Lock] |
| 0372 | Configuration Read/Write[CF291 Side On Which Steering Wheel Fitted] |
| 0374 | Configuration Read/Write[CF292 Trailer Present] |
| 0375 | Configuration Read/Write[CF293 Driver'S Side Rear Strap Sensor] |
| 0376 | Configuration Read/Write[CF293 Interior Ambience Lighting] |
| 0377 | Configuration Read/Write[CF294 Driver' Side Rear Frontal Airbag] |

| | |
|------|---|
| 0378 | Configuration Read/Write[CF294 Remote Engine Starting] |
| 0379 | Configuration Read/Write[CF295 Hands-Free Deadlocking] |
| 0380 | Configuration Read/Write[CF295 Passenger Side Rear Frontal Airbag] |
| 0381 | Configuration Read/Write[CF296 Deadlocking With Remote Control On Key] |
| 0382 | Configuration Read/Write[CF297 B/C Without Side Airbags] |
| 0383 | Configuration Read/Write[CF297 Wiping Learning] |
| 0384 | Configuration Read/Write[CF298 B/C With Front Thorax + Head Airbags] |
| 0385 | Configuration Read/Write[CF299 Access/Starter Type] |
| 0386 | Configuration Read/Write[CF299 B/C With Fr/Rr Thorax + Head Airbags] |
| 0387 | Configuration Read/Write[CF300 G/S With Head Airbags] |
| 0388 | Configuration Read/Write[CF300 Stop And Start Configuration] |
| 0389 | Configuration Read/Write[CF301 G/S Without Head Airbag] |
| 0390 | Configuration Read/Write[CF301 Rear Wiper Information] |
| 0391 | Configuration Read/Write[CF302 J Without Side Airbags] |
| 0392 | Configuration Read/Write[CF303 J With Side Ab W/O Rear Chest Ab] |
| 0393 | Configuration Read/Write[CF304 Accelerated Idle] |
| 0394 | Configuration Read/Write[CF305 E With Side Airbags] |
| 0395 | Configuration Read/Write[CF305 Heated Rear Screen Via Injection System] |
| 0396 | Configuration Read/Write[CF306 E Without Side Airbags] |
| 0397 | Configuration Read/Write[CF306 Pchr Number Controlled] |
| 0398 | Configuration Read/Write[CF307 Computer Configuration] |
| 0399 | Configuration Read/Write[CF307 K/L Without Side Airbags] |
| 0400 | Configuration Read/Write[CF308 K/L With F Chest + Curt Airbags] |
| 0401 | Configuration Read/Write[CF309 Air Conditioning Management] |
| 0402 | Configuration Read/Write[CF309 K/L With F/R Chest + Curt Airbags] |
| 0403 | Configuration Read/Write[CF310 Steering Lock] |
| 0404 | Configuration Read/Write[CF311 Remote Engine Starting] |
| 0405 | Configuration Read/Write[CF312 Vehicle Type] |
| 0406 | Configuration Read/Write[CF313 Make] |
| 0407 | Configuration Read/Write[CF314 Stop And Start Function] |
| 0408 | Configuration Read/Write[CF314 Trajectory Control] |
| 0409 | Configuration Read/Write[CF315 Check Motor Torque By Abs] |
| 0410 | Configuration Read/Write[CF315 Power Back Door] |
| 0411 | Configuration Read/Write[CF316 Automatic Rear Wiper Function] |
| 0412 | Configuration Read/Write[CF316 Selector Lever Locking] |
| 0414 | Configuration Read/Write[CF320 Note Oil Wear Counter] |
| 0415 | Erase[Fault Memory] |
| 0416 | Erase[R00017 Self Diag Clear] |
| 0417 | Erase[R001 Self Diag Clear] |
| 0418 | Erase[RZ00001 Self Diag Clear] |
| 0419 | Erase[RZ00003 Self Diag Clear] |
| 0420 | Erase[RZ00004 Self Diag Clear] |
| 0421 | Erase[RZ00006 Self Diag Clear] |
| 0422 | Erase[RZ00022 Self Diag Clear] |
| 0423 | Erase[RZ00029 Self Diag Clear] |

| | |
|------|--|
| 0424 | Erase[RZ001 Adblue Tank Programming] |
| 0425 | Erase[RZ001 Brake Pedal Position 1 And 2 Sensor Status Offset] |
| 0426 | Erase[RZ001 Computer Reset] |
| 0427 | Erase[RZ001 Erase Overheating Counter] |
| 0428 | Erase[RZ001 Fault Memory] |
| 0429 | Erase[RZ001 Fault/S Memorised] |
| 0430 | Erase[RZ001 Test Parameters] |
| 0431 | Erase[RZ001 Vacuum Pump Ageing Counter] |
| 0432 | Erase[RZ002 Adblue Pump Module Programming] |
| 0433 | Erase[RZ002 Computer Reinitialisation] |
| 0434 | Erase[RZ002 Computer Reset] |
| 0435 | Erase[RZ002 Cruise Control/Speed Limiter Programming] |
| 0436 | Erase[RZ002 Customer Settings And Details] |
| 0437 | Erase[RZ002 Ecu Memory] |
| 0438 | Erase[RZ002 Egr Adaptives] |
| 0439 | Erase[RZ002 Erase Incorrect Cranking Counter] |
| 0440 | Erase[RZ002 Fault Memory] |
| 0441 | Erase[RZ002 Following Tyre Change] |
| 0442 | Erase[RZ002 Inverter Fan Assembly] |
| 0443 | Erase[RZ002 Programmed Values] |
| 0444 | Erase[RZ002 Shoe Lining Energy Counter] |
| 0445 | Erase[RZ002 Traction Battery Lock] |
| 0446 | Erase[RZ003 Actuator Relay Control] |
| 0447 | Erase[RZ003 Adblue Injector Programming] |
| 0448 | Erase[RZ003 Computer Reset] |
| 0449 | Erase[RZ003 Customer Settings And Details] |
| 0450 | Erase[RZ003 Engine Adaptives] |
| 0451 | Erase[RZ003 Esp Sensor Programming] |
| 0452 | Erase[RZ003 Fault Memory] |
| 0454 | Erase[RZ003 Programme Slip Point] |
| 0455 | Erase[RZ003 Traction Battery Interlock] |
| 0456 | Erase[RZ004 Amplifier Reset] |
| 0457 | Erase[RZ004 Dtc Reset] |
| 0458 | Erase[RZ004 Emergency Call Service] |
| 0459 | Erase[RZ004 Erase Stored Misalignment] |
| 0460 | Erase[RZ004 Fan Assembly] |
| 0461 | Erase[RZ004 Fault Memory] |
| 0462 | Erase[RZ004 Hands-Free Cards Low Battery Counter] |
| 0463 | Erase[RZ004 Master Cylinder Pressure Sensor Offset] |
| 0464 | Erase[RZ004 Pressure Regulation Adaptives] |
| 0465 | Erase[RZ004 Reset Radio] |
| 0466 | Erase[RZ005 Adblue Dosing Module Catalyst] |
| 0467 | Erase[RZ005 Auto-Adaptives] |
| 0468 | Erase[RZ005 Computer Reset] |
| 0469 | Erase[RZ005 Fault Memory] |

| | |
|------|---|
| 0470 | Erase[RZ005 Piston Pressure Sensor Offset] |
| 0471 | Erase[RZ005 Programmed Values] |
| 0472 | Erase[RZ005 Steering Angle Offset] |
| 0473 | Erase[RZ005 Traction Battery Lock] |
| 0474 | Erase[RZ006 Adblue Quality Sensor Programming] |
| 0475 | Erase[RZ006 Computer Reset] |
| 0476 | Erase[RZ006 Converter Lock Up Adaptive] |
| 0477 | Erase[RZ006 Driving Water Pump] |
| 0478 | Erase[RZ006 Fault Memory] |
| 0479 | Erase[RZ006 Self Learning Value Erase -Butane Ratio Modeling] |
| 0480 | Erase[RZ006 Steering Wheel Angle Sensor Programming] |
| 0481 | Erase[RZ007 Charge Water Pump] |
| 0482 | Erase[RZ007 Fault Memory] |
| 0483 | Erase[RZ007 Obd Memory] |
| 0484 | Erase[RZ007 Reset] |
| 0485 | Erase[RZ007 Self Learning Value Erase - Fuel Pump Pwm] |
| 0486 | Erase[RZ007 Steering Wheel Angle Offset Sensor] |
| 0487 | Erase[RZ007 Touch Screen] |
| 0488 | Erase[RZ008 Clutch Initial Closed Position] |
| 0489 | Erase[RZ008 Engine Parameter Adaptives] |
| 0490 | Erase[RZ008 Transverse Acceleration Offset Sensor] |
| 0491 | Erase[RZ008 Ubp Solenoid Valve] |
| 0492 | Erase[RZ009 Brake Pressure Offset Sensor] |
| 0494 | Erase[RZ009 Number Of Starting Cycles] |
| 0495 | Erase[RZ009 Vehicle Function Programming] |
| 0496 | Erase[RZ010 Anti-Theft Alarm Trigger S/W] |
| 0497 | Erase[RZ010 Fault Memory] |
| 0498 | Erase[RZ010 Longitudinal Acceleration Sensor Offset] |
| 0499 | Erase[RZ010 Number Of Starting] |
| 0500 | Erase[RZ010 Reinit. Extreme Cold Reverse Gear Engagement] |
| 0501 | Erase[RZ011 Calculate Battery Wear Counters] |
| 0502 | Erase[RZ011 Reset] |
| 0503 | Erase[RZ011 Sensor Offsets] |
| 0504 | Erase[RZ012 Clutch Wear] |
| 0505 | Erase[RZ012 Egr Valve Programming] |
| 0506 | Erase[RZ012 High Pressure Pump Counter] |
| 0507 | Erase[RZ012 Reset] |
| 0508 | Erase[RZ012 Stored Energy Management Data] |
| 0509 | Erase[RZ013 High Pressure Pump Counter] |
| 0510 | Erase[RZ013 Measured Application Of Rear Rh Calliper] |
| 0511 | Erase[RZ013 Reset Clutch Data] |
| 0512 | Erase[RZ013 Stop And Start Function] |
| 0513 | Erase[RZ014 Adaptives On Air Intake Flap Fault] |
| 0514 | Erase[RZ014 Fault Memory] |
| 0515 | Erase[RZ014 Measured Application Of Rear Lh Calliper] |

| | |
|------|---|
| 0516 | Erase[RZ014 Number Of Starting Cycles] |
| 0517 | Erase[RZ014 Reset Clutch Data Protection] |
| 0518 | Erase[RZ015 Reset Gearbox Data] |
| 0519 | Erase[RZ016 Launch Control Counter] |
| 0520 | Erase[RZ016 Stop And Start Function] |
| 0521 | Erase[RZ017 Egr Programming] |
| 0522 | Erase[RZ017 Number Of Starting Cycles] |
| 0523 | Erase[RZ018 High Pressure Pump Counter] |
| 0524 | Erase[RZ019 Programming Reinitialisation] |
| 0525 | Erase[RZ022 Erase Idle Regulation Adaptives] |
| 0526 | Erase[RZ027 Adaptive Value - Tps] |
| 0527 | Erase[RZ028 Adaptive Value - A/F Ratio] |
| 0528 | Erase[RZ030 Particle Filter Adaptives] |
| 0529 | Erase[RZ031 Programming Throttle Limits] |
| 0530 | Erase[RZ032 Air Path Programming] |
| 0531 | Erase[RZ033 Richness Regulation Programming] |
| 0532 | Erase[RZ034 Ecu Memory] |
| 0534 | Erase[RZ036 Particle Filter Relative Pressure Sensor] |
| 0535 | Erase[RZ037 Flywheel Target Programming] |
| 0536 | Erase[RZ038 Pinking Sensor Programming] |
| 0537 | Erase[RZ039 Camshaft Sensor Programming] |
| 0538 | Erase[RZ041 Fuel Flow Regulator] |
| 0539 | Erase[RZ042 Ignition Coil Adaptive] |
| 0540 | Erase[RZ043 Exhaust Injector Circuit] |
| 0541 | Erase[RZ044 Air Damper Valve Programming] |
| 0542 | Erase[RZ045 Rail Pressure Sensor Adaptives] |
| 0543 | Erase[RZ046 Injector Adaptives] |
| 0544 | Erase[RZ047 Cruise Control/Speed Limiter Programming] |
| 0545 | Erase[RZ050 Injector Adaptives] |
| 0546 | Erase[RZ051 Injector Adaptives No. 1] |
| 0547 | Erase[RZ052 Injector Adaptives No. 2] |
| 0548 | Erase[RZ053 Injector Adaptives No. 3] |
| 0549 | Erase[RZ054 Injector Adaptives No. 4] |
| 0550 | Erase[RZ061 Flywheel Target Programming] |
| 0551 | Erase[RZ062 Proportional Richness Sensor Programming] |
| 0552 | Erase[RZ063 Preheater Unit] |
| 0553 | Erase[RZ064 Alcohol Level Prog.] |
| 0554 | Erase[RZ065 Flywheel Target Programming] |
| 0555 | Erase[RZ066 Exhaust Flap Low Setting] |
| 0556 | Erase[RZ067 Low Pressure Egr Valve Programming] |
| 0557 | Erase[RZ068 Swirl Flap Programming] |
| 0558 | Erase[RZ069 Fuel Pump Programming] |
| 0559 | Erase[RZ070 Turbocharger Programming] |
| 0560 | Erase[RZ071 Manifold Pressure Sensor Programming] |
| 0561 | Erase[RZ072 Air Flowmeter Programming] |

| | |
|------|--|
| 0562 | Erase[RZ073 Particle Filter Pressure Diff. Sensor] |
| 0563 | Erase[RZ074 Swirl Flap] |
| 0564 | Erase[RZ075 Camshaft No. 2 Sensor Programming] |
| 0565 | Erase[RZ077 Injection Pump Adaptatives] |
| 0566 | Erase[RZ078 Starter Adaptatives] |
| 0567 | Erase[RZ079 Number Of Starting Cycles] |
| 0568 | Erase[RZ084 Egr Bypass Programming] |
| 0569 | Erase[RZ085 Idle Speed Reference] |
| 0570 | Erase[RZ087 Catalytic Converter] |
| 0571 | Erase[RZ088 Air Damper Valve Programming] |
| 0572 | Erase[RZ089 Inhibit Evap Strategy] |
| 0574 | Erase[RZ091 Waste Gate Regulation] |
| 0575 | Erase[RZ093 Injection Pump Adaptatives] |
| 0576 | Erase[RZ094 Idle Speed Learning] |
| 0577 | Erase[RZ095 Injection Time Programming] |
| 0578 | Erase[RZ096 Torque Learning] |
| 0579 | Erase[RZ097 High Pressure Pump Counter] |
| 0580 | Erase[RZ099 Stop And Start Function] |
| 0581 | Erase[RZ100 Programming Throttle Limits] |
| 0582 | Erase[RZ101 Upstream Oxygen Sensor] |
| 0583 | Erase[RZ102 Flywheel Target Programming] |
| 0584 | Erase[RZ103 Flywheel Target Programming] |
| 0585 | Erase[RZ104 Flywheel Target Programming] |
| 0586 | Erase[RZ105 Flywheel Target Programming] |
| 0587 | Erase[RZ116 Clutch End Of Travel Wiring Switch] |
| 0588 | Erase[RZ117 Richness Regulation Programming] |
| 0589 | Erase[RZ118 Starting Authorization] |
| 0590 | Erase[RZ120 Injection Pump Adaptatives] |
| 0591 | Erase[RZ123 Traction Battery Relay] |
| 0592 | Erase[RZ125 Computer Reset] |
| 0593 | Erase[RZ126 Cylinder Pressure Sensor] |
| 0594 | Erase[RZ132 Fuel Pump Priming Complete] |
| 0595 | Erase[RZ133 Rail Pressure Limiter] |
| 0596 | Erase[RZ136 Upstream Oxygen Sensor Reset] |
| 0597 | Erase[RZ137 Downstream Oxygen Sensor Reset] |
| 0598 | Erase[RZ138 Boost Pressure Wastegate Control] |
| 0599 | Erase[RZ147 Upstream Oxygen Sensor Reset] |
| 0600 | Erase[RZ148 Downstream Oxygen Sensor Reset] |
| 0601 | Other Configurations[VP001 Computer Reinitialisation] |
| 0602 | Other Configurations[VP001 Cylinder 1 Injector Code] |
| 0603 | Other Configurations[VP001 Steering Angle Sensor Initialisation] |
| 0604 | Other Configurations[VP001 Vacuum Pump Ageing Counter] |
| 0605 | Other Configurations[VP001 Write Date Of After Sales Operation] |
| 0606 | Other Configurations[VP001 Write Date Of Last After Sales Operation] |
| 0607 | Other Configurations[VP002 Adblue Small Quantity Test Metering] |

| | |
|------|---|
| 0608 | Other Configurations[VP002 Cylinder 2 Injector Code] |
| 0609 | Other Configurations[VP002 Parametrage Prive 1] |
| 0610 | Other Configurations[VP002 Programming Of Seat Stops] |
| 0611 | Other Configurations[VP002 Speedo Index] |
| 0612 | Other Configurations[VP002 System Initialisation] |
| 0614 | Other Configurations[VP003 Caravan Towing Distance] |
| 0615 | Other Configurations[VP003 Computer Programming/Initialisation] |
| 0616 | Other Configurations[VP003 Configuration Of System Components] |
| 0617 | Other Configurations[VP003 Cylinder 3 Injector Code] |
| 0618 | Other Configurations[VP003 Parametrage Prive 1] |
| 0619 | Other Configurations[VP003 Start Authorisation From Bms Safety] |
| 0620 | Other Configurations[VP003 Start Authorisation From Bms] |
| 0621 | Other Configurations[VP003 Steering Wheel Angle Sensor] |
| 0622 | Other Configurations[VP003 Write Date Of After Sales Operation] |
| 0623 | Other Configurations[VP004 Adblue Pressure Preparation Test] |
| 0624 | Other Configurations[VP004 Computer Initialisation] |
| 0625 | Other Configurations[VP004 Computer Reinitialisation] |
| 0626 | Other Configurations[VP004 Cylinder 4 Injector Code] |
| 0627 | Other Configurations[VP004 Inhibition Of 4-Wheel Drive Function] |
| 0628 | Other Configurations[VP004 Netherlands Legislation] |
| 0629 | Other Configurations[VP004 Parametrage Prive 1] |
| 0630 | Other Configurations[VP004 Steering Wheel Angle Sensor Programming] |
| 0631 | Other Configurations[VP004 Vehicle Parameters] |
| 0632 | Other Configurations[VP005 Adblue Spray Test] |
| 0633 | Other Configurations[VP005 Front Slide Learning] |
| 0634 | Other Configurations[VP005 Geographical Zone] |
| 0635 | Other Configurations[VP005 Increase Fuel Warning Threshold] |
| 0636 | Other Configurations[VP005 Reinstatement Of 4-Wheel Drive Function] |
| 0637 | Other Configurations[VP005 Traction Battery Lock] |
| 0638 | Other Configurations[VP005 Wheel Circumference] |
| 0639 | Other Configurations[VP005 Write Date Of After Sales Operation] |
| 0640 | Other Configurations[VP005 Write Date Of Last After Sales Operation] |
| 0641 | Other Configurations[VP006 Adblue Emptying Test] |
| 0642 | Other Configurations[VP006 Air Recirculation Flap Motor] |
| 0643 | Other Configurations[VP006 Audio Links Test] |
| 0644 | Other Configurations[VP006 Computer Calibration] |
| 0645 | Other Configurations[VP006 Lock Computer] |
| 0646 | Other Configurations[VP006 Oil Change Interval In Km] |
| 0647 | Other Configurations[VP006 Rear Slide Learning] |
| 0648 | Other Configurations[VP006 Resetting Internal Protection] |
| 0649 | Other Configurations[VP006 Write Date Of Last After Sales Operation] |
| 0650 | Other Configurations[VP007 Adblue Leak Test] |
| 0651 | Other Configurations[VP007 Computer Initialisation] |
| 0652 | Other Configurations[VP007 Decrement Idle Speed] |
| 0654 | Other Configurations[VP007 Modification Of Parameters After Initialisation] |

| | |
|------|--|
| 0655 | Other Configurations[VP007 Oil Change Interval In Months] |
| 0656 | Other Configurations[VP007 Parametrage Prive 2] |
| 0657 | Other Configurations[VP007 Parametrage Prive 4] |
| 0658 | Other Configurations[VP007 Speedo Index] |
| 0659 | Other Configurations[VP007 System Initialisation] |
| 0660 | Other Configurations[VP007 Unlock Computer] |
| 0661 | Other Configurations[VP007 Valve Set Selection] |
| 0662 | Other Configurations[VP008 Adblue Injector Release Test] |
| 0663 | Other Configurations[VP008 Front Slide Learning] |
| 0664 | Other Configurations[VP008 Number Of Starting 1] |
| 0665 | Other Configurations[VP008 Oil Change Range:Current Value In Km] |
| 0666 | Other Configurations[VP008 Programming Selection/Engaging Zones] |
| 0667 | Other Configurations[VP008 Unlock Injector Control] |
| 0668 | Other Configurations[VP008 Write Date Of Last After Sales Operation] |
| 0669 | Other Configurations[VP009 Adblue Backflow Pump Test] |
| 0670 | Other Configurations[VP009 Eeprom Memory Write Procedure] |
| 0671 | Other Configurations[VP009 Number Of Starting 2] |
| 0672 | Other Configurations[VP009 Oil Change Range:Current Value In Months] |
| 0673 | Other Configurations[VP009 Rear Slide Learning] |
| 0674 | Other Configurations[VP009 Write Date Of Last After Sales Operation] |
| 0675 | Other Configurations[VP010 Adblue First Filling Test] |
| 0676 | Other Configurations[VP010 Lumbar Learning] |
| 0677 | Other Configurations[VP010 Number Of Starting 3] |
| 0678 | Other Configurations[VP010 Update Odometer] |
| 0679 | Other Configurations[VP011 Eeprom Memory Write Procedure] |
| 0680 | Other Configurations[VP011 Fuel Gauge Calibration] |
| 0681 | Other Configurations[VP011 Increment Of Idle Speed] |
| 0682 | Other Configurations[VP011 Number Of Starting 4] |
| 0683 | Other Configurations[VP011 Parametrage Prive 1] |
| 0684 | Other Configurations[VP011 Steering Wheel Angle Calib.] |
| 0685 | Other Configurations[VP012 Assisted Engagement When Stationary] |
| 0686 | Other Configurations[VP012 Corrosion Battery Counter Memorised] |
| 0687 | Other Configurations[VP012 Prevention Of Electrical Consumers] |
| 0688 | Other Configurations[VP012 Write Date Of Last After Sales Operation] |
| 0689 | Other Configurations[VP013 Corrosion Battery Counter Estimated] |
| 0690 | Other Configurations[VP013 Lock Injector Control] |
| 0691 | Other Configurations[VP013 Number Plate] |
| 0692 | Other Configurations[VP013 Write Date New Clutch Fitted] |
| 0694 | Other Configurations[VP014 Brake Lining Friction Learning] |
| 0695 | Other Configurations[VP014 Change In Triggering Limit] |
| 0696 | Other Configurations[VP014 Parametrage Prive 1] |
| 0697 | Other Configurations[VP014 Write Clutch Initial Closed Position] |
| 0698 | Other Configurations[VP015 Battery Cycle Counter Memorised] |
| 0699 | Other Configurations[VP015 Computer Configuration] |
| 0700 | Other Configurations[VP015 Eeprom Memory Write Procedure] |

| | |
|------|---|
| 0701 | Other Configurations[VP015 Module Change] |
| 0702 | Other Configurations[VP015 Note Oil Wear Counter] |
| 0703 | Other Configurations[VP015 Parametrage Prive 1] |
| 0704 | Other Configurations[VP015 Rear Brake Unit Initialisation] |
| 0705 | Other Configurations[VP015 Restart The Computer] |
| 0706 | Other Configurations[VP016 Battery Cycle Counter Estimated] |
| 0707 | Other Configurations[VP016 Configuring The Multimedia Computer] |
| 0708 | Other Configurations[VP016 Eeprom Memory Write Procedure] |
| 0709 | Other Configurations[VP016 Internal Battery] |
| 0710 | Other Configurations[VP016 New Vehicle Storage Mode Deactivation] |
| 0711 | Other Configurations[VP016 Rear Brake Unit Repositioning] |
| 0712 | Other Configurations[VP016 Write Date Of After Sales Operation] |
| 0713 | Other Configurations[VP016 Write Transmission Oil Change Date] |
| 0714 | Other Configurations[VP017 Activate Maintenance Mode] |
| 0715 | Other Configurations[VP017 Battery Cycle Counter] |
| 0716 | Other Configurations[VP017 Change In Triggering Limit] |
| 0717 | Other Configurations[VP017 Erase Computer Memory] |
| 0718 | Other Configurations[VP017 Gearbox Type] |
| 0719 | Other Configurations[VP017 Program Clutch Open Position] |
| 0720 | Other Configurations[VP018 Deactivate Maintenance Mode] |
| 0721 | Other Configurations[VP018 Fuel Sender Calibration (Doi.)] |
| 0722 | Other Configurations[VP018 Neutral Position Programming] |
| 0723 | Other Configurations[VP018 Parametrage Prive 12] |
| 0724 | Other Configurations[VP018 Vehicle Parameters] |
| 0725 | Other Configurations[VP019 Data Transmission To Server] |
| 0726 | Other Configurations[VP019 Fuel Sender Calibration (Europe)] |
| 0727 | Other Configurations[VP019 Interior Aerial 1 Test] |
| 0728 | Other Configurations[VP019 Parametrage Prive 13] |
| 0729 | Other Configurations[VP019 Parametrage Prive 9] |
| 0730 | Other Configurations[VP019 Passenger Air Bag Locking Mode] |
| 0731 | Other Configurations[VP020 Accelerometer] |
| 0732 | Other Configurations[VP020 Encryption Key Request] |
| 0734 | Other Configurations[VP020 Interior Aerial 2 Test] |
| 0735 | Other Configurations[VP020 Parametrage Prive 14] |
| 0736 | Other Configurations[VP021 External Boot Aerial Test] |
| 0737 | Other Configurations[VP021 Parametrage Prive 15] |
| 0738 | Other Configurations[VP021 Prevention Of Stop Light Auto Illumination] |
| 0739 | Other Configurations[VP021 Reset Oil Change Counter] |
| 0740 | Other Configurations[VP021 Selection Of Valve Set] |
| 0741 | Other Configurations[VP022 Auto Stop Lights Illumination Authorisation] |
| 0742 | Other Configurations[VP022 Front Left-Hand External Aerial Test] |
| 0743 | Other Configurations[VP022 Injection Prohibition] |
| 0744 | Other Configurations[VP022 Parametrage Prive 1] |
| 0745 | Other Configurations[VP023 Esp Automatic Reconnection Threshold] |
| 0746 | Other Configurations[VP023 Front Right-Hand External Aerial Test] |

| | |
|------|---|
| 0747 | Other Configurations[VP023 Parametrage Prive 2] |
| 0748 | Other Configurations[VP023 Shift Drum Reference Position] |
| 0749 | Other Configurations[VP024 Parametrage Prive 3] |
| 0750 | Other Configurations[VP024 Program Clutch Assembly] |
| 0751 | Other Configurations[VP025 Parametrage Prive 4] |
| 0752 | Other Configurations[VP025 Program Clutch Adjustment] |
| 0753 | Other Configurations[VP025 Transverse Acceleration Sensor] |
| 0754 | Other Configurations[VP026 Control Headlight Motors] |
| 0755 | Other Configurations[VP026 Programme Clutch Position] |
| 0756 | Other Configurations[VP026 Slope Sensor Adjustment] |
| 0757 | Other Configurations[VP027 Program Clutch 1 Adjustment] |
| 0758 | Other Configurations[VP028 Program Clutch 2 Adjustment] |
| 0759 | Other Configurations[VP029 Memorisation Of Speeds] |
| 0760 | Other Configurations[VP030 Chassis Wear Programming] |
| 0761 | Other Configurations[VP030 Gearbox Vehicle Acceleration Sensor Init.] |
| 0762 | Other Configurations[VP031 Hydraulic Brake Compensation] |
| 0763 | Other Configurations[VP032 Automatic Gearbox Control] |
| 0764 | Other Configurations[VP032 Eeprom Memory Write Procedure] |
| 0765 | Other Configurations[VP032 Multiplexed Network Configuration] |
| 0766 | Other Configurations[VP032 Veh. Speed At Initialisation] |
| 0767 | Other Configurations[VP035 High Pressure Pump Counter] |
| 0768 | Other Configurations[VP035 Modus Fuel Sender Calibration (Europe)] |
| 0769 | Other Configurations[VP035 Parametrage Prive 5] |
| 0770 | Other Configurations[VP035 Stop Electrical Consumer Prevention] |
| 0771 | Other Configurations[VP036 Fuel Supply Prevention] |
| 0772 | Other Configurations[VP036 Modus Long Fuel Sender Calibration (Europe)] |
| 0774 | Other Configurations[VP036 Steering Angle Sensor Initialisation] |
| 0775 | Other Configurations[VP037 Maintenance Autonomy Interval In Km] |
| 0776 | Other Configurations[VP037 Stop Fuel Supply Prevention] |
| 0777 | Other Configurations[VP038 Longitudinal Acceleration Sensor] |
| 0778 | Other Configurations[VP038 Van Fast Idle Speed Increase] |
| 0779 | Other Configurations[VP039 Computer Initialisation] |
| 0780 | Other Configurations[VP039 Maintenance Autonomy Interval In Months] |
| 0781 | Other Configurations[VP039 Van Fast Idle Speed Decrease] |
| 0782 | Other Configurations[VP040 Maintenance Autonomy:Current Value In Km] |
| 0783 | Other Configurations[VP040 Particle Filter Regeneration] |
| 0784 | Other Configurations[VP042 Maintenance Autonomy:Current Value Month] |
| 0785 | Other Configurations[VP043 Improved Grip Function] |
| 0786 | Other Configurations[VP044 Acceleration Sensor] |
| 0787 | Other Configurations[VP045 Hill Start] |
| 0788 | Other Configurations[VP046 Front Wheel Circumference] |
| 0789 | Other Configurations[VP047 Lcd Display Fuel Gauge Calibration] |
| 0790 | Other Configurations[VP047 Parametrage Prive 15] |
| 0791 | Other Configurations[VP047 Rear Wheel Circumference] |
| 0792 | Other Configurations[VP048 Analogic Display Fuel Gauge Calibration] |

| | |
|------|---|
| 0793 | Other Configurations[VP048 Driving Type] |
| 0794 | Other Configurations[VP050 Adblue First Filling Test] |
| 0795 | Other Configurations[VP051 Adblue Emptying Test] |
| 0796 | Other Configurations[VP051 Tyre Pressure Monitor Function] |
| 0797 | Other Configurations[VP052 Flow Rate Function] |
| 0798 | Other Configurations[VP052 Vacuum Pump] |
| 0799 | Other Configurations[VP053 Conformity Check] |
| 0800 | Other Configurations[VP054 Activate Maintenance Mode] |
| 0801 | Other Configurations[VP055 Adblue Injector Release Test] |
| 0802 | Other Configurations[VP055 Deactivate Maintenance Mode] |
| 0803 | Other Configurations[VP056 Adblue Injector Sound Test] |
| 0804 | Other Configurations[VP056 Fuel Gauge Calibration Lcd (Japan)] |
| 0805 | Other Configurations[VP057 Commission Automatic Application] |
| 0806 | Other Configurations[VP057 Fuel Gauge Calibration Needle (Japan)] |
| 0807 | Other Configurations[VP057 Idle Air Volume Learning - Factory Mode] |
| 0808 | Other Configurations[VP058 Idle Air Volume Learning - Service Mode] |
| 0809 | Other Configurations[VP058 Lcd Display Fuel Gauge Calibration] |
| 0810 | Other Configurations[VP059 Lcd Display Fuel Gauge Calibration] |
| 0811 | Other Configurations[VP060 Analogic Display Fuel Gauge Calibration] |
| 0812 | Other Configurations[VP061 Analogic Display Fuel Gauge Calibration] |
| 0814 | Other Configurations[VP064 Ignition Timing Adjustment] |
| 0815 | Other Configurations[VP064 Lcd Display Fuel Gauge Calibration] |
| 0816 | Other Configurations[VP065 Lcd Display Fuel Gauge Calibration] |
| 0817 | Other Configurations[VP066 Analogic Display Fuel Gauge Calibration] |
| 0818 | Other Configurations[VP067 Analogic Display Fuel Gauge Calibration] |
| 0819 | Other Configurations[VP067 Static Test] |
| 0820 | Other Configurations[VP068 Computer Configuration] |
| 0821 | Other Configurations[VP069 Catalytic Converter Test] |
| 0822 | Other Configurations[VP070 Air Path Programming] |
| 0823 | Other Configurations[VP072 Pump Pressure Regulator Type] |
| 0824 | Other Configurations[VP073 Fuel Pump Forced Conversion] |
| 0825 | Other Configurations[VP073 Reset Oil Change Counter] |
| 0826 | Other Configurations[VP153 Parametrage Prive 98] |
| 0827 | Other Configurations[VP214 Parametrage Prive 159] |
| 0828 | Other Configurations[VP215 Parametrage Prive 160] |
| 0829 | Other Configurations[VP266 Parametrage Prive 211] |
| 0830 | Other Configurations[VP267 Parametrage Prive 212] |
| 0831 | Other Configurations[VP292 Parametrage Prive 237] |
| 0832 | Other Configurations[VP293 Parametrage Prive 238] |
| 0833 | Other Configurations[VP294 Parametrage Prive 239] |
| 0834 | Other Configurations[VP295 Parametrage Prive 240] |
| 0835 | Other Configurations[VP305 Parametrage Prive 250] |
| 0836 | Other Configurations[VP306 Number Of Starting 1] |
| 0837 | Other Configurations[VP307 Number Of Starting 2] |
| 0838 | Other Configurations[VP308 Number Of Starting 3] |

| | |
|------|---|
| 0839 | Other Configurations[VP309 Number Of Starting 4] |
| 0840 | Other Configurations[VP310 Alternator Setpoint Voltage] |
| 0841 | Other Configurations[VP342 Vacuum Pump Operation Request] |
| 0842 | Other Configurations[VP343 Number Of Starting Cycles] |
| 0843 | Other Configurations[VP344 High Pressure Pump Counter] |
| 0844 | Other Configurations[VP383 Memorisation Of Speeds] |
| 0845 | Other Configurations[VP384 Driver Start Counter] |
| 0846 | Other Configurations[VP385 Idle Stop And Start Counter] |
| 0847 | Other Configurations[VP386 Vacuum Pump Operation Request] |
| 0848 | Other Configurations[VP387 Vacuum Pump Operation Request] |
| 0849 | Other Configurations[VP388 Inverter Activation Request] |
| 0850 | Other Configurations[VP389 Dcdc Setpoint Voltage] |
| 0851 | Other Configurations[VP390 Manual Gear Position] |
| 0852 | Other Configurations[VP399 New Vehicle Storage Mode Deactivation] |