

**NEXPEAK K1****Key program Function List V10.10**

Brand	ECU Type	System	Function
Scion	Type 1	Remote	1. Program remote 2. Erase remote
Scion	Type 2	Remote	1. Program remote 2. Erase remote
Scion	Type 3	Remote	1. Program remote
Scion	Type 1(4C)	Immobiliser	1. Add a master key 2. Add a vice key 3. Erase keys 4. Erase DTC
Scion	Type 2(4D 67/68)	Immobiliser	1. Add a key 2. Erase keys 3. Reset immobiliser 4. Replace engine ECU
Scion	Type 3(4D 72 G)	Immobiliser	1. Add a key 2. Erase keys 3. Replace immobiliser ECU 4. Replace engine ECU
Scion	Type 4(8E H)	Immobiliser	1. Add a key 2. Erase keys 3. Replace immobiliser ECU 4. Replace engine ECU
Scion	Type 5(Avanza)	Immobiliser	1. Add a key
Scion	Type 6	Immobiliser	1. Add master key 2. Add valet key 3. Erase keys
Scion	Type 7(86)	Immobiliser	1. Read Keys Number 2. Programme Key 3. Erase Keys 4. Programme Remote 5. Erase Remotes
Scion	Type 8	Immobiliser	1. Add a key
Scion	Type 1	Smart key system	1. Add a smart key 2. Erase smart keys 3. Reset smart key ECU
Scion	Type 2	Smart key system	1. Program smart keys 2. Program remote 3. Reset immobiliser ECU
Scion	Type 3	Smart key system	1. Add a smart key 2. Erase smart keys 3. Reset smart keys 4. Program smart keys after recharging 5. ID certification box and Sterring lock synchronization 6. Remote control engine starting

Scion	Type 4	Smart key system	1. Add a smart key 2. Erase smart keys 3. Reset smart keys 4. Program smart keys after recharging 5. ID certification box and Sterring lock synchronization 6.Remote control engine starting
-------	--------	------------------	--