

N NEXPEAK K1 Immobiliser Function List v10.10

#	Brand	Model	System	Fuction
1	SWM	X3	Immobiliser	1.Key matching 2. Write VIN code to engine 3. Number of reading keys
2	SWM	X7	Immobiliser	1. Matching the anti-theft device 2. Key removal 3. Read EMS SK code 4. Read immo SK code 5. Number of reading keys
3	SWM	X7	Immobiliser	1. Number of reading keys 2. Key matching 3. Matching with peps 4. Matching electronic steering column (ESCL) 5. Write VIN code to engine 6. Write SK code to engine 7. Read VIN code from engine 8. Read SK code from peps