

N NEXPEAK K1 Key program Function List V10.10

Brand	ECU Type	System	Function
Toyota	Type 1	Remote	1. Program remote 2. Erase remote
Toyota	Type 2	Remote	1. Program remote 2. Erase remote
Toyota	Type 3	Remote	1. Program remote
Toyota	Type 1(4C)	Immobiliser	1. Add a master key 2. Add a vice key 3. Erase keys 4. Erase DTC
Toyota	Type 2(4D 67/68)	Immobiliser	1. Add a key 2. Erase keys 3. Reset immobiliser 4. Replace engine ECU
Toyota	Type 3(4D 72 G)	Immobiliser	1. Add a key 2. Erase keys 3. Replace immobiliser ECU 4. Replace engine ECU
Toyota	Type 4(8E H)	Immobiliser	1. Add a key 2. Erase keys 3. Replace immobiliser ECU 4. Replace engine ECU
Toyota	Type 5(Avanza)	Immobiliser	1. Add a key
Toyota	Type 6	Immobiliser	1. Add master key 2. Add valet key 3. Erase keys
Toyota	Type 7(86)	Immobiliser	1. Read Keys Number 2. Programme Key 3. Erase Keys 4. Programme Remote 5. Erase Remotes
Toyota	Type 8	Immobiliser	1. Add a key
Toyota	Type 1	Smart key system	1. Add a smart key 2. Erase smart keys 3. Reset smart key ECU
Toyota	Type 2	Smart key system	1. Program smart keys 2. Program remote 3. Reset immobiliser ECU
Toyota	Type 3	Smart key system	1. Add a smart key 2. Erase smart keys 3. Reset smart keys 4. Program smart keys after recharging 5. ID certification box and Steering lock synchronization 6. Remote control engine starting

Toyota	Type 4	Smart key system	<ol style="list-style-type: none">1. Add a smart key2. Erase smart keys3. Reset smart keys4. Program smart keys after recharging5. ID certification box and Sterring lock synchronization6. Remote control engine starting
--------	--------	------------------	---