

Note:

√	Functions marked with √ is fully supported and already e√ited in former software version.
Number	Inde√ number of the special function , you can find the name from the special function table.

System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Engine	√	√	√	√	√	√
ABS	√	√	√	√	√	
EPS	√	√	√			